

P815 OWNER'S MANUAL CONTENTS

1. INTRODUCTION	2
2. SAFETY PRECAUTIONS	3
3. LIST OF PARTS	4
4. ASSEMBLE THE PRODUCT	9
STEP 1 Cover Support Plate and the Connector Installation	9
STEP 2 Weight Stack Installation	13
STEP 3 Press Handle Installation	17
STEP 4 Cable Installation	19
STEP 5 Seat Back and Seat Bottom Installation	21
STEP 6 Apply the Weight Stack Sticker	22
STEP 7 Install the Front and Rear Covers	23
STEP 8 Install Plastic Cover	24
STEP 9 Install Cap Nut	25
STEP 10 Secure the Product	26
STEP 11 Level the Product	27
STEP 12 Cable Adjustment	28
STEP 13 Stack Fork Inspections	29
STEP 14 Unit Inspection	30
5. OPERATION INSTRUCTION	31
OPERATION Safety Operating Area	31
OPERATION Exercising Instructions	32
6. MAINTENANCE	34
MAINTENANCE Safety Precautions	34
MAINTENANCE Guide Rod Cleaning and Lubricating	35
MAINTENANCE Schedule	36
MAINTENANCE Task List	37
MAINTENANCE One-Year Maintenance Log	38
7. CONSIGNES DE SÉCURITÉ IMPORTANTES	39
8. APPENDIXES	40
APPENDIXES Exploded Diagram	40

Disclaimer

The information in this user manual is subject to change without prior notice.

Sports Art Industrial Co., Ltd. makes no representation or warranty of any kind, express or implied, regarding the marketability of this manual, the suitability for a special purpose, or any other matters.


SportsArt Industrial Co., Ltd. accepts no responsibility for any errors in this manual, or any damages incurred directly, indirectly, accidentally, or continually from the modification, display, or other use of this manual.

*We reserve the right to revise this manual at any time without notice.

1. INTRODUCTION

Congratulations on the purchase of a high quality SportsArt product, the P815 Dependent Chest Press machine. Constructed of high quality materials and designed for years of reliable performance, this product was made for full commercial use.

Before this product is assembled or operated, we recommend that you familiarize yourself with this manual. Understanding the correct assembly and operation of this product will help ensure that exercisers obtain their fitness goals safely and successfully.

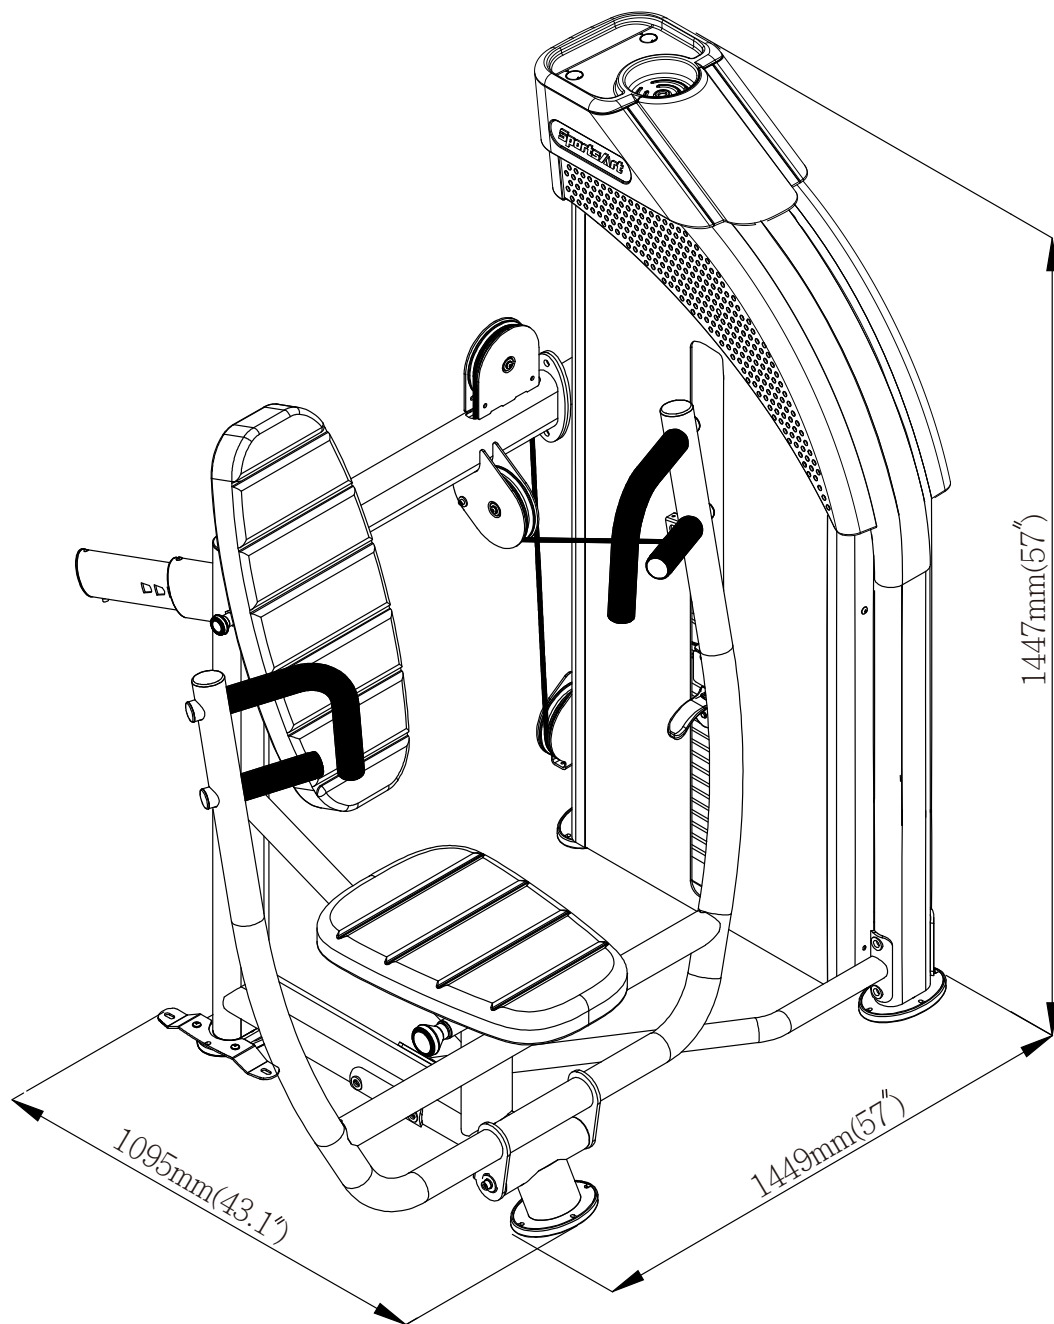

2. SAFETY PRECAUTIONS

This product was designed and built for optimum safety. However certain precautions apply during the use of this product. Please note the following safety precautions:


- Please read the entire manual before assembly and operation. Make sure the product is installed and operated as instructed in this manual.
- Assemble and operate the product on a solid, level surface. Do not use outdoors or near water, including pools and saunas.
- Check the product before every use. Make sure all parts are assembled, and all fasteners are tightened. Do not use the product if it is disassembled in any way.
- Wear proper workout clothing. Do not wear loose clothing. Do not wear shoes with leather soles or high heels. Tie all long hair back. Do not go barefoot on this product.
- Keep away from moving parts. Moving parts may or may not stop immediately if an object becomes caught or impedes normal motion.
- Use this product only for its intended purpose as described in this manual.
- Be careful when mounting and dismounting the unit.
- Never operate this product if it has been damaged in any way. If it is not working properly, or has been dropped or damaged, contact a service technician for repairs.
- Do not use accessories or parts that are not specifically recommended by the manufacturer (SportsArt). Such parts might cause injuries or cause the unit to fail and void the warranty. We are not responsible for any safety issue that arises due to the misuse of accessories or parts. At the same time, we will terminate the warranty terms of this equipment.
- This product is not intended for use by persons (including children 12 or younger) with reduced physical, sensory, or mental capabilities, or by people who are otherwise deficient in product knowledge or experience. If such people use this product, they should be given training and be supervised at all times by someone responsible for their safety.
- Contact your SportsArt representatives on all materials damaged in shipment. (Note: Shipping damages are the responsibility of the carrier.)
- Unpack and verify contents of boxes according to the list of parts to check if any parts are missing.
- Children 12 or younger should be supervised to ensure that they do not play on or near the product.
- The user weight limit for this product is 227 kg, 500 lb.
- Maintenance and repair must be performed by trained service personnel only. Improper maintenance would not only damage the machine, but may also present a danger to the exerciser.
- Over exercise may result in serious injury or death
- Warning that any of the adjustment devices that could interfere with the user's movement should not be left projecting.

CAUTION: If you feel any pain or any abnormal sensations, STOP YOUR WORK-OUT and consult your physician immediately. Work within your recommended exercise level. DO NOT work to exhaustion. Before beginning any exercise program, you should consult with your doctor. It is recommended that you undergo a complete physical examination.


*NOTE: Each machine provides a different resistance ratio of weight stack.

3. LIST OF PARTS


Box A

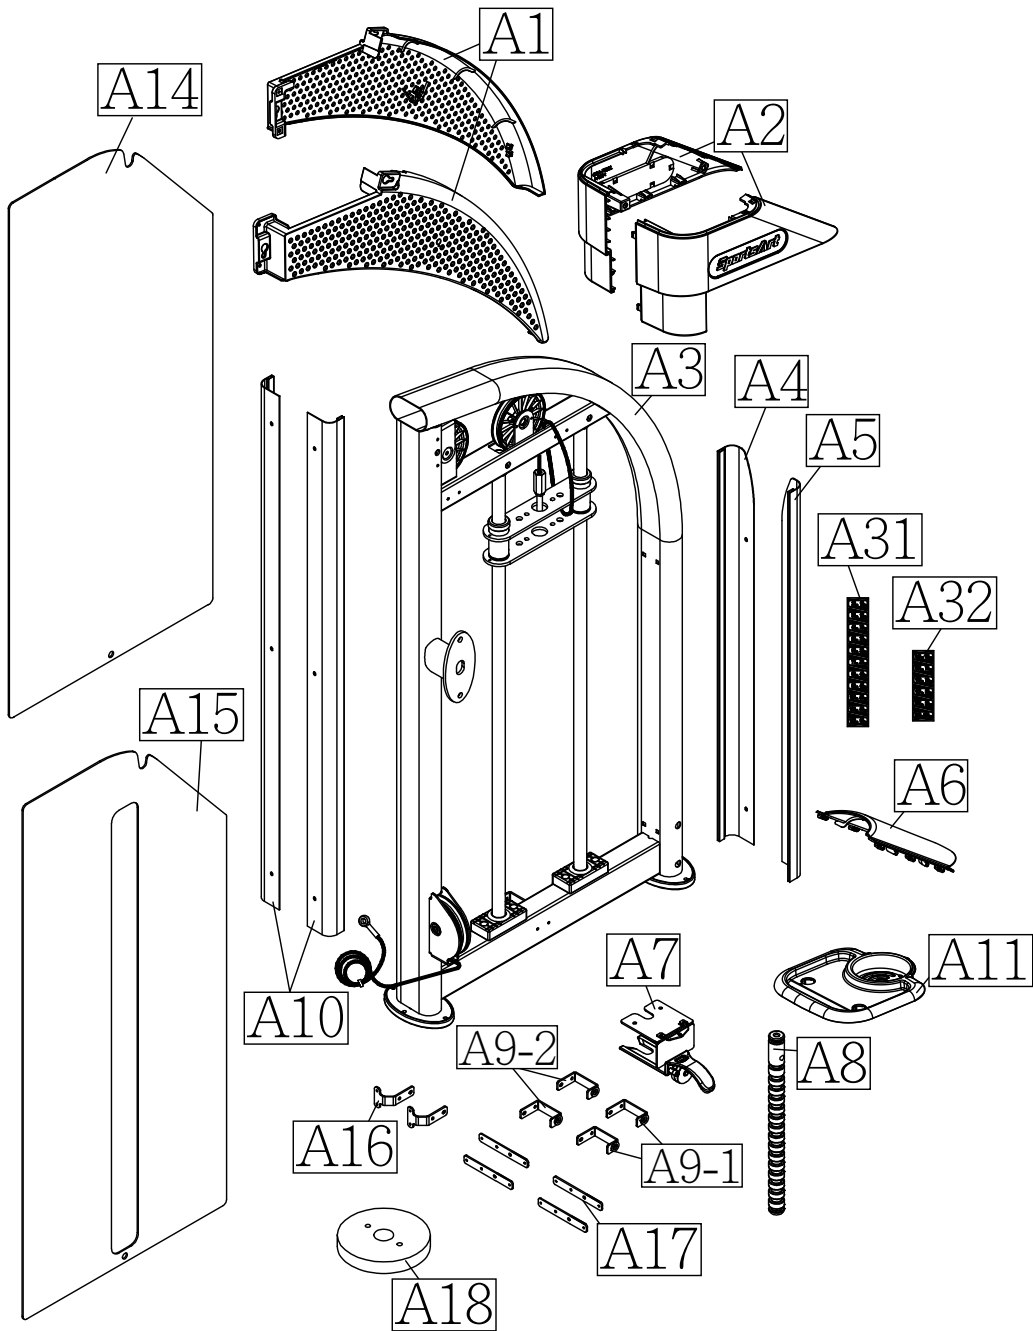

Box B

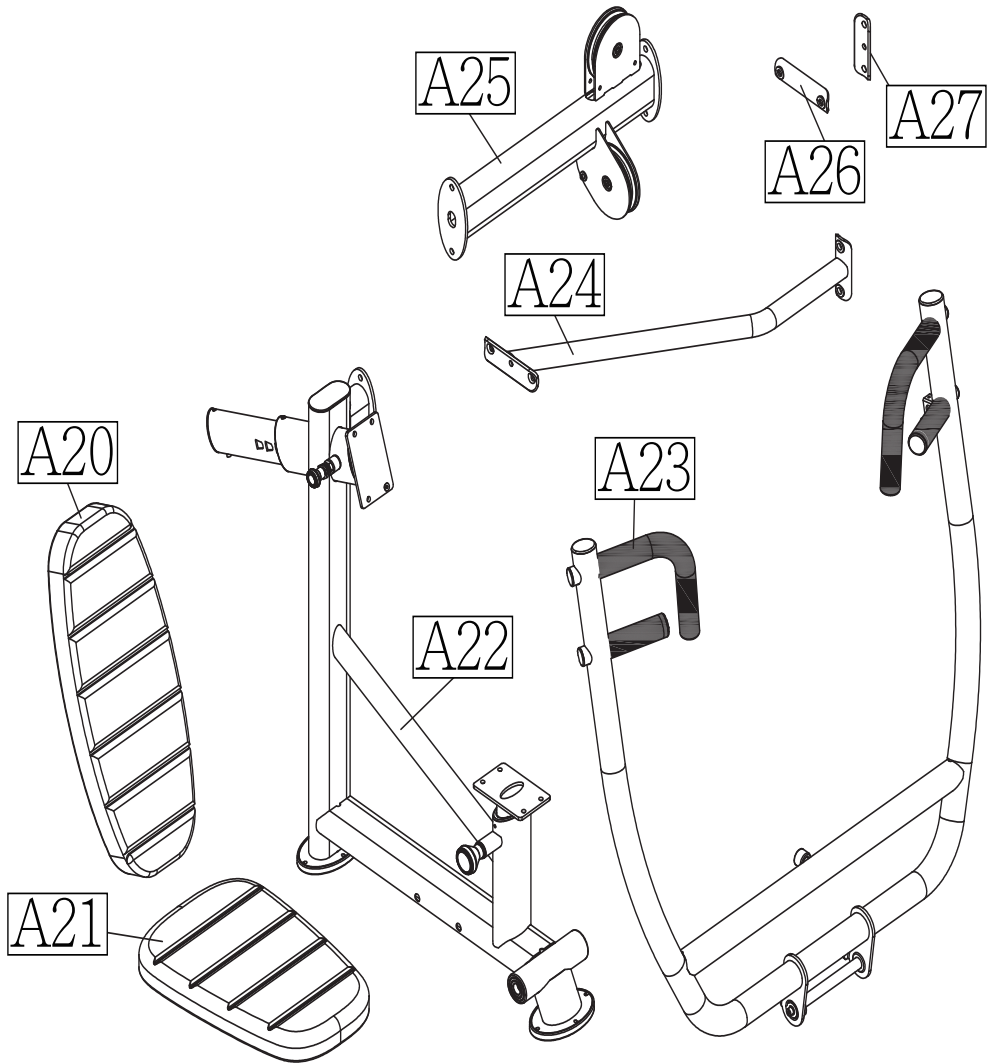

Box C + Box D

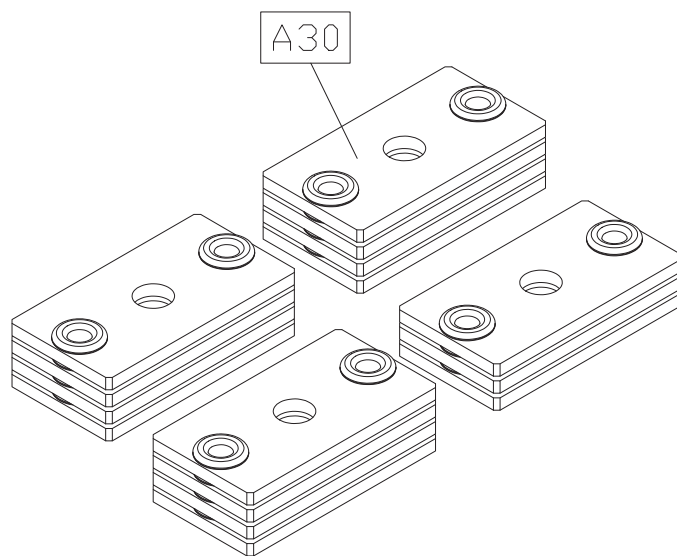

Box A - Main Frame Components					
No.	Name	Qty.	No.	Name	Qty.
A1	Left/right perforated boards	2	A10	Cover support plate A	2
A2	Left/right side cover	2	A11	Top cover	1
A3	Main frame	1	A12	Anchor bracket	2
A4	Cover support plate B-2	1	A14	Rear cover	1
A5	Cover support plate B-1	1	A15	Front cover	1
A6	Front cover A	1	A16	Bracket	2
A7	Stack fork	1	A17	Bracket	4
A8	Weight stack rod	1	A18	Round weight plate	1
A9-1	Anchor bracket of shroud (square hole)	2	A19	Floor fixing bracket	1
A9-2	Anchor bracket of shroud (tapped hole)	2	A20	U bracket	1
A31	Weight plate sticker (10kg~60kg/22lb~132lb)	1	A32	Weight plate sticker (65kg~100kg/143lb~220lb)	1

Box B - User Frame Components					
No.	Name	Qty.	No.	Name	Qty.
A20	Seat back	1	A24	Connector B	1
A21	Seat bottom	1	A25	Connector A	1
A22	Seat frame	1	A26	Ø50 Connecting board	1
A23	Press handle	1	A27	Ø50 Connecting board A	1

Box C + Box D - Weight Plates Components					
No.	Name	Qty.	No.	Name	Qty.
A30	5kg/11lb weight plate	15			


Components in the Hardware Kit				
No.	Name	Qty.	Specification	Notes
10	Screw socket	1 batch	SGN-07	
11	Mushroom top inner hex screw	12	M6*P1.0*L12	
12	Mushroom top Phillips screw	8	M5*L15	
13	Mushroom top Phillips screw	10	M5*0.8*L8	
14	Round head Phillips screw	6	M6*P1.0*L12	
16	Round head inner hex screw	2	M6*P1.0*20	
	Bushing	2	D21.5*10.5	
17	Hex head screw	4	M10*P1.5*L130	
	Spring washer	4	M10	
	Washer	8	D16*d10.2*t1.0	
	Nylon hex lock nut	4	M10	
18	Hex head screw	4	M10*P1.5*L30	
	Spring washer	4	M10	
	Washer	8	D16*d10.2*t1.0	
	Nylon hex lock nut	4	M10	
19	Front cover support plate	1		
21	Phillips pan head sheet metal screw	6	M4*L12	
22	Phillips Umbrella head sheet metal screws	2	M4*L14	
23	Round screw cap	2		
	L-shaped Allen wrench	2	(M4)	
	L-shaped Allen wrench	1	(M5)	
	L-shaped Allen wrench	1	(M6)	
	Open end wrench	2	(13*17)	
	Open end wrench	1	(8*10)	
	Phillips-head screw driver	1		
59	Fastener	1 batch		
	Cap nut	1 batch		

Components on the Product			
No.	Name	Specification	Notes
30	Axle	Hex head ØD10*L23 M6	
	Washer	D16*d10.2*t1.0	
	Flat washer	D16*d6.3*t2	
	Nylon hex lock nut	M6	
31	Round head inner hex screw	M8*P1.25*L20	
	Spring washer	M8	
	Flat washer	D26*d8.5*t2	
	Axle E	D20*L197	
32	Mushroom top inner hex screw	M6*P1.0*L12	
	Spring washer	M6	
	Flat washer	D20*d6.3*t1.5	
	Axle	D15*L26	
	Pulley	D126*20	
33	Upper stack carriage set		
34	Hex head screw	M8*P1.25*L65	
	Flat washer	D17*d8.3*t2	
	PU tube	D12*d8*L51	
	Nylon hex lock nut	M8	
35	Guide rod		
36	Round head inner hex screw	M6*P1.0*L35	
	Spring washer	M6*t1.5	
	Flat washer	D20*d6.3*t1.5	
37	Round head inner hex screw	M5*P0.8*L10	
	Washer	D16.5*d5.2*t2.0	
	Axle C	D8*L31.2	
38	Mushroom top inner hex screw	M8*P1.25*L25	
	Spring washer	M8	
39	Round head inner hex screw	M8*P1.25*L12	
	Flat washer	D17*d8.3*t2	
40	Mushroom top Phillips screw	M5*0.8*L15	
	Flat washer	D13*d6*t1.0	
46	Reinforcement plate		
	Anchor bracket		
	Umbrella hex screw	M6*P1.0*L20	
	Plastic cover		
47	Umbrella hex screw	M6*P1.0*L12	

4. ASSEMBLE THE PRODUCT


Follow instructions below to assemble this product. Note that in this manual the words “left” and “right” are used to refer to the product and its parts. As such, these designations correspond to the “left” and “right” sides of a person in position to exercise on this product. Also, for brevity, the word “screws” or “nuts” is used where washers and other hardware may be involved.

STEP 1 Cover Support Plate and Connector Installation

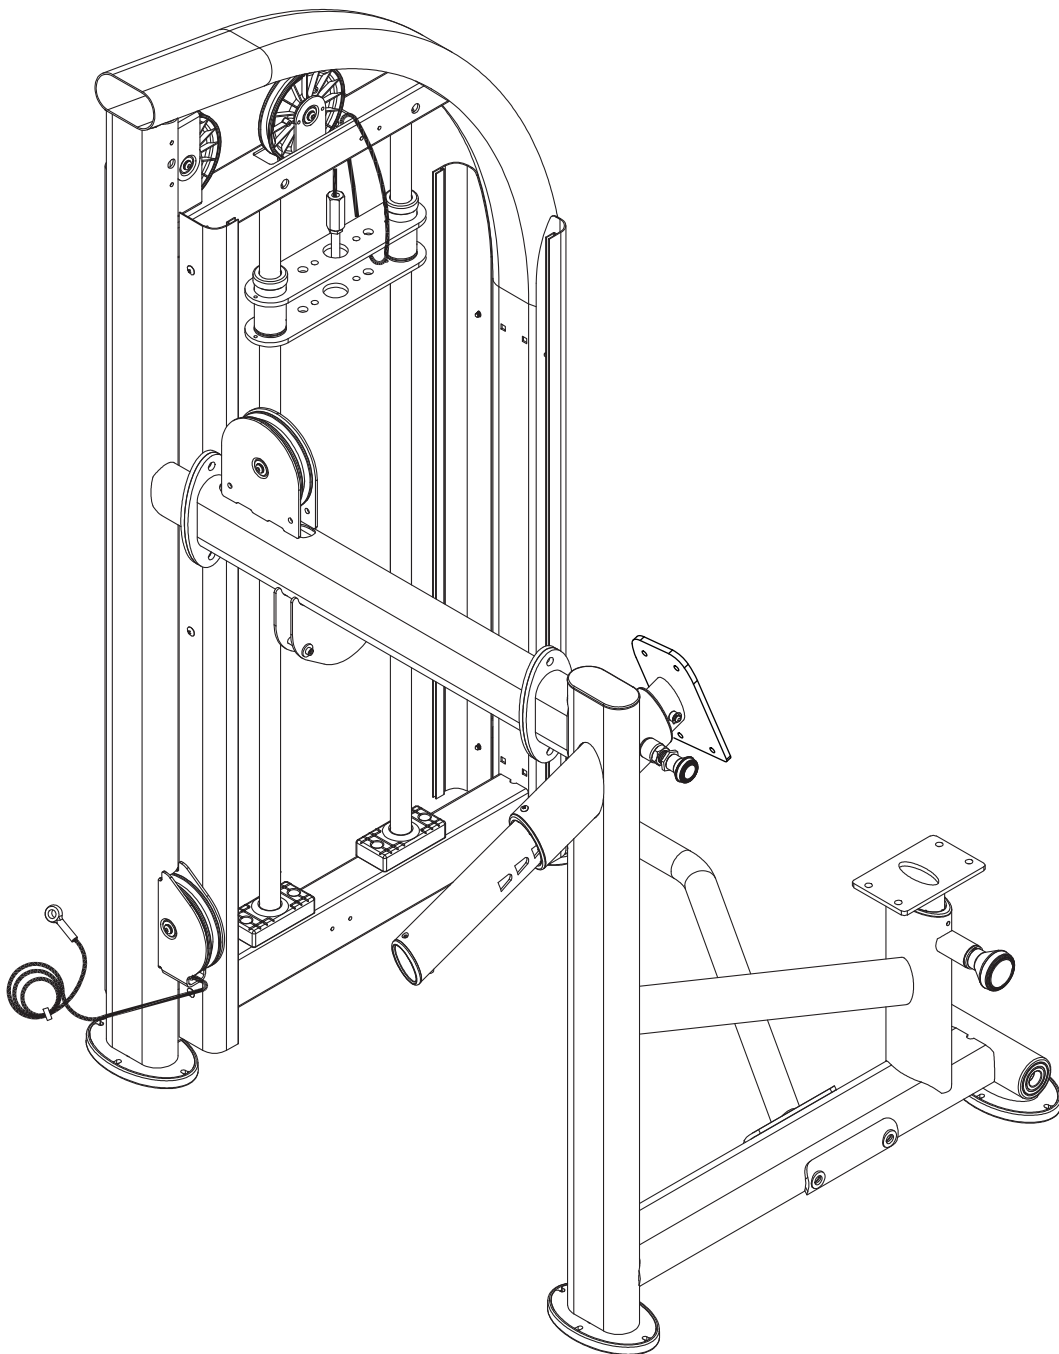

STEP 1 Cover Support Plate & Connector Installation (CONT.)


- (a) Insert the screw sockets (10) into place in the main frame (A3) as shown, and then use screws (11) (12) to secure the brackets (A16) (A17) in place. (Note: The bracket (A16) must be secured to the top of main frame as shown.)

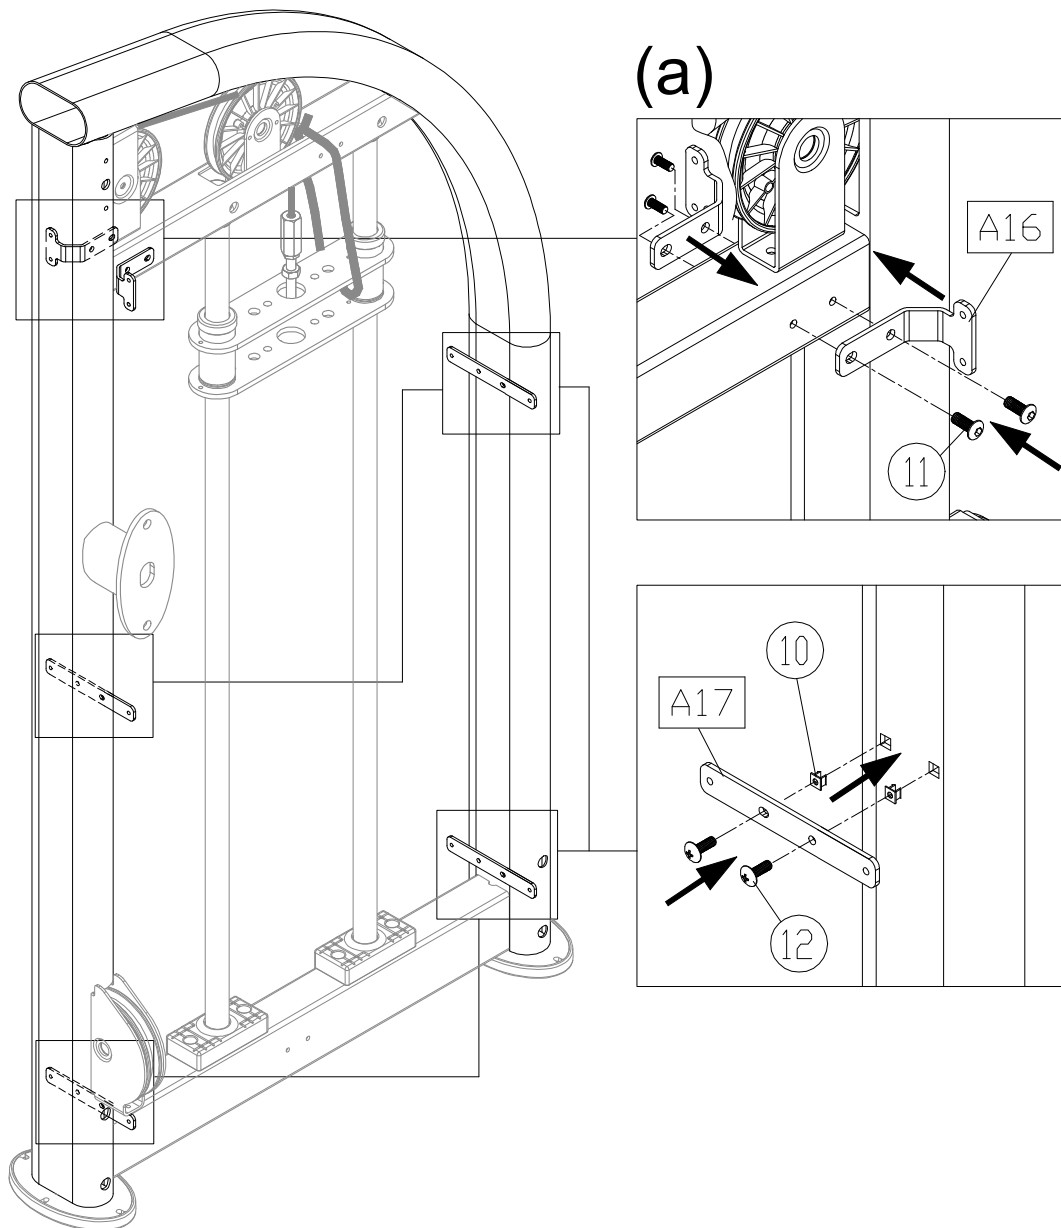

STEP 1 Cover Support Plate & Connector Installation (CONT.)



(b) Secure the plate slots (A10) to the straight frame of the weight stack tower (A3) with the screws (13) and then cover the cap nuts (60). The plate slots (A4, A5) are secured to the left and right side of the curved frame, respectively.

(Note: The plate slots have to be secured outside of the anchor brackets (A16, A17).)

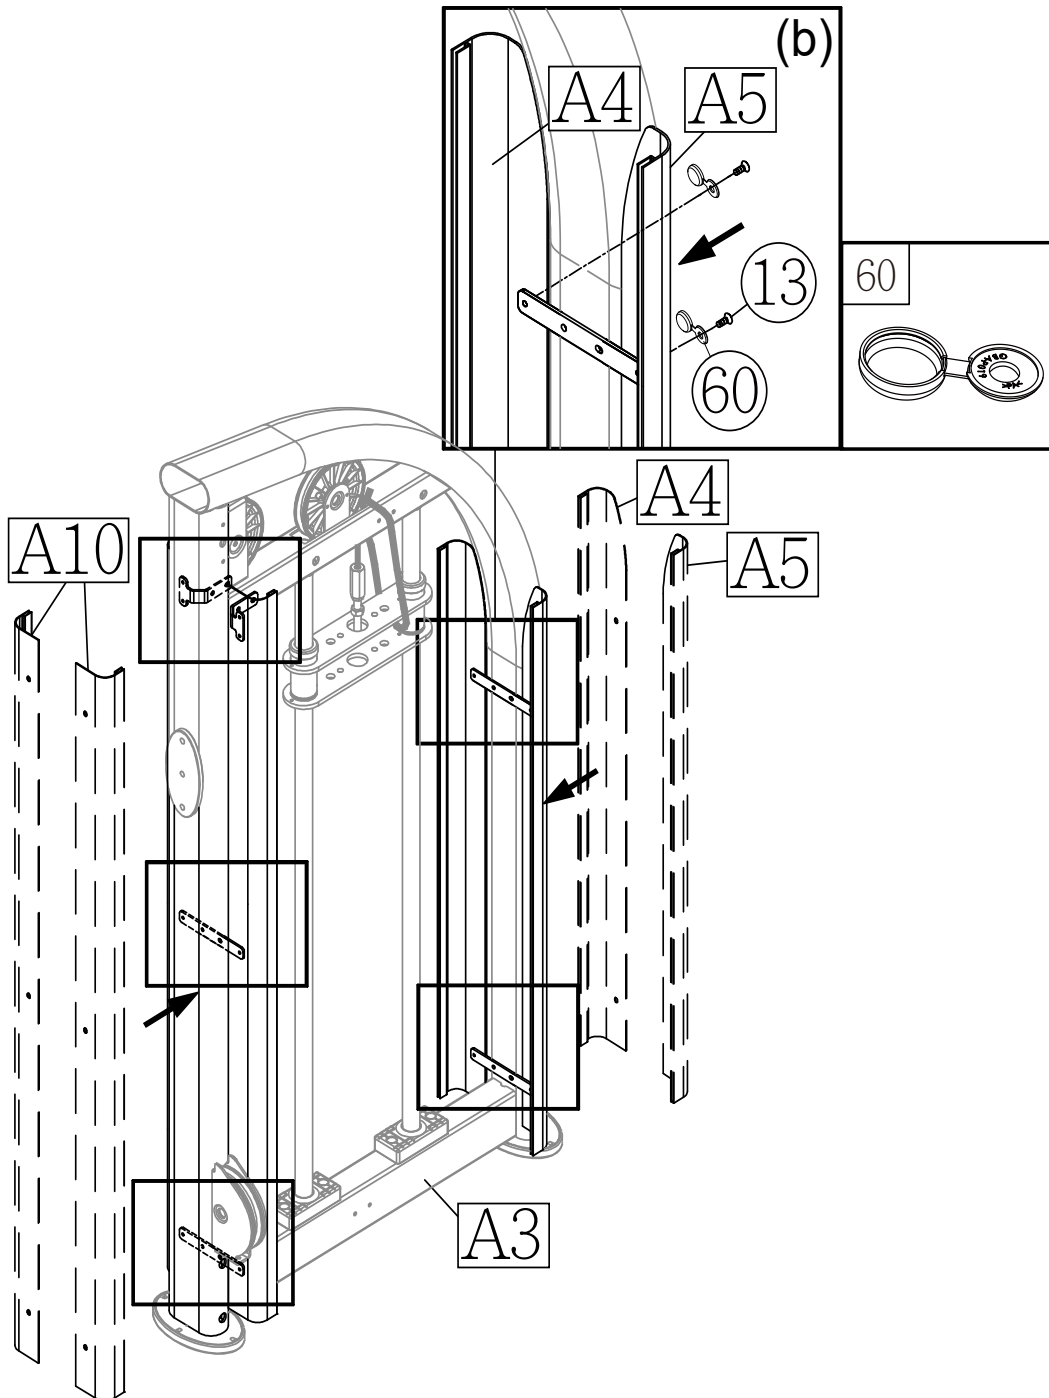


STEP 1 Cover Support Plate & Connector Installation (CONT.)

- (c) Use screws (17) to secure the connecting board A (A27) to the connector B (A24) and the main frame (A3) in area A. Use screws (17) to secure the connecting board (A26) to the connector B (A24) and the seat frame (A22) in area B.
- (d) Use screws (18) to secure the connector A (A25), the main frame (A3) and the seat frame (A22) as shown.

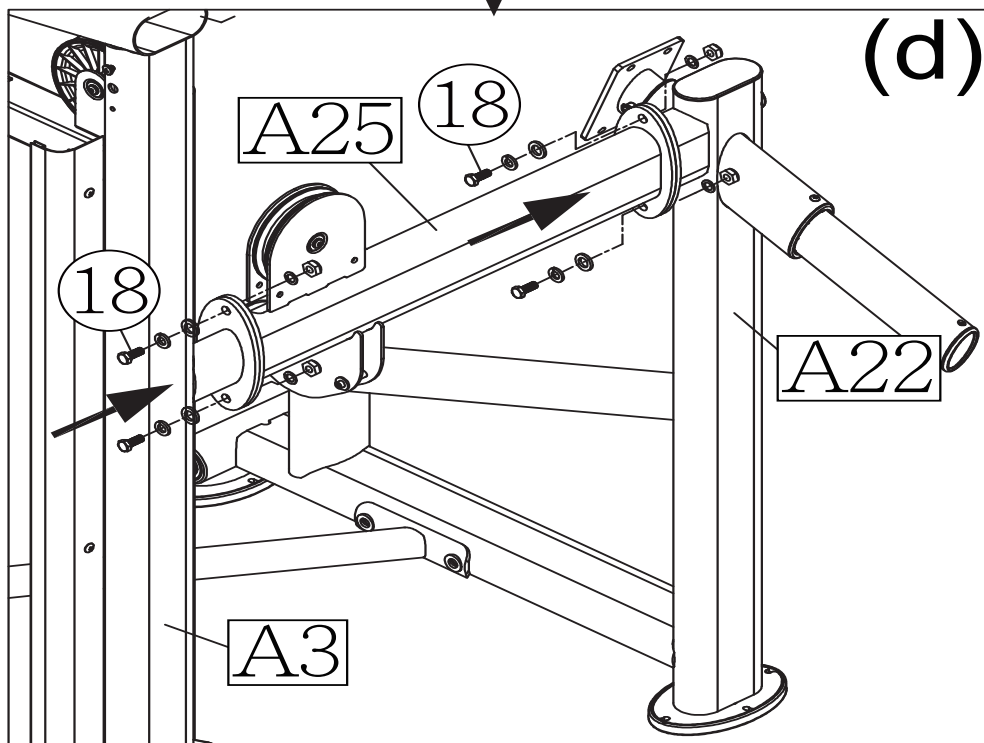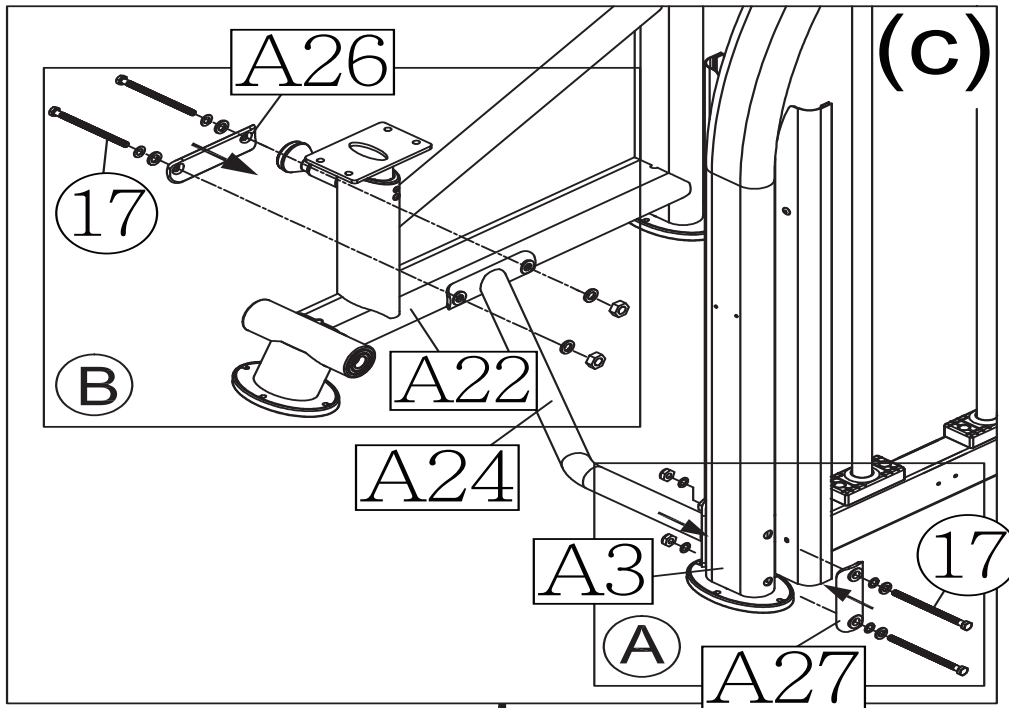


STEP 2 Weight Stack Installation

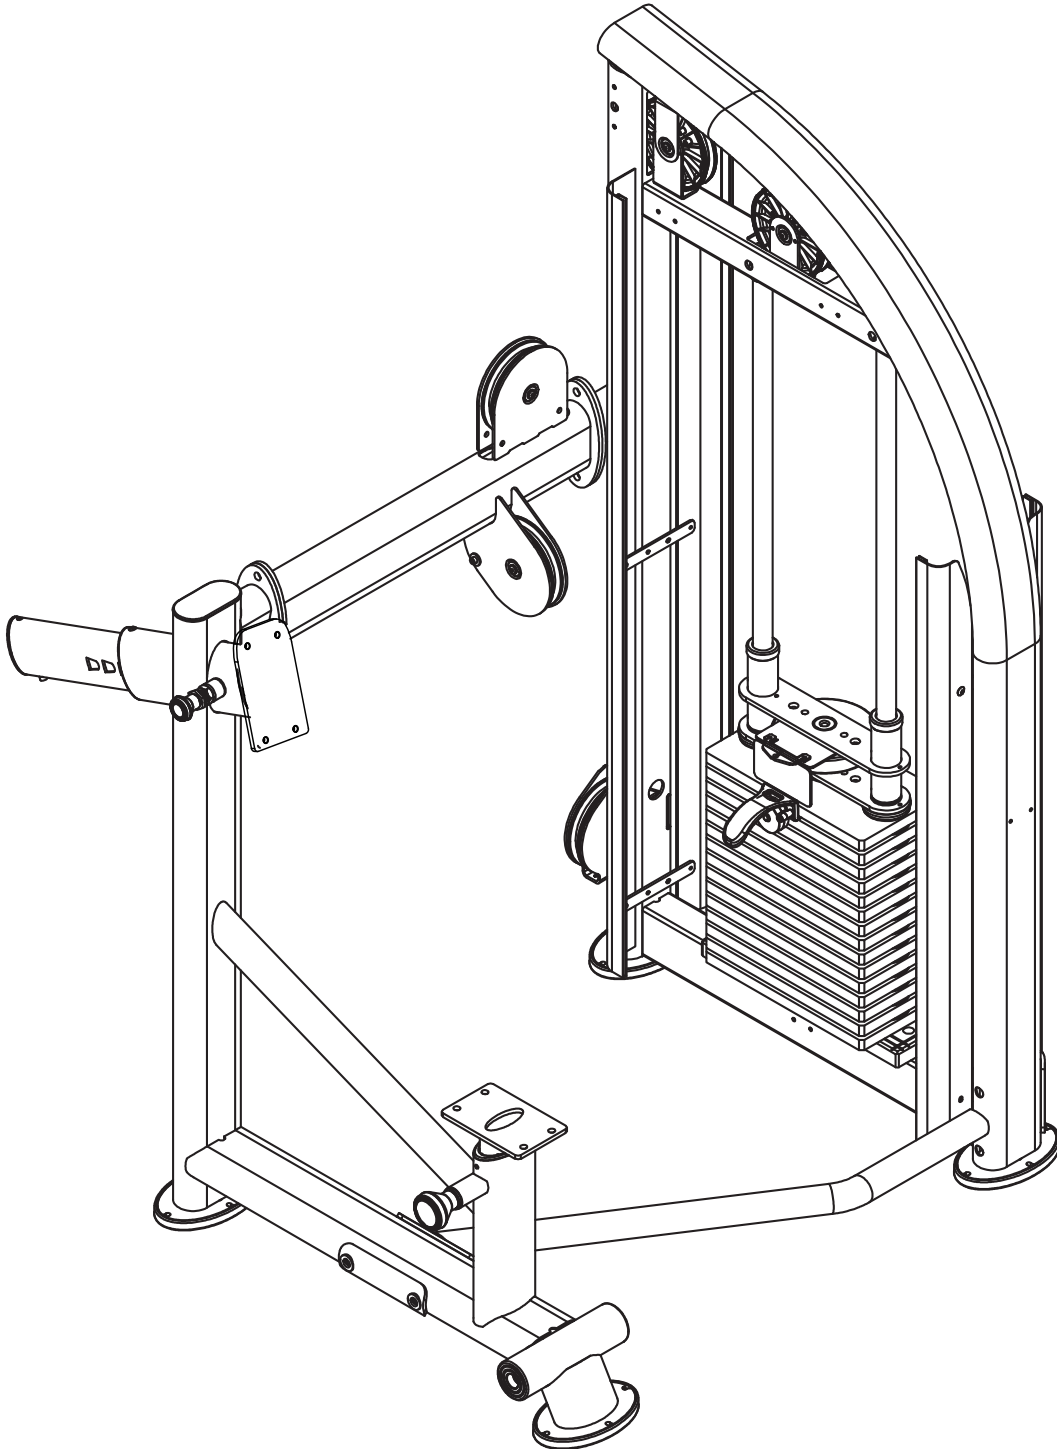

STEP 2 Weight Stack Installation (CONT.)

- (a) Hold the upper stack carriage set (33), and then cut the zip tie. Gently lower the upper stack carriage set (33) into place as shown.
- (b) Remove screws (34). Set the guide rod (35) downward into place as shown.
- (c) Tilt the guide rod (35) backward and then lift the upper stack carriage set (33) off the guide rods as shown. Carefully set the upper stack carriage set (33) aside.

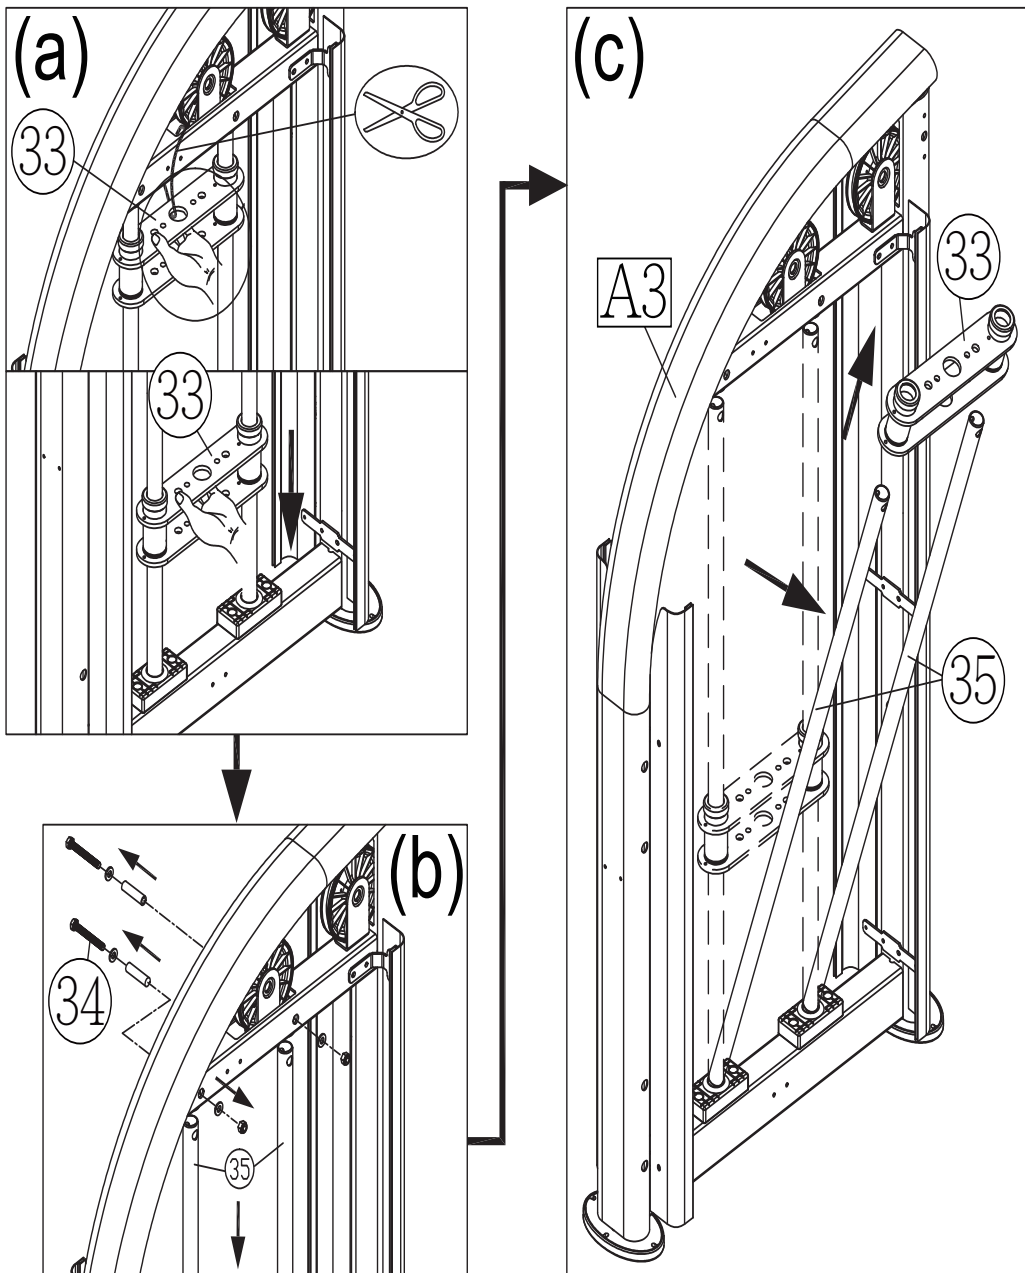

STEP 2 Weight Stack Installation (Continued)

- (d) Insert the weight stack rod (A8) into the central mounting position of the upper stack carriage set (33) and the round weight plate (A18) and then use screws (36) to secure the stack fork (A7) into place of the round weight plate (A18) as shown.



(Note: Remove the stack fork first before assembling and make sure the round weight plate (A18) is under the stack fork (A7).)

- (e) Insert and lower the (5 kg/11lb) weight plates (A30) into place on the guide rods (35) one at a time. Once complete, slide down the upper stack carriage set (33) on top of the weight stack.

(Note: The convex side of weight plate should face up and the stack fork (A7) points toward the front.)


* If there is an optional (7.5kg/16.5lb) weight plate installed, insert the optional weight plates first before the (5 kg/11lb) weight plates (A30).

* Install the cap nuts on the screws.

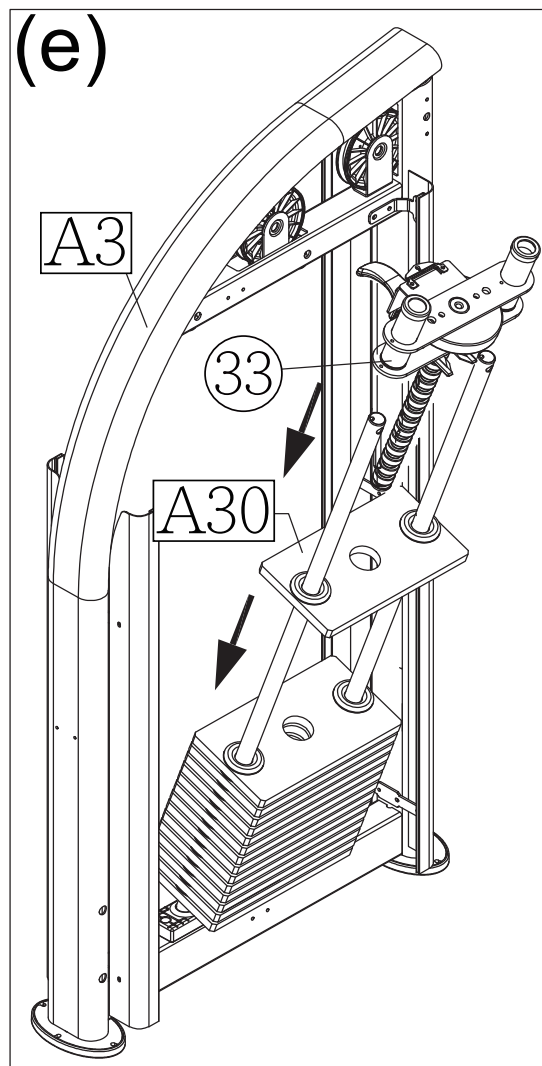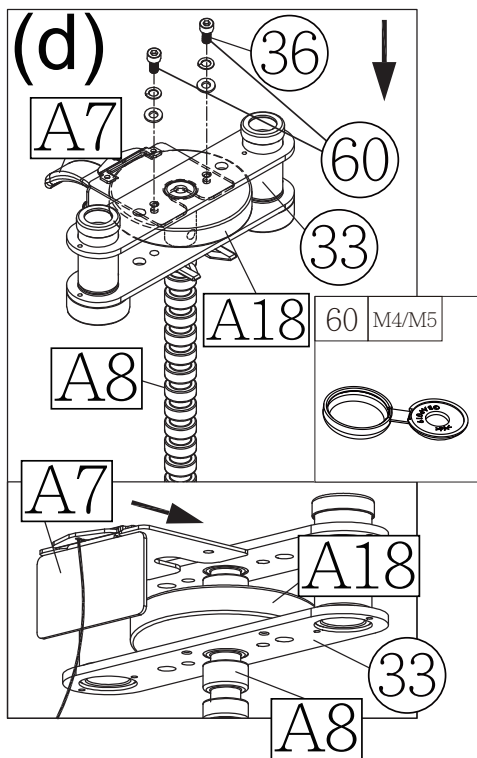


STEP 2 Weight Stack Installation (CONT.)

- (f) Tilt the guide rods (35) back into place and then lift them up to their mounting position, and then secure the assembly with screws (34).


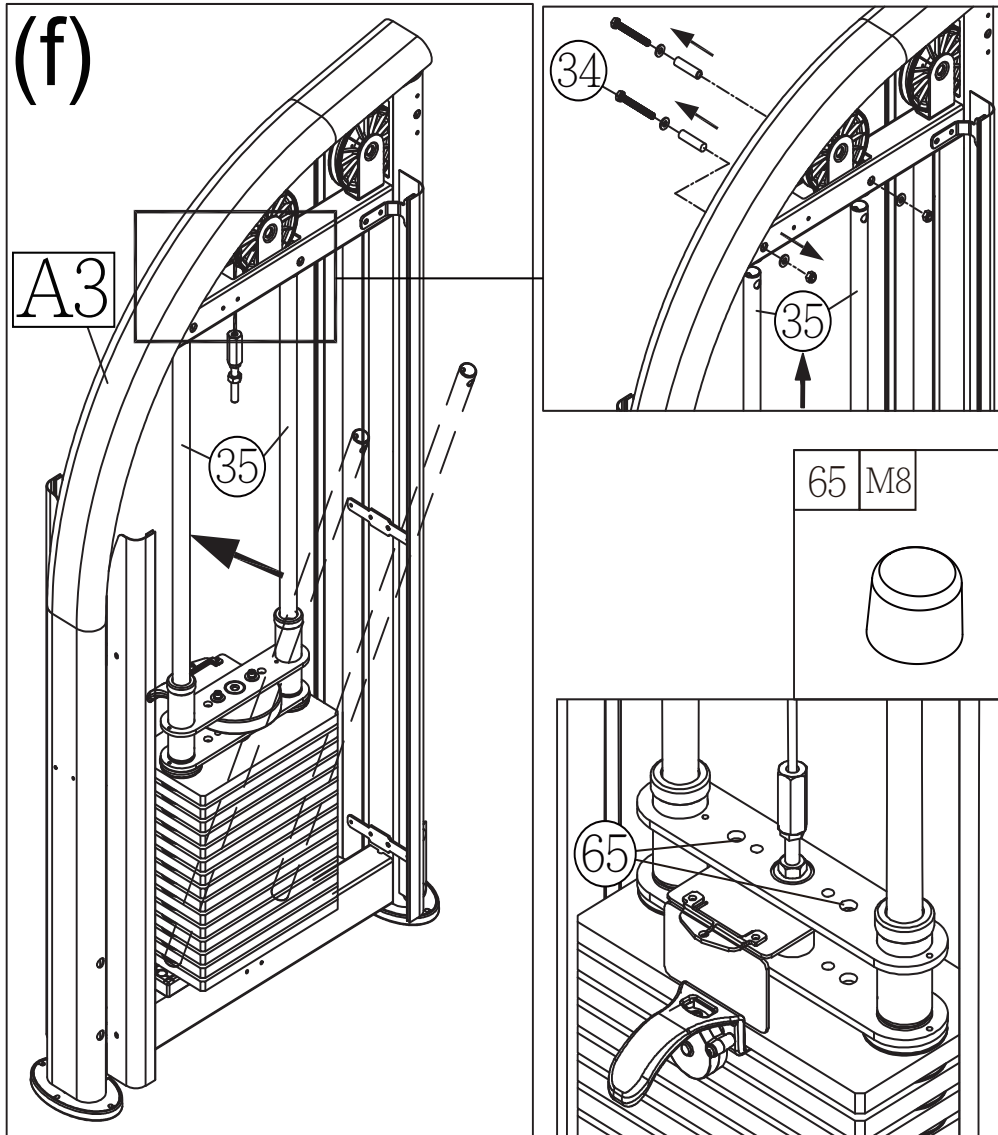


STEP 3 Press handle Installation

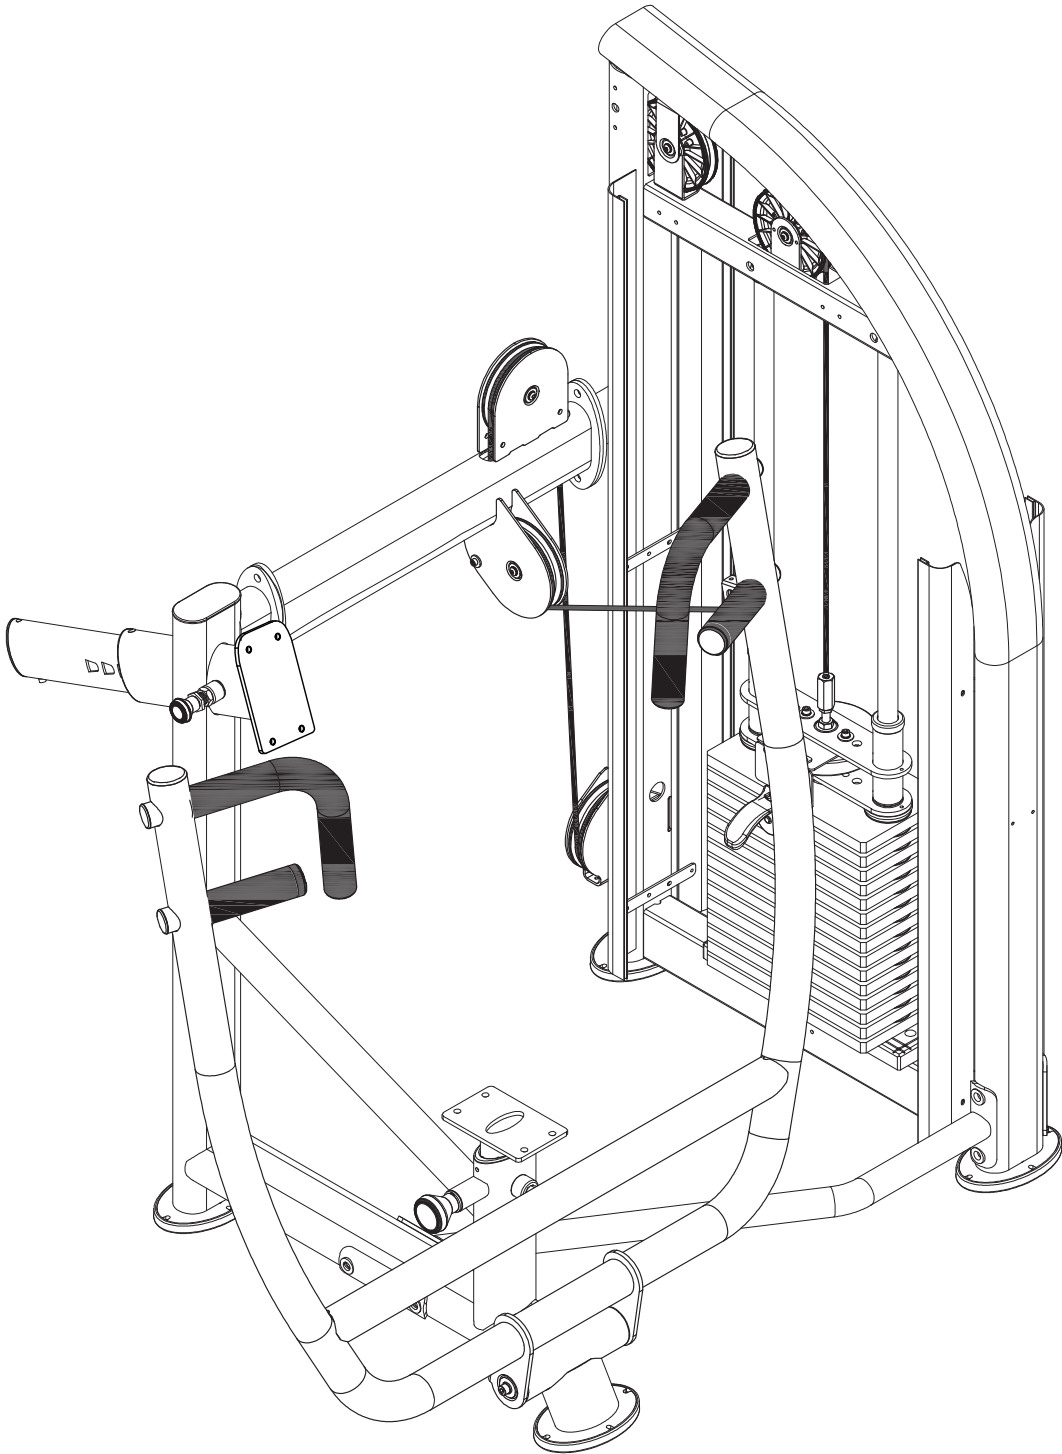


STEP 3 Press handle Installation (CONT.)

- (a) Loosen and remove screws (30) (31) from the press handle (A23) as shown.
- (b) Place the press handle (A23) on the top of the seat frame (A22) and align holes and then secure with screws (31) as shown.
(Note: The stopper's direction of the press handle (A23) should face inside.)

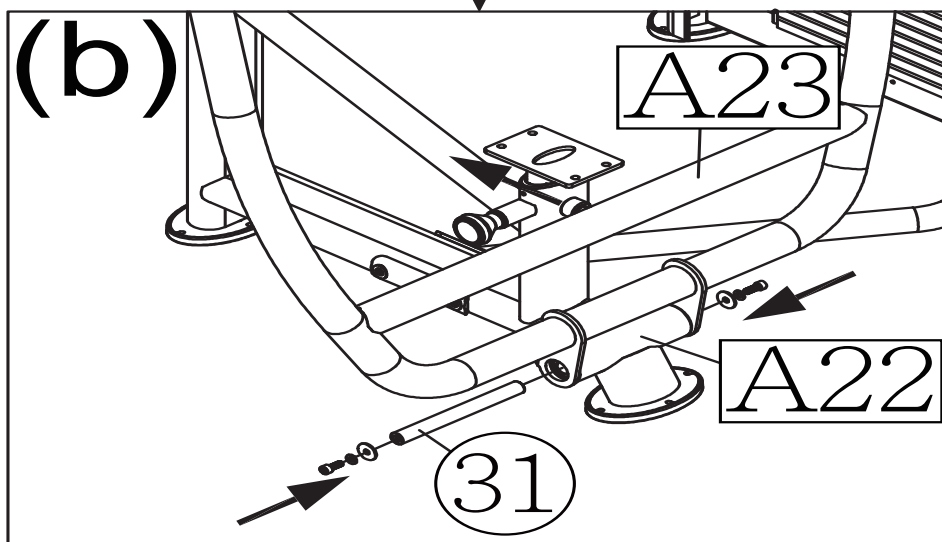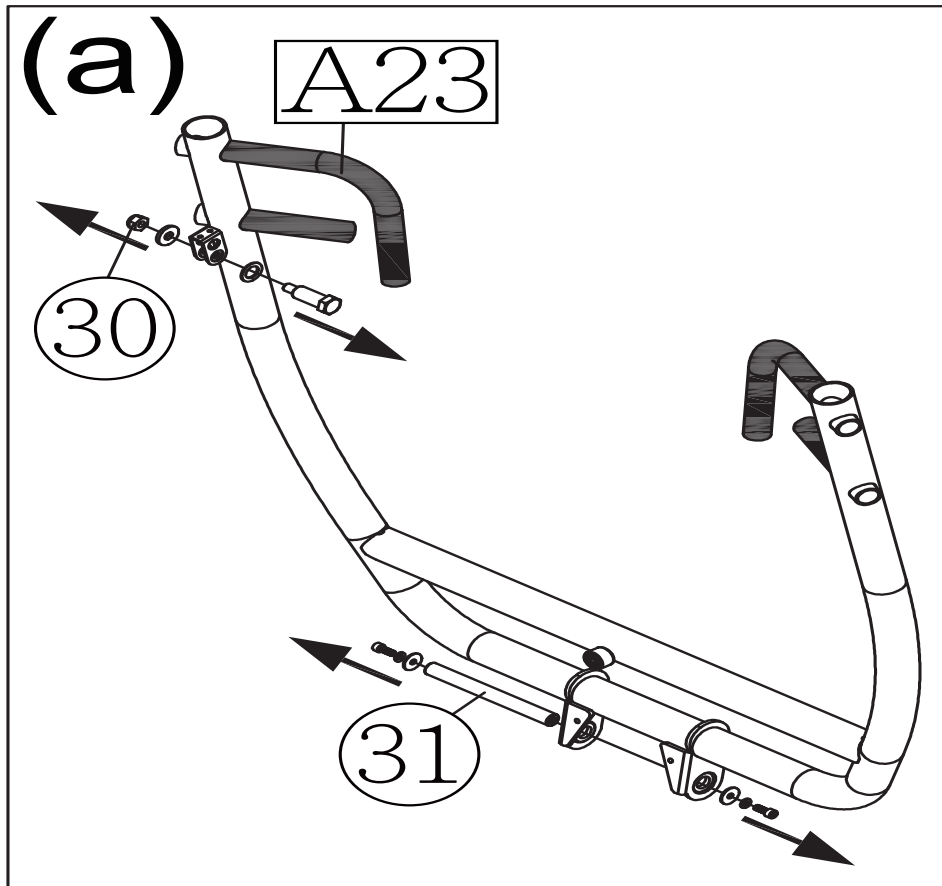


STEP 4 Cable Installation

- (a) Insert the cable nut as indicated by the arrows onto the weight stack rod (A8) at least 15-20mm deep as shown.
- (b) Loosen and remove screws (32) and the pulley from the connector A (A25) in area A and screws (32) (37) from the connector A (A25) in area B as shown.

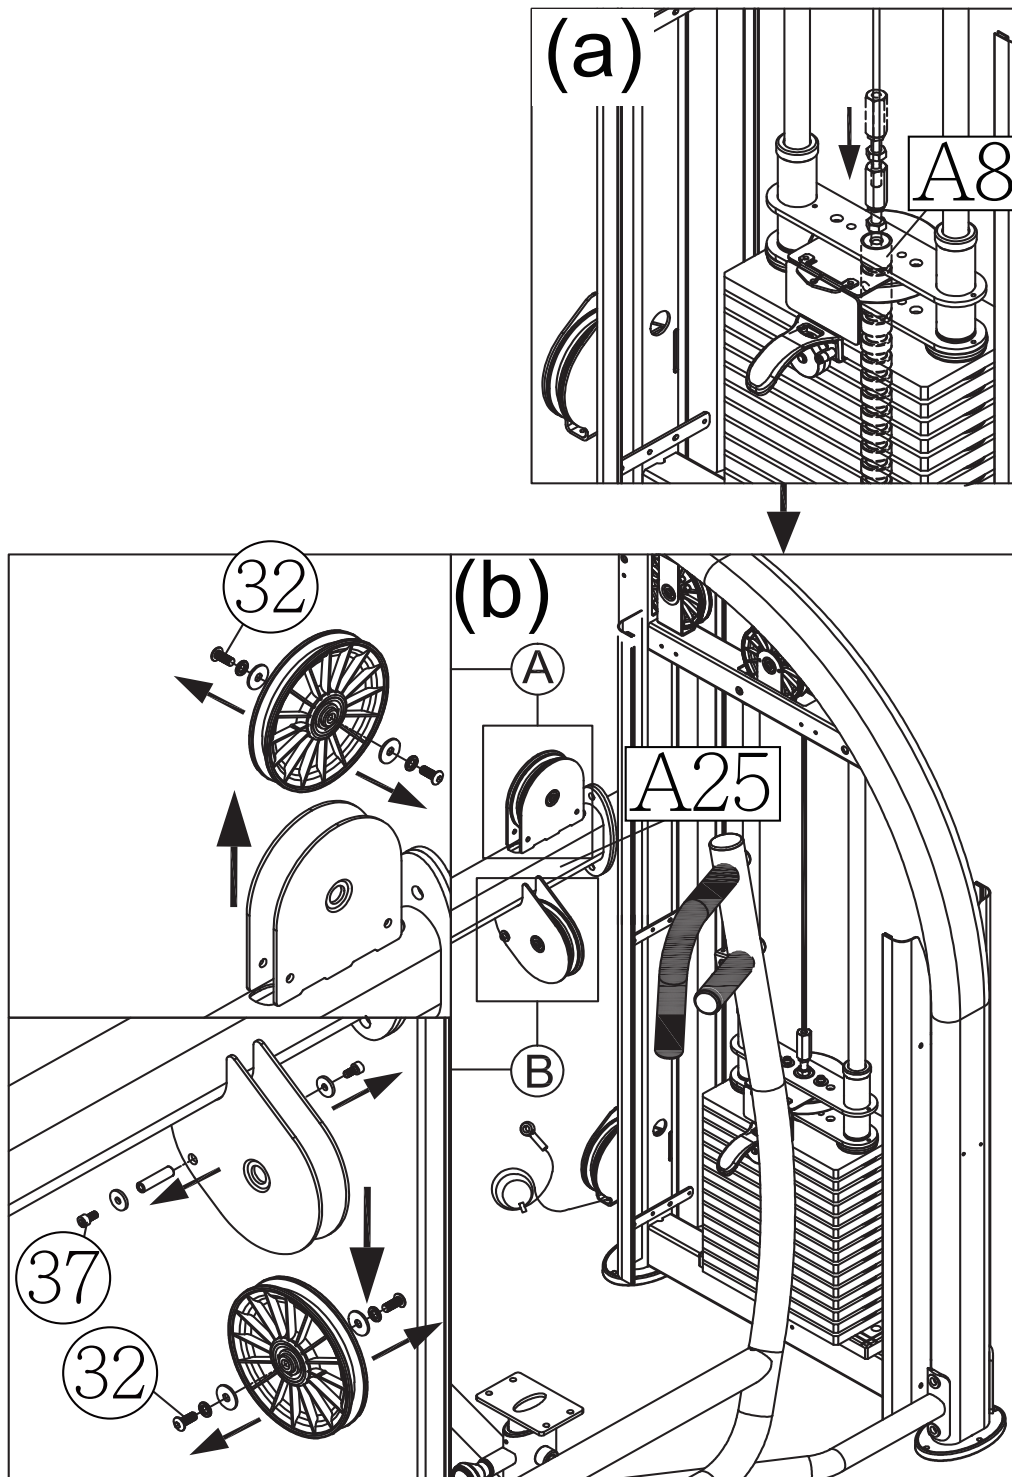


STEP 4 Cable Installation (CONT.)

- (c) Loosen the cable and thread the cable as indicated by the arrows through the top of the pulley of the connector A (A25) in area A and secure the pulley back into to place with screws (32) and then thread the cable under the pulley of the connector A (A25) and secure screws (32) (37) in area B. Finally, secure the cable with screws (30) as shown.

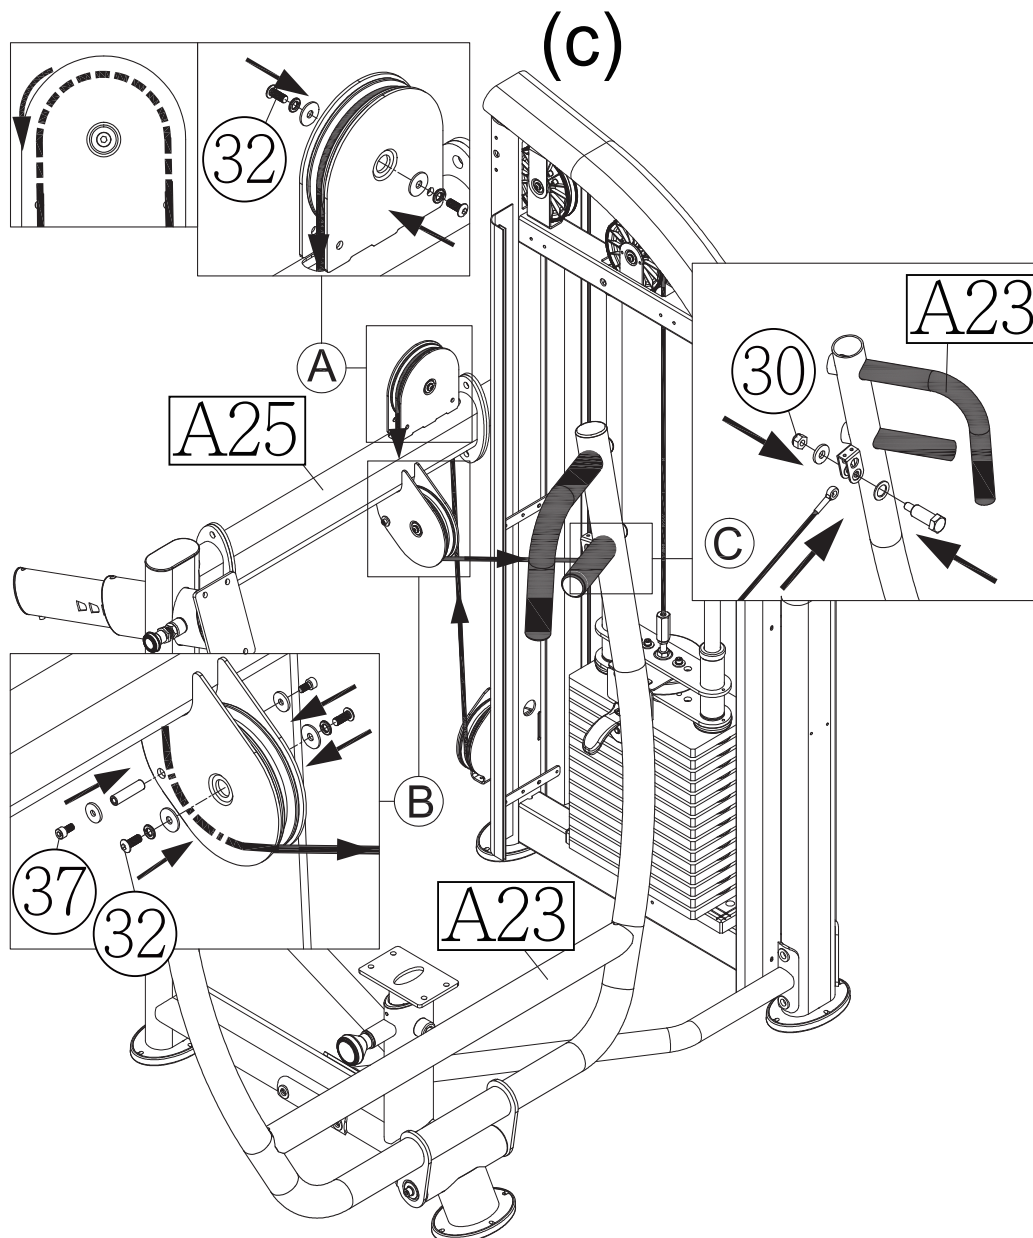

STEP 5 Seat Back and Seat Bottom Installation

- Loosen and remove screws (38) (39) from the seat back (A20), the seat bottom (A21) and the seat frame (A22) as shown.
- Use screws (39) to secure the seat back plate and the seat bottom plate to the seat frame (A22) as shown.
- Use screws (38) to secure the seat back (A20) and the seat bottom (A21) to the plate of the seat frame (A22) as shown.

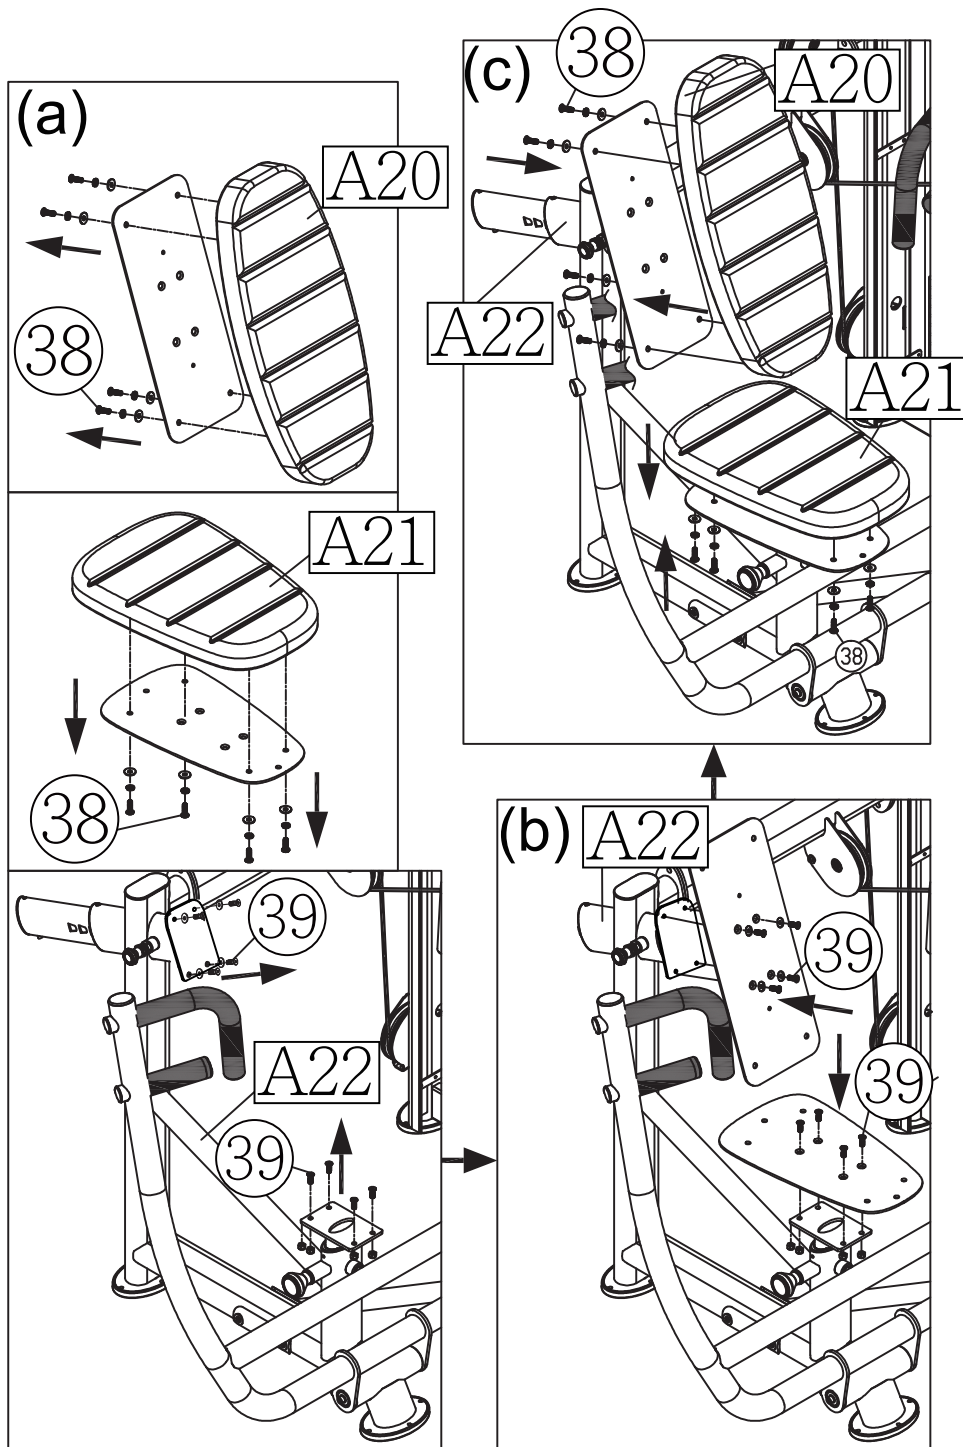


STEP 6 Apply the Weight Stack Sticker

Note: Before applying weight plate stickers, please wipe the area clean, and clean your hands before proceeding to the next step.

- (a) Align and tape the cardboard to the upper left corner of the weight plate (A30).
- (b) Peel off the top half of the weight sticker (A31) backing. Leave the clear outside margin in place on the sticker. Don't peel off the margin.
- (c) Press the numbered part of the sticker in place while you peel off the clear margin of the sticker.
- (d) Peel off the clear margin of the sticker.
- (e) Follow steps (b) ~ (d) to apply the weight plate sticker (A32) to the lower part of the weight stack. When the stickers are in place, peel off the cardboard. Press the sticker in place to ensure good contact on the weight plate.


*If there are additional optional weight plates, use the optional weight plate stickers.

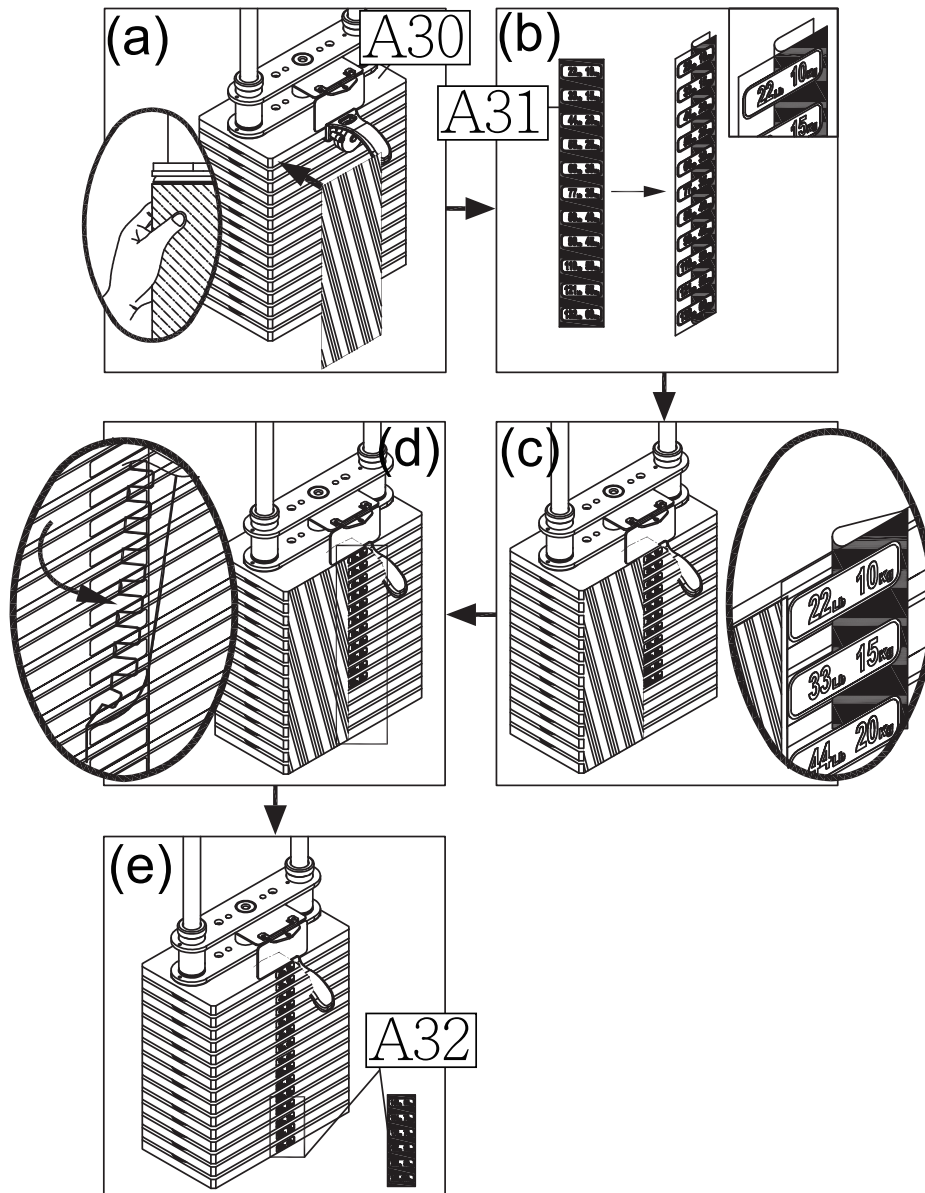

STEP 7 Install the front and rear covers






(a) Install the square snap bushings (10) to the anchor brackets of shroud (square hole) (A9-1). Secure the anchor brackets of shroud (square hole) (A9-1) with the square snap bushings (10) to the front and back of the upper crossmember assembly of weight stack tower (A3) with screws (11). Secure the anchor brackets of shroud (tapped hole) (A9-2) to the front and back of the lower crossmember assembly of weight stack tower (A3) with screws (11). Remove the screw (46).

(b) Insert the front and rear shrouds (A14, A15) along the plate slot from the top into the main frame. (Note: To avoid damage to the shrouds, place the weight selector (A7) on the top weight (33) before inserting the shrouds.) Secure the lower shroud with the screw (46).

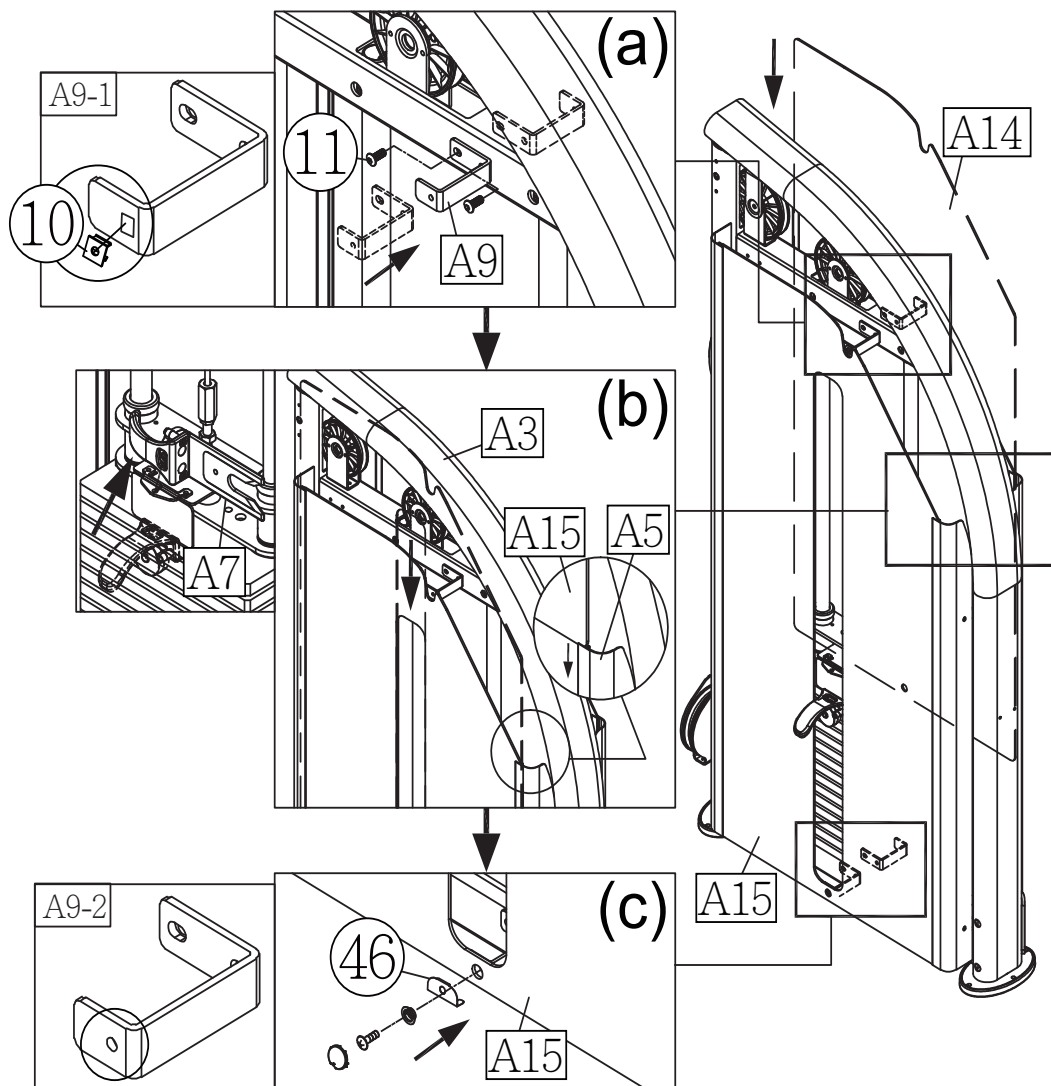

STEP 8 Install plastic cover


- (a) Install the square snap bushing (10) and fastener (59) to the anchor bracket (A12) and remove the screws (47) on the main frame. Secure the anchor bracket (A12) to the main frame with the screws (47).
- (b) Secure the left/right perforated boards (A1) to the main frame with the screws (21).
- (c) Assemble the right side cover (A2) and the front cover A (A6) together before installing to the main frame.
- (d) Assemble the left side cover (A2) and the front cover A (A6) together and then embed the top cover (A11), which is the water bottle holder, at an oblique angle.
- (e) Secure the top cover (A11) to the main frame with the screws (22) and then install the round screw caps (23).

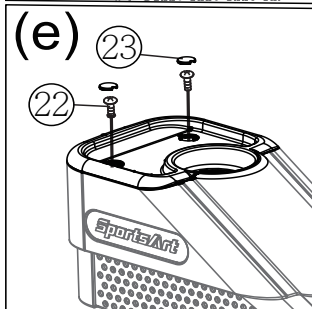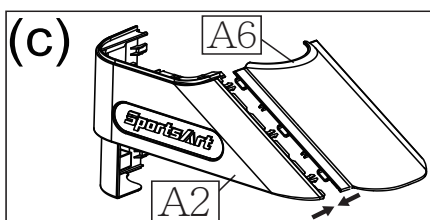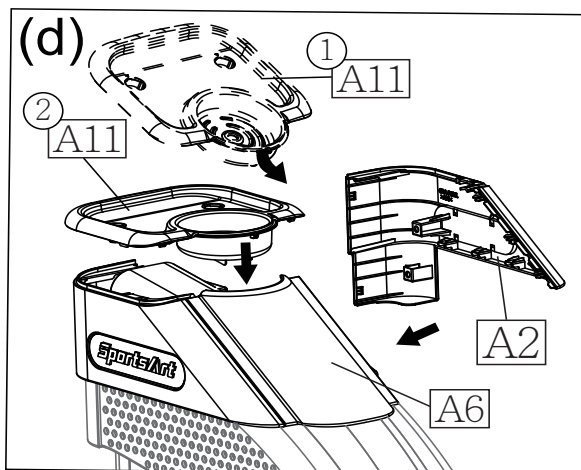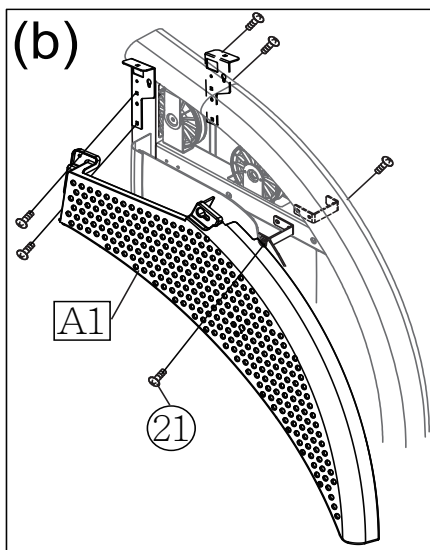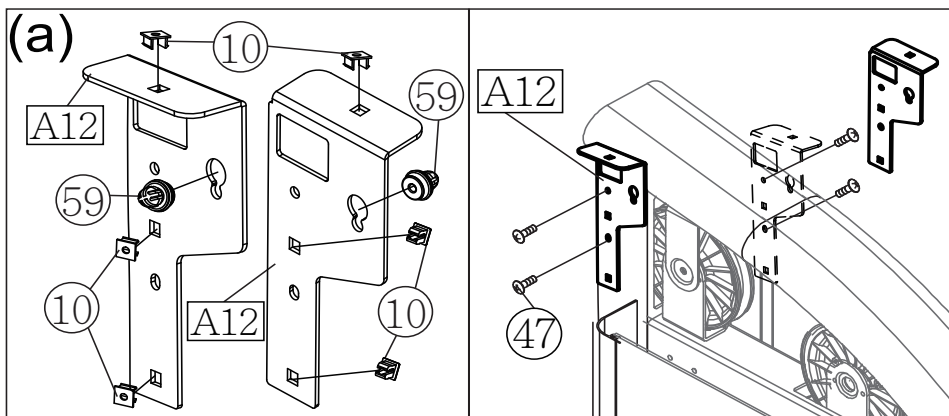

STEP 9 Install cap

Install the cap nuts to the corresponding positions according to the following numbers.



*The cap nuts in the following table are for reference only. The provided cap nuts will depend upon the needs of the different devices.

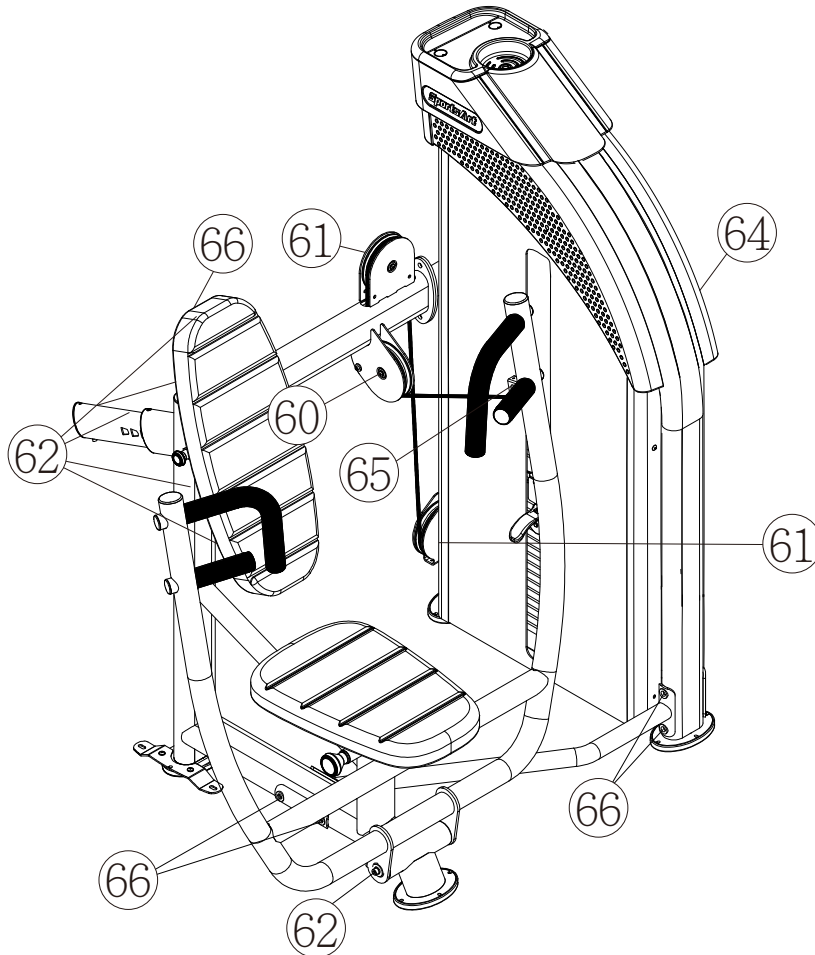

60 GBA-P019	61 GBA-P024	62 GBA-P014	63 GFA-P136	64 GBA-P018
65 GBA-P017	66 GBA-P016	67 TAO-P096A	68 GFA-P137	69 GFA-P138


STEP 10 Secure the Product

- Remove screws (40) from the floor fixing bracket (A19).
- Insert the U clip (A20) onto the machine (Make sure the U clip with the correct side downward as shown below), and then secure the floor fixing bracket (A19) with screws (40).
- Secure the floor fixing bracket to the floor with the floor fixing bolt, nut and washer as shown to make sure the machine is firmly fixed to the floor when operating.

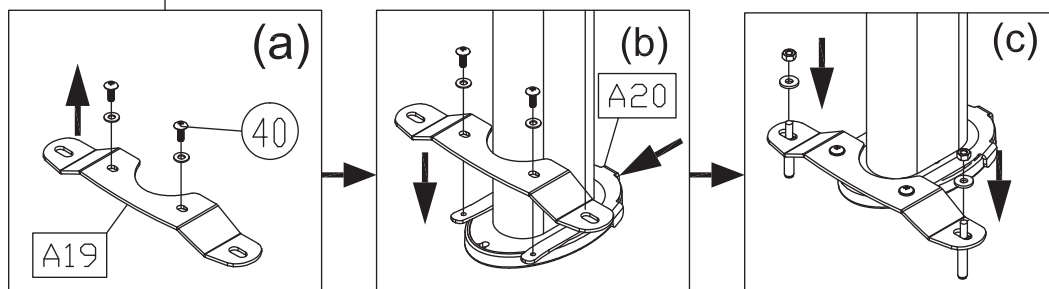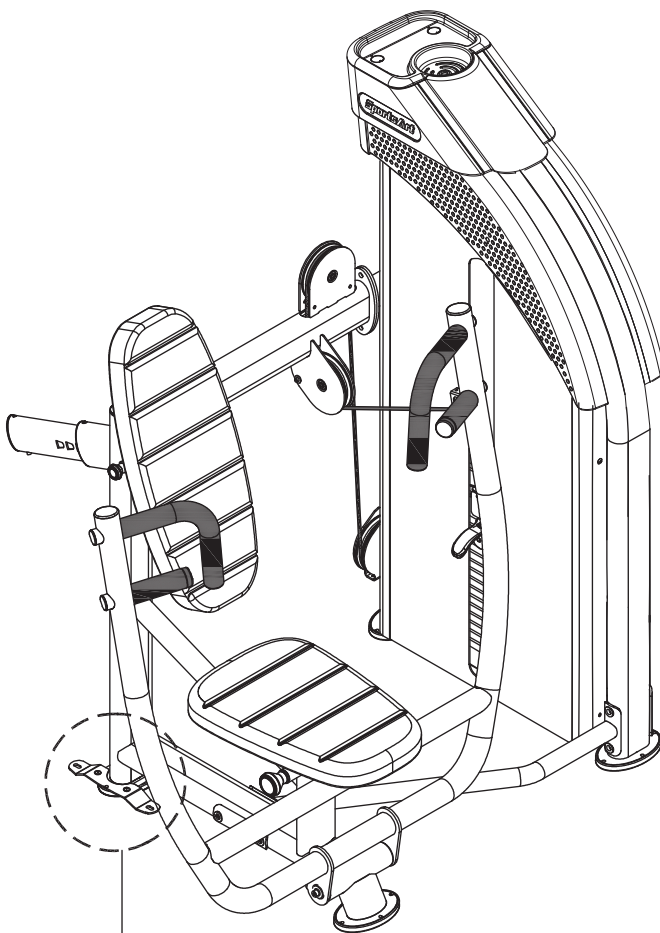

STEP 11 Level the Product


If the product is installed on an uneven surface to cause the instability of the product, place the support spacer under the foot pad to make sure its stability. (A few support spacers are provided in the packaging of this product.)

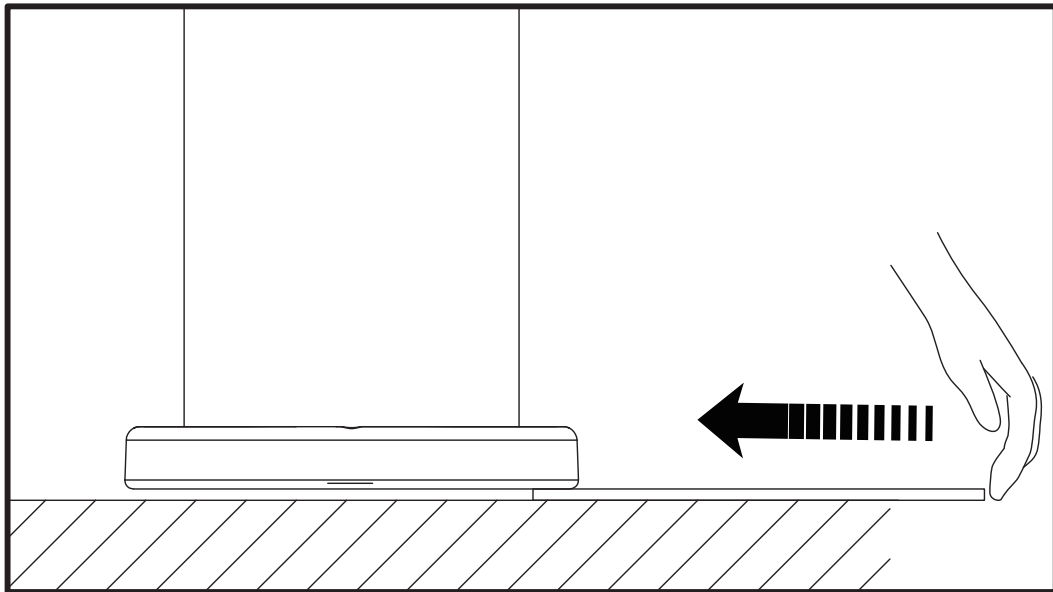

STEP 12 Cable Adjustment


* Insert the stack fork into the gap under the lowest weight plate, and then adjust the large nut at area C. Adjust until the upper stack carriage set moves slightly.

To adjust the cable, first insert the (Z) rod and loosen the (Y) nut, and then adjust the (X) nut. If the cable is too long, adjust the (X) nut downward. If too short, adjust the (X) nut upward. After adjusting the (X) nut, tighten the (Y) nut against the weight stack to secure this position.

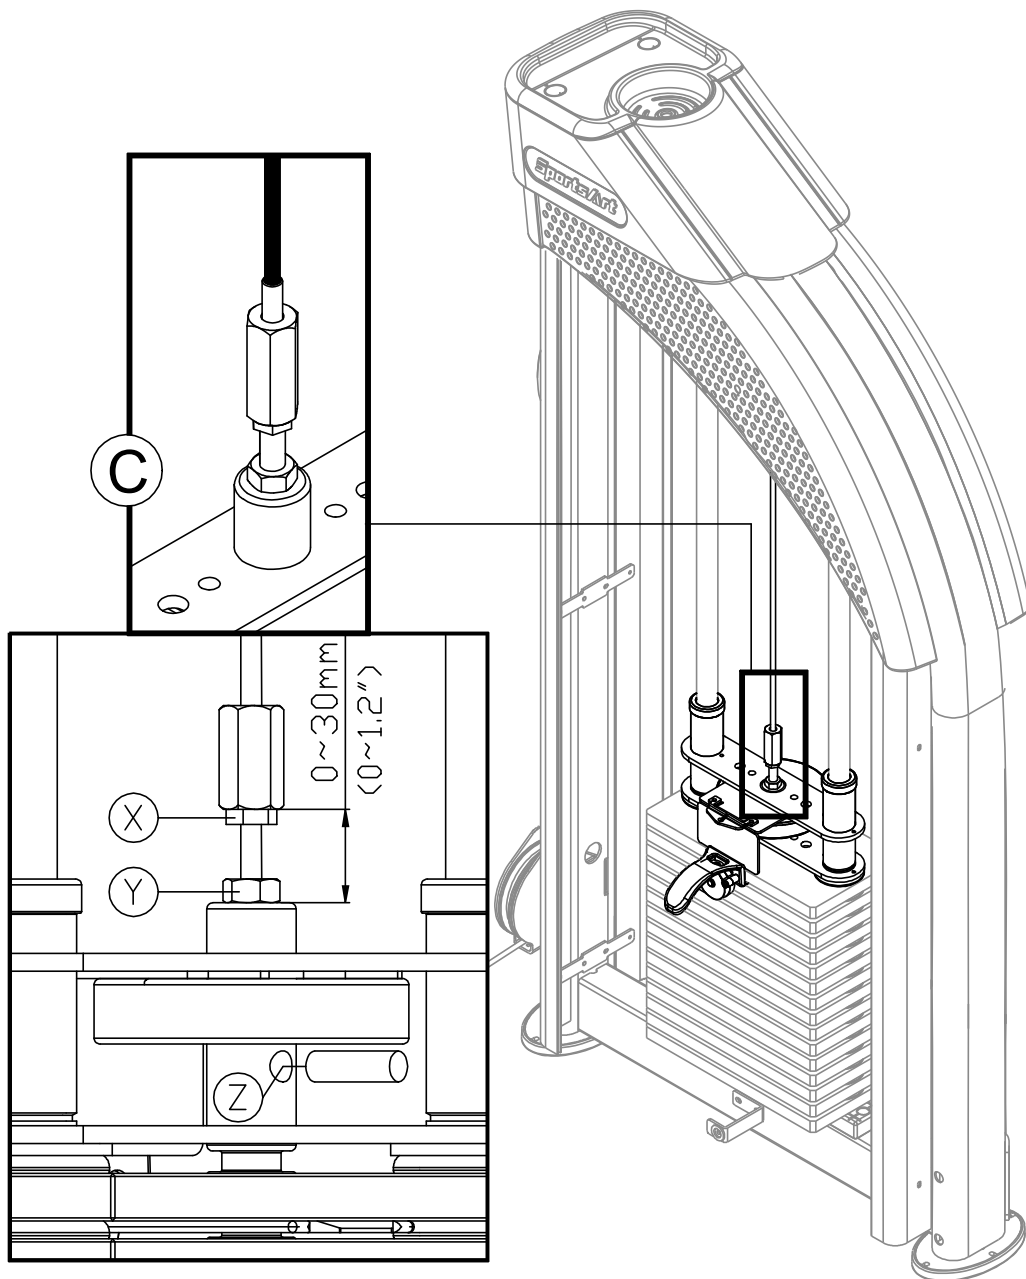

STEP 13 Stack Fork Inspections

- * Please follow operating instructions on the product sticker to test operation and confirm that the equipment is working properly.
- * Insert the stack fork to make sure that every weight plate can be engaged easily.
- * Insert the stack fork at the heaviest weight setting at which you can safely operate the equipment.
- * Exercise to lift the stack several times, and then inspect the cable for proper tightness. If necessary, make adjustments according to the instructions "Cable adjustment" of this manual.
- * Ensure that anyone who is not operator does not near the equipment when testing.

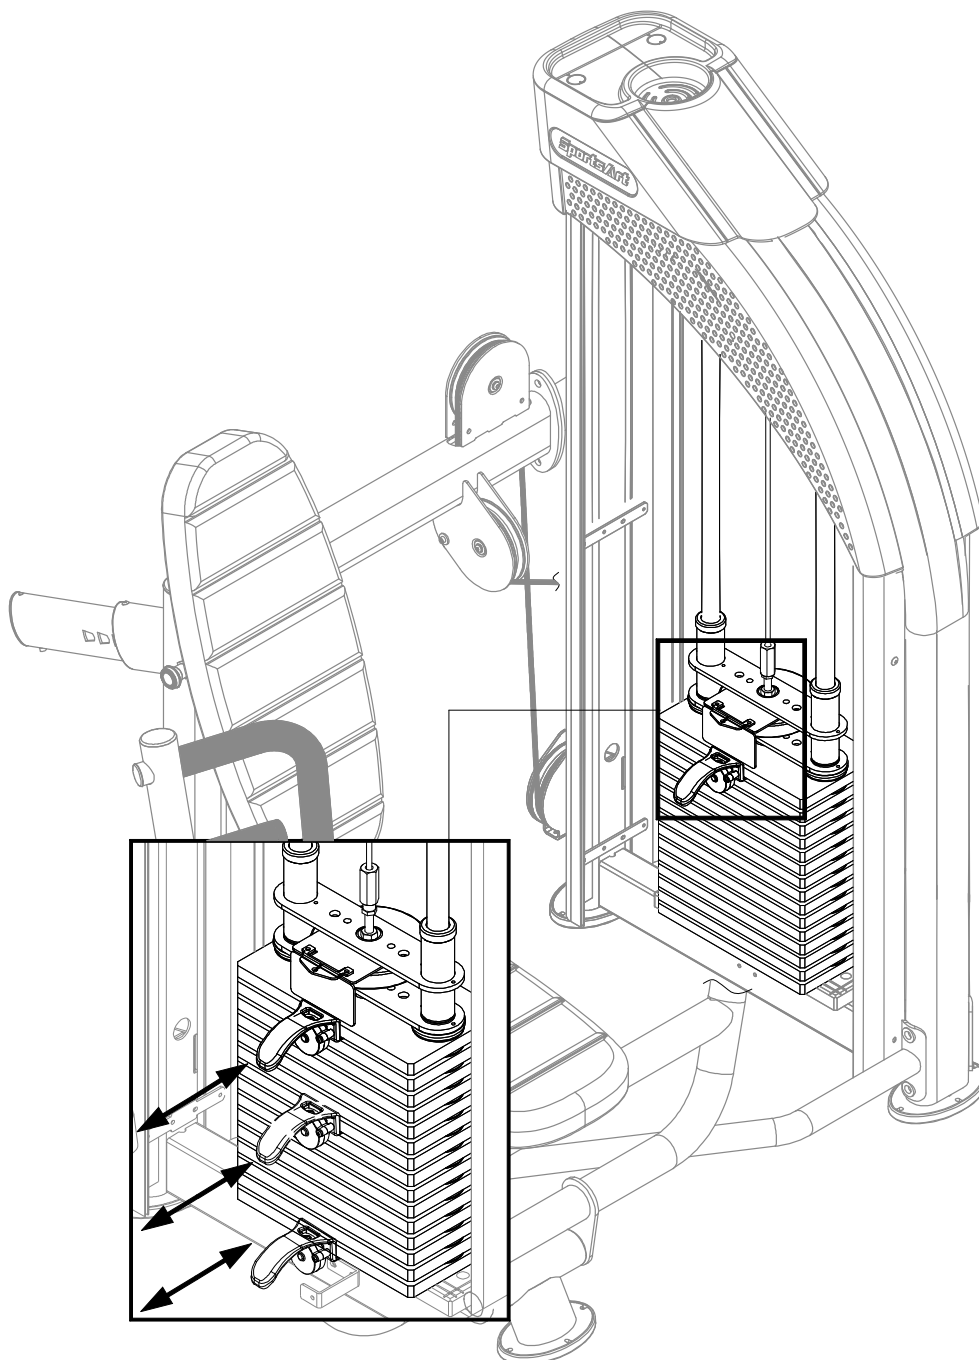

STEP 14 Unit Inspection


After completing the assembly or regular maintenance, please follow instructions (a) through (c) below to inspect the unit. If the unit is disassembled or has been damaged in any way, it might cause injuries or cause the unit to fail.

- (a) Make sure the unit is steady and on a level surface. If the unit is not steady, make adjustments according to the instructions “Level the Unit” of this manual.
- (b) Make sure all parts are assembled and all fasteners are tightened.
- (c) Please follow operating instructions to test operation and confirm that the equipment is working properly. (Please refer to “Operate the Product” of this manual.)

5. OPERATION THE PRODUCT

OPERATION Safety Operating Area

- (a) Make sure operate the unit in safety area as shown. Do not allow people to be near this area when operating.
- (b) Noise emission under load is higher than without load.
- (c) Over exercising or improper workout position may result in serious injury.
- (d) This product is intended for exercise chest.

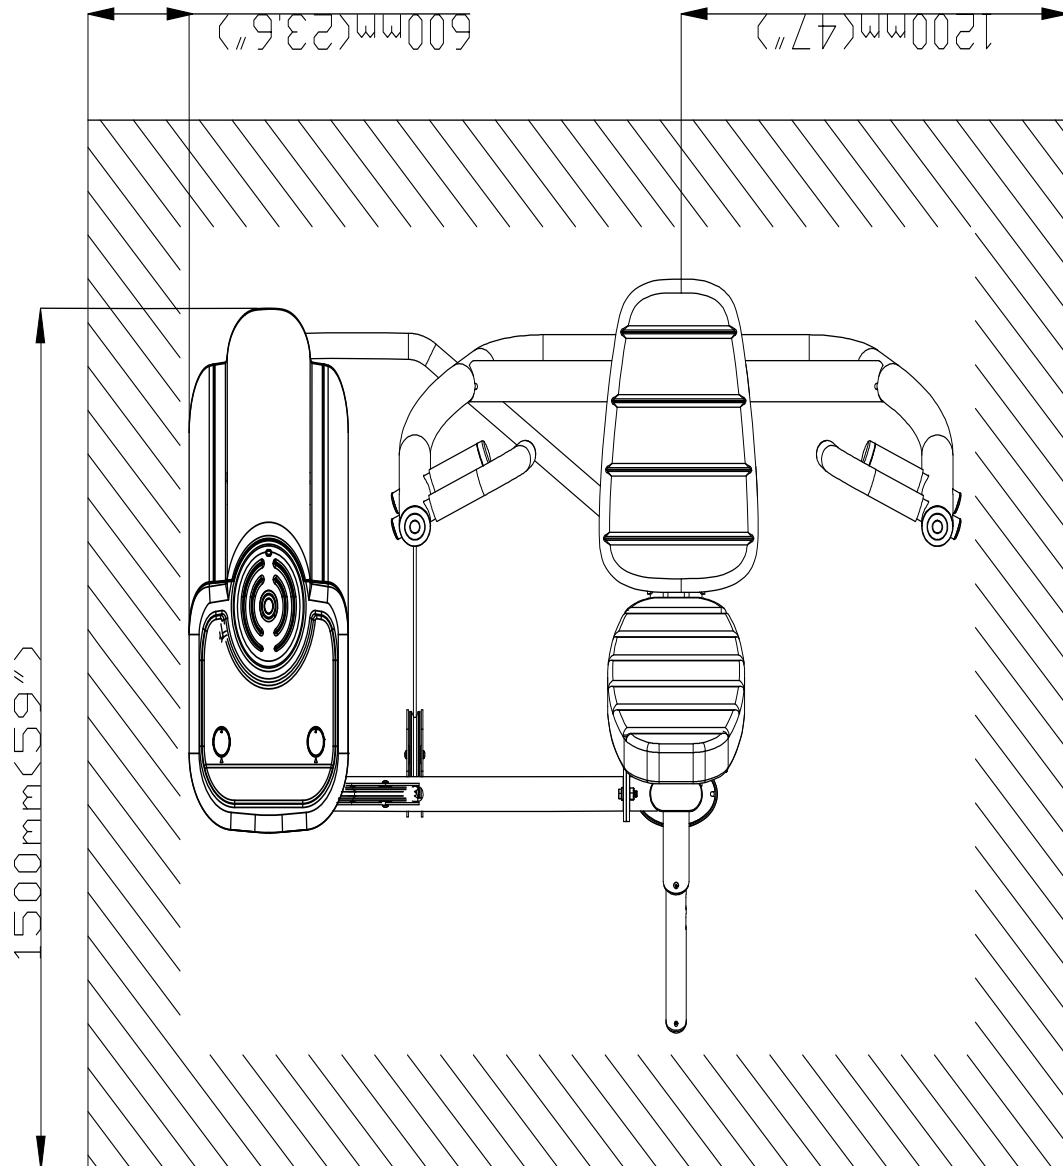


OPERATION Exercising Instructions

- (a) Select the appropriate weight plates according to your recommended exercise level.
 - (b) Adjust the seat height and seat back to the most comfortable position and make sure the knob is engaged to secure the position.
 - (c) Perform the exercise in a controlled manner. Inhale when pushing up against resistance and exhale when returning to original position.
- * Please exercise within the range of your skill and training. **DO NOT** work to exhaustion.
- * All users operate this machine must be supervised under coaches instructions at all times in order for safety.



Please follow the operating instructions as below to test operation.

- (a) Please follow operating instructions on the product sticker to test operation and make sure the equipment is working properly.
- (b) Insert the stack fork at the heaviest weight setting at which you can safely operate the equipment. Exercise to lift the stack several times. Then inspect the cable for proper tightness. If necessary, make adjustments according to the instructions in this manual.

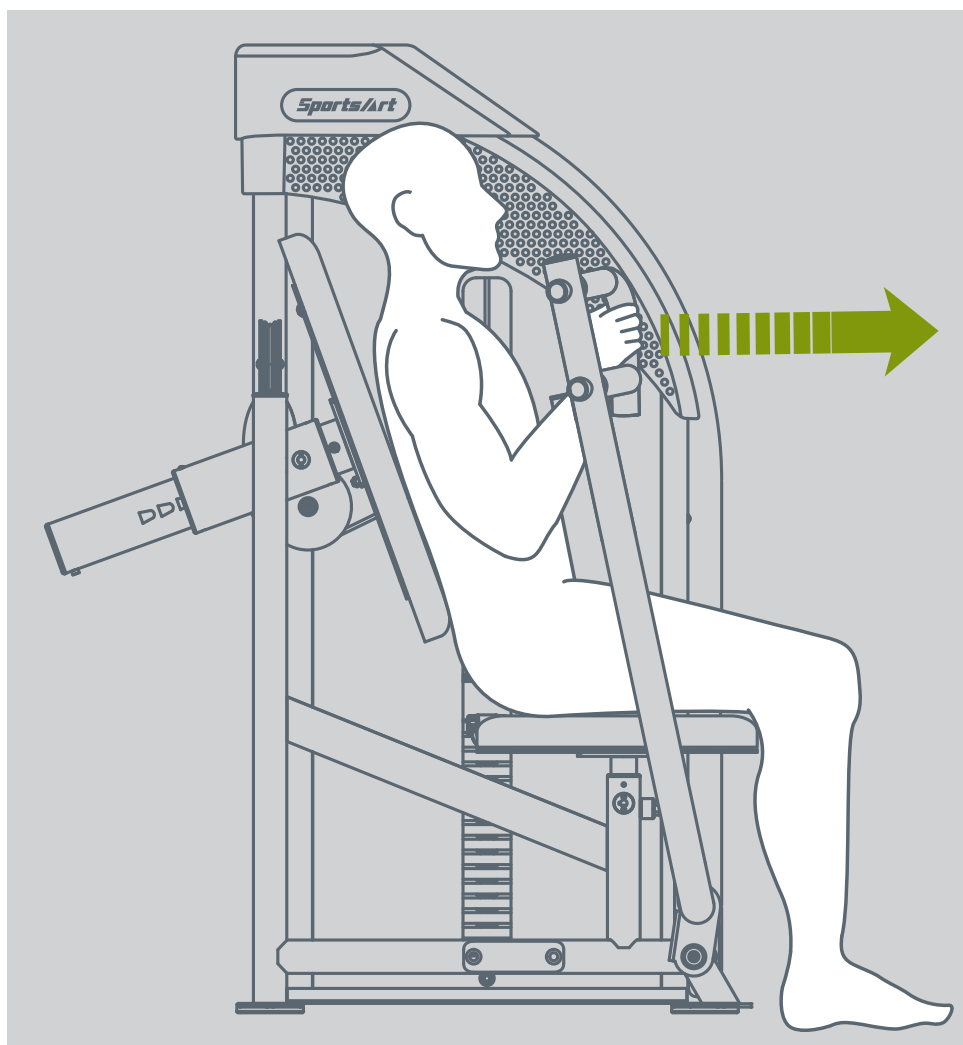

OPERATION Exercising Instructions (CONT.)

- (a) Seat back height positioning can be adjusted. Simply, put out the related knob, make the adjustment, and release the knob to secure the desired position.
- (b) Seat bottom height positioning can be adjusted. Simply, put out the related knob, make the adjustment, and release the knob to secure the desired position.

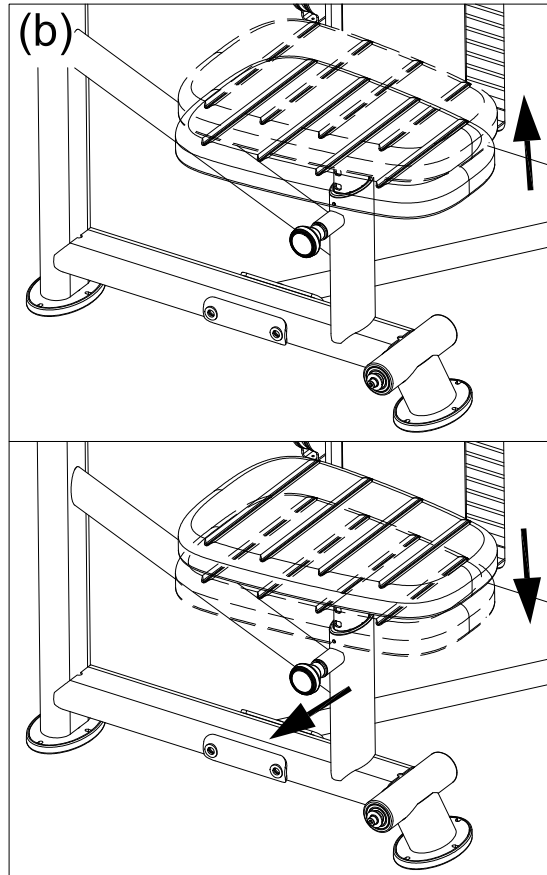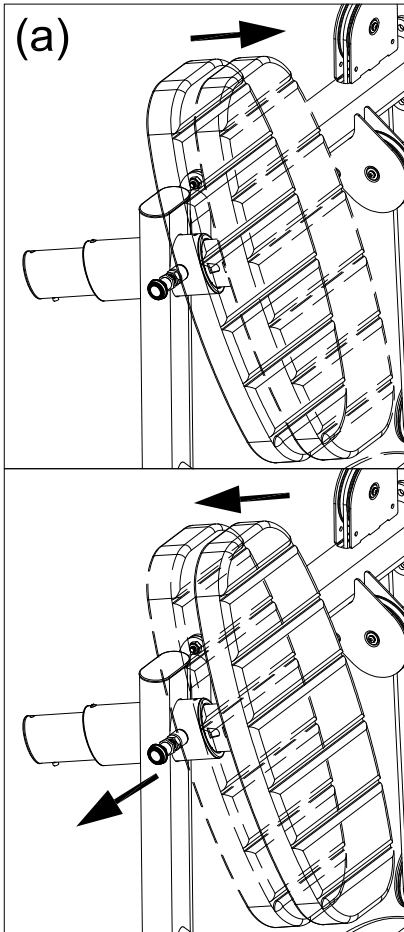

6. MAINTENANCE

This section covers maintenance topics and includes a maintenance schedule, task list, and log.

MAINTENANCE Safety Precautions


- Please follow standard safety precautions when servicing this product.
- Do NOT use a water damp towel to clean the product and do perform the following maintenances.
- Do NOT use cleaners with alcohol, ammonia, or other damaging chemicals. The use of such chemicals can damage the product and void the warranty. Never spray or pour any liquid directly onto the product. Doing so can damage components and void the warranty.
- Use a clean, lint-free towel, dampened with a mixture of Simple Green® all-purpose cleaner, to thoroughly clean the handlebar and the console.
- This product has moving parts that can be hazardous. Exercise caution when maintaining, operating, or moving this product.
- Do not use accessories or parts that are not specifically recommended by the manufacturer (SportsArt) . Such parts might cause injuries or cause the unit to fail and void the warranty. We are not responsible for any safety issue that arises due to the misuse of accessories or parts. At the same time, we will terminate the warranty terms of this equipment.
- Maintenance and repair must be performed by trained service personnel only. Improper maintenance would not only damage the machine, but may also present a danger to the exerciser.
- Keep this product out of use until maintenance is completed.

MAINTENANCE Guide Rod Cleaning and Lubricating

1. Apply lubricant to the guide rods every week.

Procedure:

- (a) Put some lubricant on a clean, lint-free cloth. Rub the lubricated cloth on the guide rods.
 - (b) Load the upper stack carriage set. Exercise to test operation.
 - (c) Repeat steps (a) and (b) 2-3 times. (Note: the cloth should be lint-free.)
2. After lubricating the guide rods, inspect cable tightness. Refer to the manual, and adjust it if necessary.

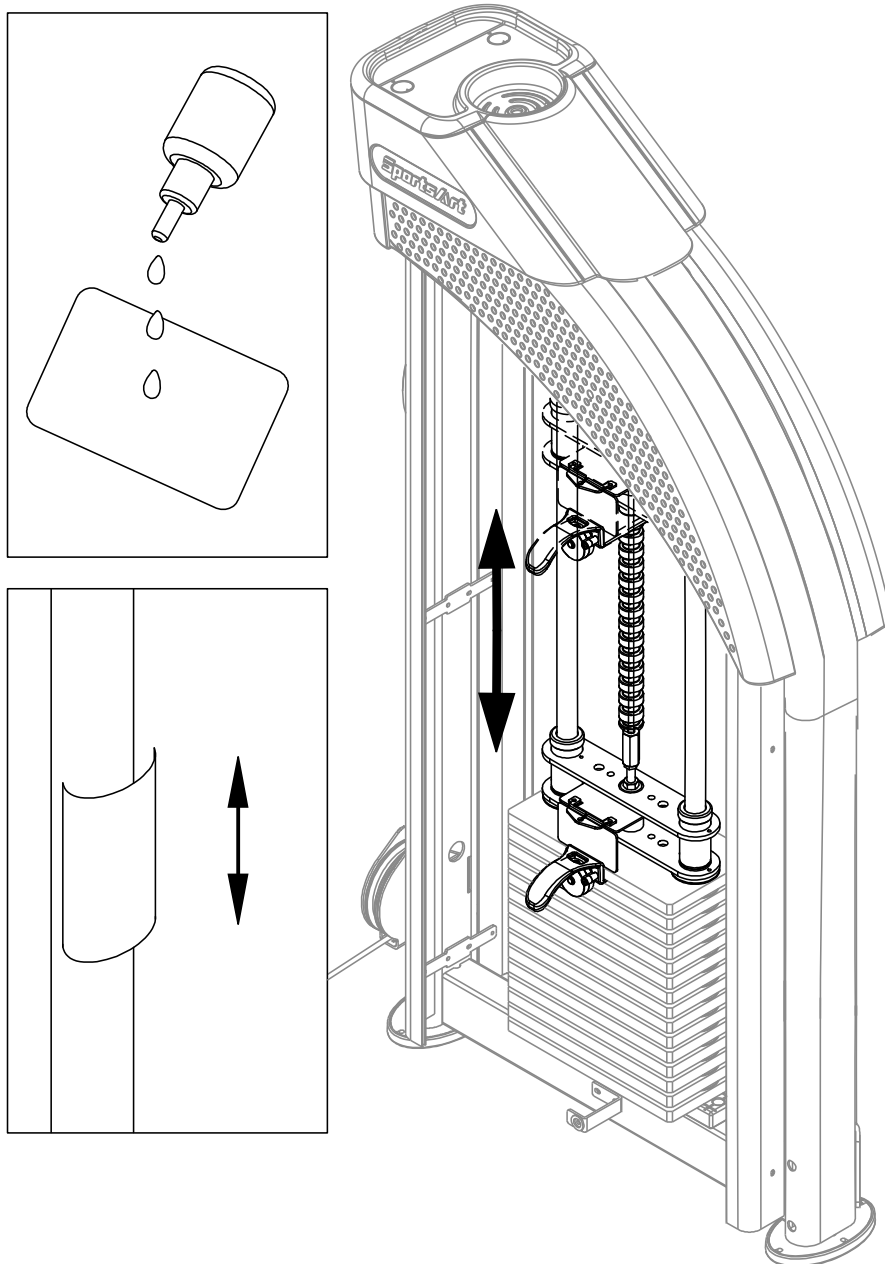

MAINTENANCE Schedule

If there is a need for maintenance of components, please visit the SportsArt website.

cleaning requirements


1.directive 93/42/CEE

2.directive biocide 98/8/CEE

The disinfectant has to be in compliance with Medical Device Directive 93/42/EEC (MDD) and Biocidal Products Directive 98/8/EC (BPD).

It is suited for sensitive synthetic surfaces such as synthetic leather, polycarbonate (PC), acrylic glass and polysulfone, and for the keyboards and control panels.

	Area	Day	Week	Month	Quarter	Year	Notes
1	Exterior	●					Clean.
2	Screws	●					Inspect for looseness and secure if necessary.
3	Test	●					Check for proper equipment operation.
4	Seat bottom/ Seat back	●					Use damped cloth to clean.
5	Cable		●				Check for damage or wear. Replace it if necessary.
6	Guide Rod		●				Clean and lubricate.
7	Extension tube		●				Clean and lubricate.

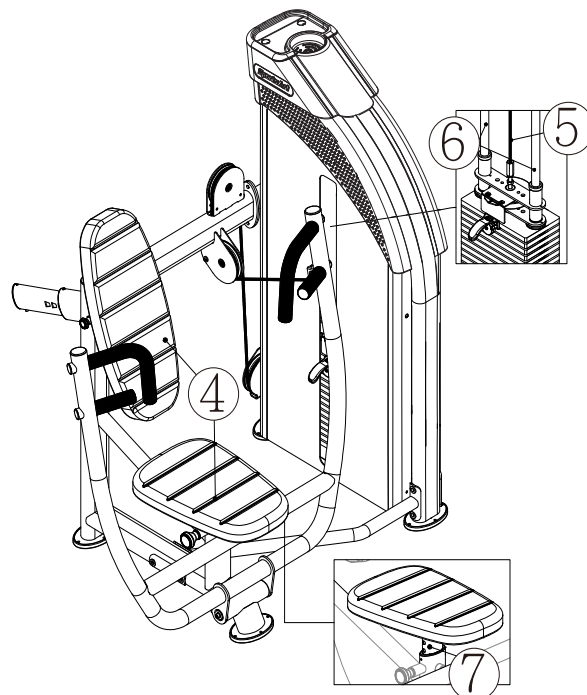

MAINTENANCE Task List

Like cars, fitness products require maintenance. Regular maintenance extends product life, and failure to maintain products can void the manufacturer's warranty. Copy the maintenance log sheet, and record maintenance work for each fitness product.

Daily tasks

1. Use a clean, lint-free towel to wipe down the product exterior.
2. Inspect all screws. Secure if necessary.
3. Make sure the machine is working properly.
4. Wipe the seat bottom and the seat back clean with a damp cloth.

Weekly tasks

1. Check the cable for damage or tear.
2. Clean and lubricate the guide rods.
3. Clean and lubricate the extension tube.

Caution

- Please follow standard safety precautions when servicing this product.
- Do NOT use cleaners with alcohol, ammonia, or other damaging chemicals. The use of such chemicals can damage the product and void the warranty. Never spray or pour any liquid directly onto the product. Doing so can damage components and void the warranty.

MAINTENANCE One-Year Maintenance Log

Facility: _____ Supervisor: _____

Product model number: _____ Serial number: _____

Start date: _____ End date: _____

Daily Tasks	Weeks 1-7	Weeks 8-14	Weeks 15-21	Week 22-28
Completed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Daily Tasks	Week 29-35	Week 36-42	Week 43-49	Week 50-52
Completed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Weekly Tasks	Weeks 1-7	Weeks 8-14	Weeks 15-21	Weeks 22-28
Completed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Weekly Tasks	Weeks 29-35	Weeks 35-42	Weeks 43-49	Weeks 50-52
Completed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Monthly tasks	1	2	3	4	5	6	7	8	9	10	11	12
Completed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Quarterly Tasks	Quarter 1	Quarter 2	Quarter 3	Quarter 4
Completed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Yearly Tasks	Year 1
Completed	<input type="checkbox"/>

Notes: _____

7. CONSIGNES DE SÉCURITÉ IMPORTANTES

Le produit SportsArt a été conçu et fabriqué afin d'assurer une sécurité optimale. Cependant certaines précautions s'appliquent chaque fois que vous utilisez votre produit.

- Lisez entièrement le manuel avant l'assemblage et l'utilisation. Veuillez aussi noter les consignes de sécurité suivantes:
- Veuillez lire attentivement les instructions et installer le produit selon les instructions.
- Assemblez et faites fonctionner le produit sur une surface solide et plane; NE PAS l'utiliser à l'extérieur ou près de l'eau.
- En aucun cas, ne laissez des enfants à proximité ou sur le produit.
- Vérifiez le tapis de course avant chaque utilisation. Assurez-vous que toutes les pièces sont assemblées et que tous les éléments de fixation sont serrés. NE PAS utiliser le produit si l'appareil est démonté de quelque façon.
- Gardez vos mains loin des pièces mobiles.
- Portez des vêtements d'entraînement appropriés; NE PORTEZ PAS de vêtements amples. NE PORTEZ PAS de chaussures à semelles en cuir ou à talons hauts. Attachez les cheveux longs.
- Soyez prudent lors du montage et démontage de l'appareil.
- NE PAS utiliser d'accessoire non spécifiquement recommandé par le fabricant. Car cela pourraient provoquer des blessures ou entraîner une panne de l'appareil.
- Débranchez l'appareil de la prise avant l'entretien ou la suppression de toute pièce.
- Une surveillance étroite est nécessaire quand de produit est utilisé par ou à proximité d'enfants, de malades ou de personnes handicapées.
- Utilisez ce produit uniquement pour l'usage prévu dans ce manuel.
- La limite de poids de l'utilisateur pour le produit est de 227 kg, 500 lb.
- Ce produit n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites ou qui ne disposent pas de l'expérience ou du savoir nécessaires, sauf si celles-ci ont au préalable été formées eu égard à l'utilisation de produit par une personne responsable de leur sécurité.
- Les enfants doivent être encadrés afin d'empêcher qu'ils ne jouent avec le produit.


ATTENTION

Si vous ressentez une douleur ou si vous avez une sensation anormale, **ARRÊTEZ VOTRE ENTRAÎNEMENT** et consultez immédiatement votre médecin. Entraînez-vous à votre niveau d'exercice recommandé. NE PAS s'entraîner jusqu'à l'épuisement. Avant de commencer un programme d'exercice, vous devriez consulter votre médecin. Il est recommandé de faire un examen physique complet. Dans ce manuel, les mots "gauche" et "droit" sont utilisés en référence aux pièces et au produit. Comme tels, les mots "gauche" et "droit" font respectivement référence aux côtés gauche et droit de l'exerciseur. De même pour plus de concision, le mot «vis» est utilisé dans certains cas où des rondelles, des vis et autres matériels sont associés.



8. APPENDIXES

APPENDIXES Optional accessories

Top weight(100 kg = (5KG × 1 pcs) + (5KG × 7 pcs) + (7.5KG × 8 pcs))

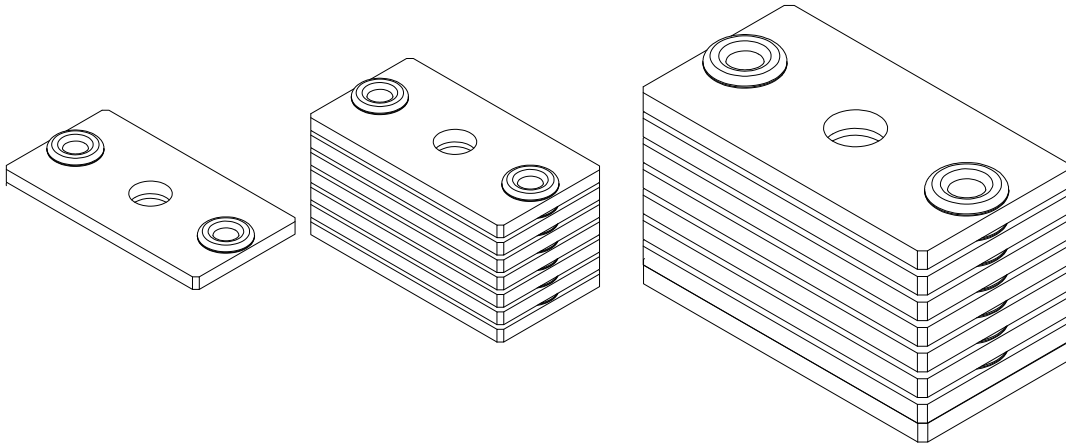

P815 Dependent Chest Press

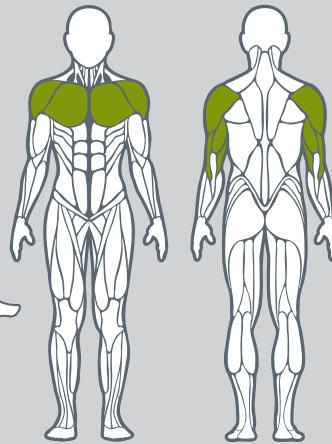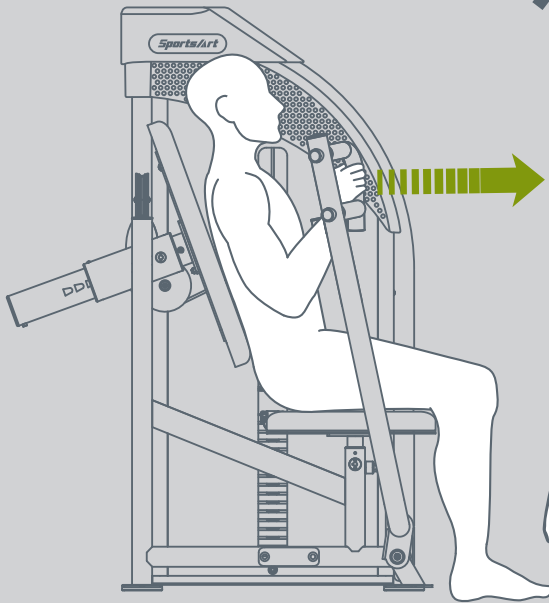

- 1 Select a resistance level that enables you to perform the movement correctly.
- 2 Adjust seat height so that handles are at chest level.
- 3 Push handles forward. Do not lock arms.
- 4 Avoid excessive arching of the back when bringing handles back to starting position.
- 5 Perform the exercise in a controlled manner. Exhale when pushing against resistance.

www.sportsartfitness.com

CAUTION

Do not use this machine if you are unfamiliar or do not know how to operate it. Do not allow people near this machine when in use. Keep clear of parts not intended for contact during exercise. For your safety, exhale while you exert force.

Your Authorized Distributor