

G660 OWNER'S MANUAL CONTENTS

| | |
|---|----|
| 1. INTRODUCTION | 3 |
| 2. SAFETY PRECAUTIONS | 4 |
| 3. WARNING LABEL POSITION | 8 |
| 4. LIST OF PARTS | 9 |
| 5. ASSEMBLE THE PRODUCT | 11 |
| STEP 0 An Introduction to Battery Switch..... | 11 |
| STEP 1 Thread The Data Cable Into Right Pedestal..... | 12 |
| STEP 2 Left and Right Pedestals Installation | 14 |
| STEP 3 Display Panel Installation | 15 |
| STEP 4 Move the Treadmill into Place for Use | 18 |
| STEP 5 Level the Treadmill | 19 |
| STEP 6 Center the Walk Strips..... | 20 |
| STEP 7 Check and tension the Walk Strips..... | 21 |
| STEP 8 Power Cord Installation | 22 |
| 6. UNDERSTAND G660 LCD DISPLAY | 23 |
| DISPLAY Overview | 23 |
| DISPLAY Parameter Window | 24 |
| DISPLAY Specifications | 25 |
| DISPLAY Button Function | 26 |
| 7. SAFETY TIPS FOR USING G660 TREADMILL | 28 |
| SAFETY TIPS Guidelines on Safety Mechanism | 28 |
| SAFETY TIPS Safety Operating Area | 29 |
| SAFETY TIPS Mounting and Dismounting Instructions | 30 |
| 8. OPERATE THE PRODUCT | 31 |
| OPERATION Start Screen | 31 |
| OPERATION GO mode | 32 |
| OPERATION User Information Settings | 33 |
| OPERATION Workout Mode Instruction | 35 |
| OPERATION During Workout Instruction | 35 |
| OPERATION Pause or Stop Workout | 36 |
| OPERATION Workout Summary | 36 |
| OPERATION EUP Function | 36 |
| OPERATION Adjust the Incline on the Treadmill | 37 |


G660 OWNER'S MANUAL CONTENTS

| | |
|--|----|
| OPERATION User Preference and Component Versions | 38 |
| 9. ABOUT HEART RATE DETECTION | 40 |
| HEART RATE Telemetry | 40 |
| HEART RATE Contact | 40 |
| 10. GUIDELINES FOR EXERCISE | 41 |
| 11. MICRO INVERTER | 42 |
| MICRO INVERTER Important Safety Instructions | 42 |
| MICRO INVERTER Cautionary Messages | 42 |
| MICRO INVERTER Electronic Specifications | 44 |
| MICRO INVERTER Circuit Board & Product Settings | 45 |
| 12. MAINTENANCE | 47 |
| MAINTENANCE Safety Precautions | 47 |
| MAINTENANCE Error Messages | 48 |
| MAINTENANCE Strings Messages | 49 |
| MAINTENANCE Circuit Breaker | 50 |
| MAINTENANCE Schedule | 51 |
| MAINTENANCE Note | 52 |
| MAINTENANCE Task List | 53 |
| MAINTENANCE Maintenance Log | 54 |
| 13. ACCESSORIES | 55 |
| ACCESSORIES Standard | 55 |
| ACCESSORIES Option | 55 |
| 14. APPENDIXES | 57 |
| APPENDIXES Technical Specifications | 57 |
| APPENDIXES Wiring Diagram | 58 |
| APPENDIXES Exploded Diagram | 59 |

1. INTRODUCTION

Congratulations on the purchase of a high quality SportsArt product, the G660 LCD treadmill. Constructed of high quality materials and designed for years of reliable performance, this product was made for full commercial use.

Before this product is assembled or operated, we recommend that you familiarize yourself with this manual. Understanding the correct assembly and operation of this product will help ensure that exercisers obtain their fitness goals safely and successfully.

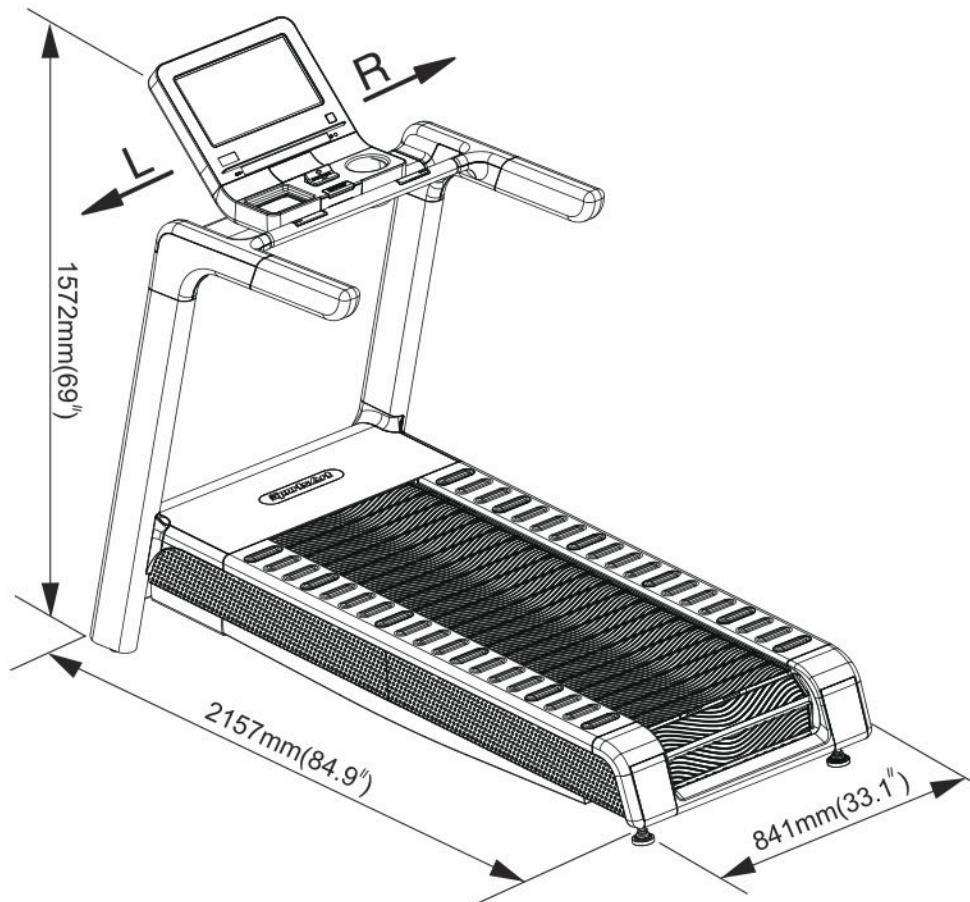

2. SAFETY PRECAUTIONS

This product was designed and built for optimum safety. However certain precautions apply during the use of this product. Please note the following safety precautions:

- To reduce the risk of personal injury, read and understand all the instructions before using this product.
- Make sure the product is installed and operated as instructed in this manual. Be careful when mounting and dismounting the unit. The product shall be disconnected from its power source during service and installed and when replacing parts.
- Use this product only for the intended use described in this manual.
- Check the product before every use. Make sure all parts are assembled, and all fasteners are tightened. Do not use the product if it is disassembled in any way.
- Do not leave your device unattended while in use.
- Assemble and operate the product on a solid, level surface. Do not use outdoors or near water (including swimming pools and saunas) and should not be used where aerosol (spray) products or oxygen are used. Do not operate on a blanket or near flammable materials.
- Keep all air ventilation areas free of blockage. Never drop or insert into any opening.
- Treadmills should be positioned away from walls to avoid injury due to falls. Be sure that the back of the treadmill has at least six to seven feet of clearance from a ledge, wall or window. The power supply and wiring should be located away from walking paths or taped to prevent tripping when stepping on or off of the running belt.
- Do not stand on the Running belt when starting the treadmill. Straddle the belt with your feet on the right and left landing strips.
- Wear appropriate workout clothes, don't wear loose clothing, tie all long hair back, wear shoes with rubber or high traction soles, don't wear shoes with leather soles/high heels or barefoot use this product.
- Never place liquids of any type directly on the unit, except in a bottle holder or accessory tray. Lidded containers are recommended.
- Always use the safety key when operating the product.
- Use the handrails whenever additional stability is required. In case of emergency, such as tripping, the user should grab the handrails and place his/her feet on the side platforms. The handrails may be held to enhance stability as needed, but are not for continuous use.
- Keep away from moving parts. Moving parts may or may not stop immediately if an object becomes caught or impedes normal motion.
- To Avoid Injury, use extreme caution when stepping onto or off of a moving belt.
- Never operate this product if it has been damaged in any way. If it is not working properly, if it has been dropped or damaged, or dropped into water, contact a service technician for repairs.


2. SAFETY PRECAUTIONS (CONT.)

- Do not use accessories or parts that are not specifically recommended by the manufacturer (SportsArt). Such parts might cause injuries or cause the unit to fail and void the warranty. We will not be responsible for any safety issue that arises due to the misuse of accessories or parts. At the same time, we will terminate the warranty terms of this equipment.
- Keep all air ventilation areas free of blockage. Never drop or insert any object into any opening.
- Unpack and verify contents of boxes according to the list of parts to check if any parts are missing. If the product is damaged or missing, contact your SportsArt representative to find out all the materials that were damaged during shipping. (Note: Transport damage is the responsibility of the carrier.)
- This product is not intended for use by persons (including children 14 or younger) with reduced physical, sensory, or mental capabilities, or by people who are otherwise deficient in product knowledge or experience. If such people use this product, they should be given training and be supervised at all times by someone responsible for their safety.
- CAUTION : The heart rate system is for reference only, if you feel any pain or any abnormal feeling, please stop Exercise and consult your doctor immediately.
- Consult your physician before starting a workout or training program. It is recommended that you undergo a complete physical examination. Have your doctor review your training and diet programs to advise you of a workout routine you should adopt.
- WORK within your recommended exercise level. DO NOT work to exhaustion.
- Before using this equipment to exercise, always do stretching exercises to properly warm up.
- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- WARNING! Only qualified technicians should be allowed to contact electrical components such as circuit boards. Some components carry an electrical charge even after use has been discontinued or the product has been unplugged. For products with power cords, turn off unit power, wait 10 minutes, then disconnect the power cord from the power socket. For products without power cords, let the unit sit without use for 10 minutes. Only after taking such precautions should covers be removed and electrical components be accessed.
- Do not attempt to drag or carry this unit by the power cord. Keep the power cord away from heated surfaces.
- Do not attempt to modify the plug provided with this product. Proper power supply must be provided. If the plug does not fit an outlet, contact a qualified electrician to inspect or modify power in the facility.

2. SAFETY PRECAUTIONS (CONT.)

- This product must be grounded. If it should malfunction or breakdown, Improper grounding can increase the risk of electric shock. The product is equipped with a power cord having an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Check with a qualified electrician if you are in doubt as to whether the power outlet is properly grounded.
- Noise emission under load is higher than without load.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the user desires to correct the interference, it is at the user's own expense.
- In conformity with the European Union Machinery directive 2006/42/EC, this equipment runs at sound pressure levels below 70 dB(A) at the average operating speed of 12 km/hr.
- The recommended minimum operating temperature is 15 degree Celsius.
- **Weight Limit:** The user weight limit for this product ranges from 45-150 kg (100 -330lb).

If the product is used in a nominal 120V circuit and the rated current is less than 15A with a grounding plug, use a plug like the one shown below:

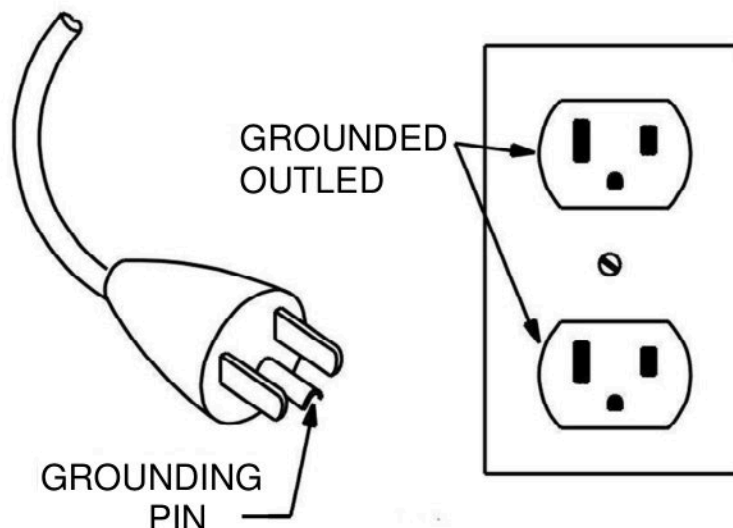

- This product is used in areas with voltage other than 120V. Please use standard socket type according to different countries (grounding is required), and should be configured by qualified electric motor professionals.

2. SAFETY PRECAUTIONS (CONT.)

MARKINGS

CAUTION:

(Console)

- Read instruction manual before using.
- Do not let children on or near the product.
- To reduce the risk of injury, stand on side rails before starting treadmill.
- To reduce the risk of injury from moving parts or electric shock, unplug before cleaning or servicing.

WARNING:

(Console)


- Heart rate monitoring system may be inaccurate.
- Over exercise may result in serious injury or death.
- If you feel faint, stop exercising immediately.
- Always attach clip to clothing before use.

(Safety key)


- Adjust the lanyard length if necessary.
- During use, clip safety key onto clothes securely in case of unexpected falling.
- When not in use, remove safety key! Store safety key out of reach of children.

3. WARNING LABEL POSITION

If you are in a Non-English speaking country, you can attach the warning label to the console panel as shown, otherwise, you can also stick it on a place where is clear and obvious. (please use the French version label in French-Speaking areas in North America, and the label will not be included in the other regions.)

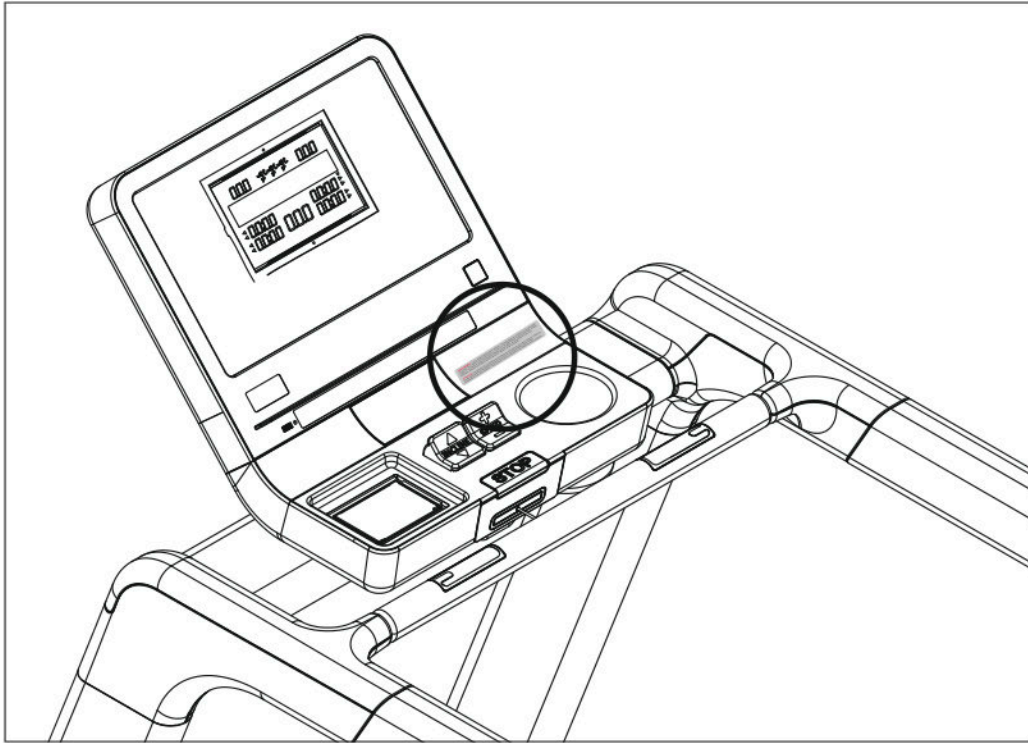

4. LIST OF PARTS

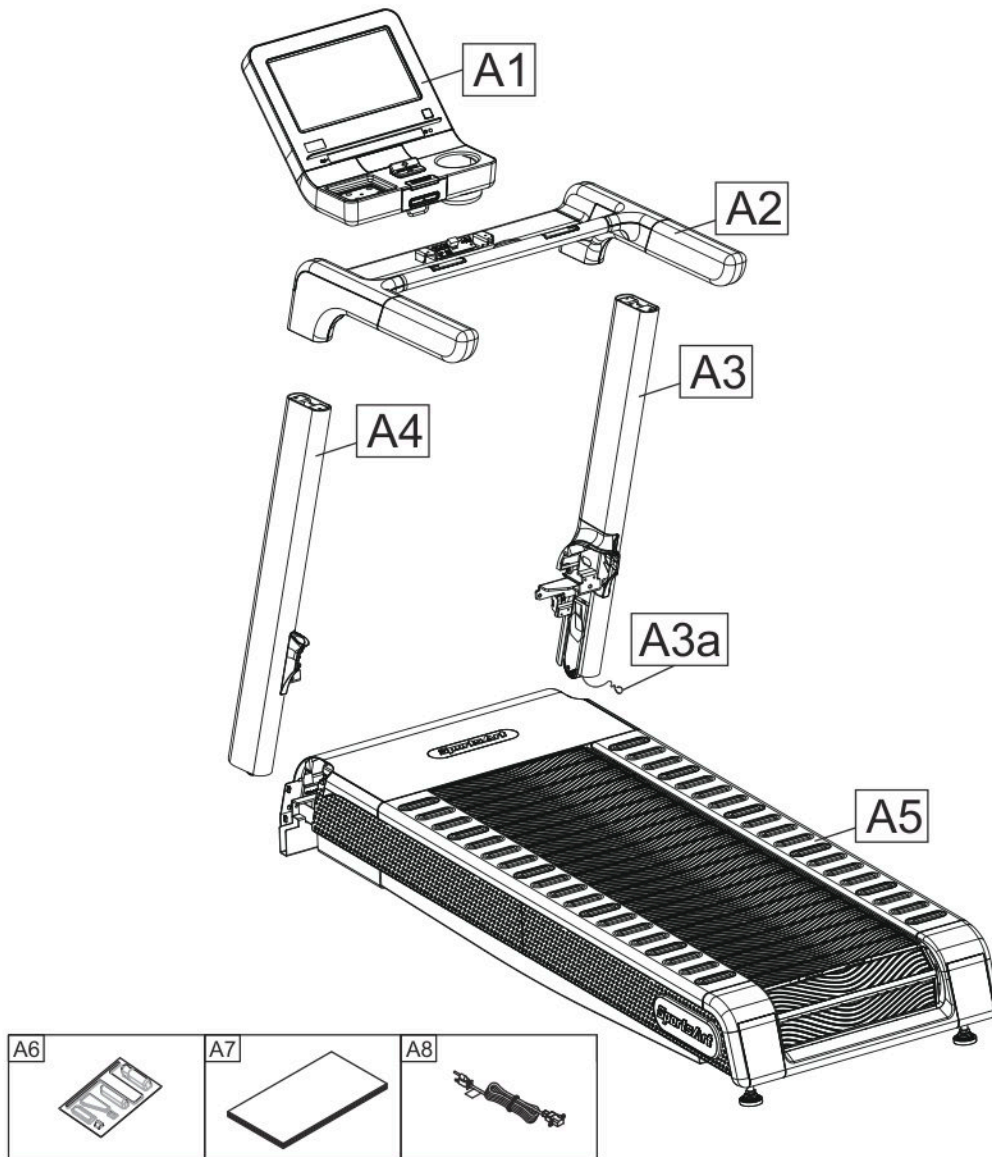

| Assembly Parts | | | | | |
|----------------|--------------------|------|-----|----------------|------|
| No. | Name | Qty. | No. | Name | Qty. |
| A1 | Display panel | 1 | A6 | Hardware kit | 1 |
| A2 | Handlebar assembly | 1 | A7 | Owner's manual | 1 |
| A3 | Right pedestal | 1 | A8 | Power cord | 1 |
| A3a | Feeder cord | 1 | | | |
| A4 | Left pedestal | 1 | | | |
| A5 | Main frame | 1 | | | |

4. LIST OF PARTS (CONT.)

| Components on the Product | | | |
|---------------------------|--------------------------------|-------------------|-------|
| No. | Name | Specification | Notes |
| 40 | Inner hex screw | M8*P1.25*L20 | |
| 41 | Toothed lock washer | D18*d8.5*t2.0*19T | |
| | Inner hex screw | M8*P1.25*L20 | |
| 42 | Toothed lock washer | D18*d8.5*t2.0*19T | |
| | Spring washer | M8 | |
| | Inner hex screw | M8*P1.25*L20 | |
| 43 | Inner hex screw | M6*P1.0*L12 | |
| | Flat washer | D16*d6.3*t2 | |
| 44 | Hex socket flat head cap screw | M10*P1.5*L20 | |

| Hardware Kit | | | | |
|--------------|--|------|----------------------------|-------|
| No. | Name | Qty. | Specification | Notes |
| | Plastic fastener POM primary color + foam | 6 | F0P2N-XX-01- 0000G | |
| | T-shaped Allen wrench | 1 | M5 | |
| | Dual-Use screwdriver +black shank | 1 | Flathead / Philips head | |
| | T-shaped Allen wrench | 1 | M6*L108 | |
| | Screw socket | 4 | SGN-07 | |
| | Double open-ended wrench | 1 | 22mm*24mm | |
| | L-shaped Allen wrench | 1 | M6*L133mm*W28 | |
| | screw cap | 1 | | |

5. ASSEMBLE THE PRODUCT

Follow instructions below to assemble this product. Note that in this manual the words “left” and “right” are used to refer to the product and its parts. As such, these designations correspond to the “left” and “right” sides of a person in position to exercise on this product. Also, for brevity, the word “screws” or “nuts” is used where washers and other hardware may be involved.


STEP 0 An Introduction to Battery Switch

After finishing assembly, be sure to turn on the power, and open the charging port cover to plug your charging cable into the adapter, and insert the plug into the outlet

The battery lasts 1.5 years after fully charged the first time


Battery life varies by use.

Turn off the battery switch if you will not use the treadmill for an extended period of time. A recharge is necessary if the battery loses capacity, follow

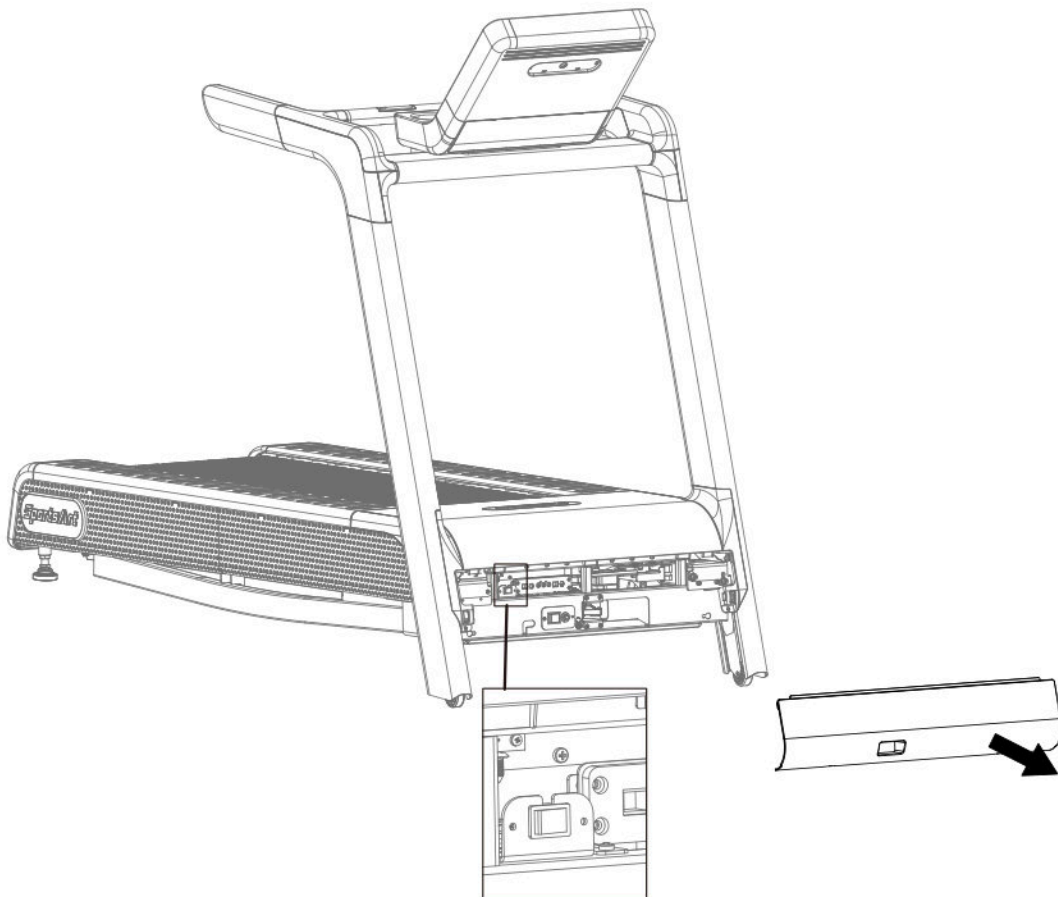

STEP 1 Thread The Data Cable Into Right Pedestal


Please open the charging port cover (25) then remove screws (40) (41) from the left and right side.

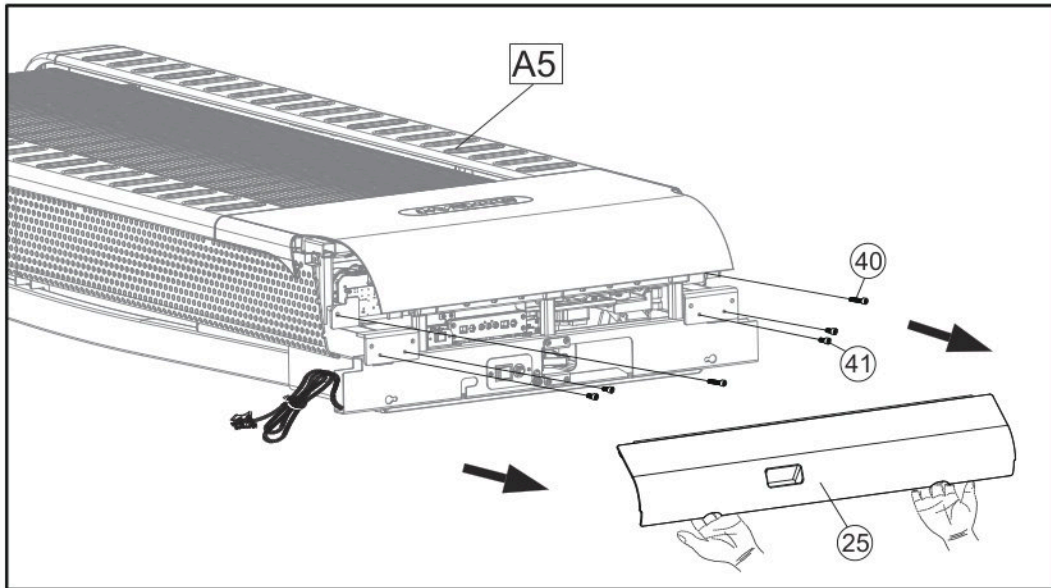

STEP 1 Thread The Data Cable Into Right Pedestal(Cont.)

Follow steps (a) through (e) to thread the data cable into right pedestal (A3).

- (a) Pull out the data cable from the right pedestal base. Cut the zip tie, and uncurl the data cable.
- (b) Place the right pedestal (A3) on the floor as shown, with the bottom end facing the data cable. Detach the feeder cord (A3a) from the base of the pedestal, and tie the low end of the feeder cord (A3a) onto the top of the data cable.
- (c) Disconnect the feeder cord at the top of right pedestal (A3).
- (d) Pull the feeder cord (A3a) from the top of the right pedestal (A3) as shown, thus threading the data cable through the right pedestal (A3).
- (e) Once the data cable has been threaded through the pedestal, untie the feeder cord (A3a) from the data cable.

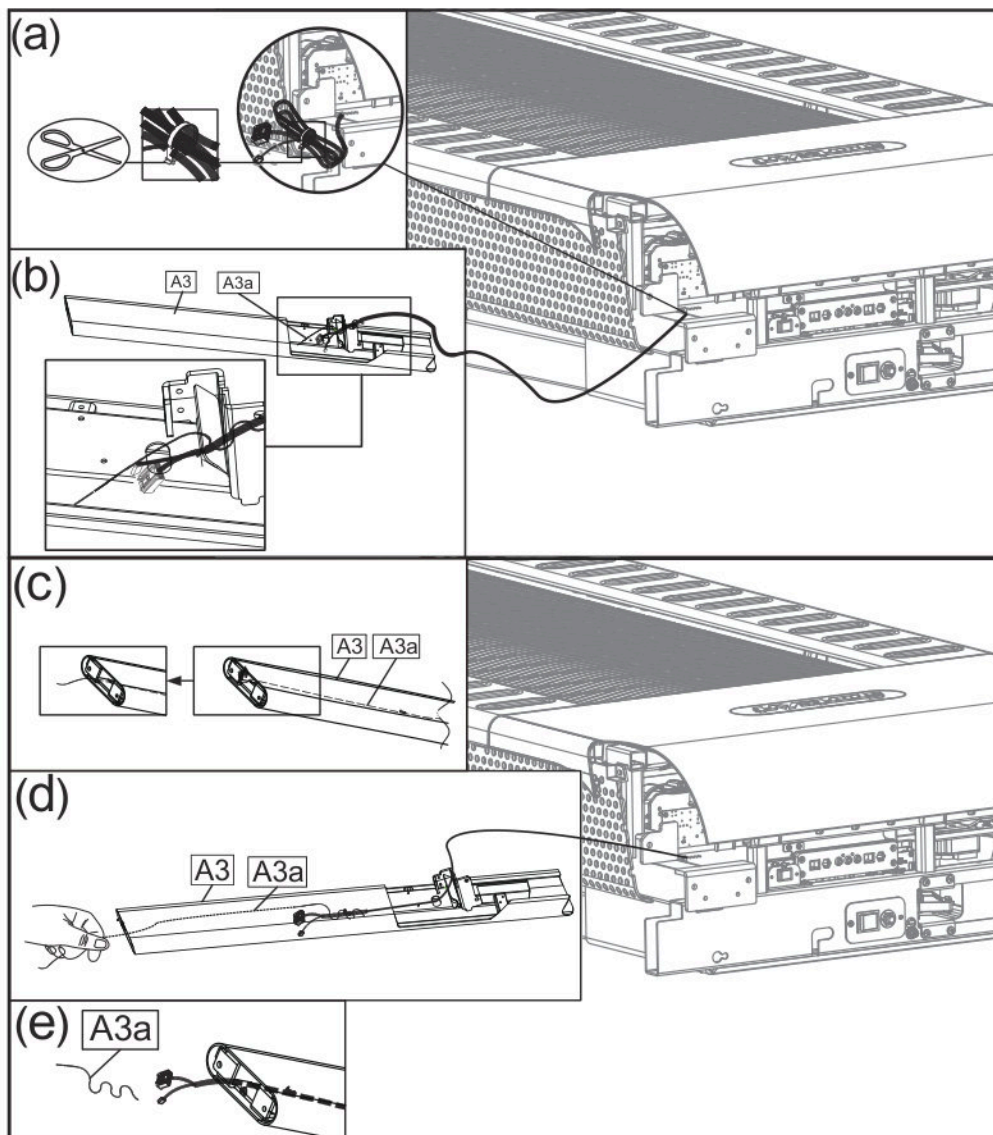


STEP 2 Left and Right Pedestals Installation

Follow steps (a) through (b) to install left and right pedestals (A3)(A4).

(a) Attach left and right pedestals (A3)(A4) to the main frame (A5), and use screws (40)(41) to secure the assembly.


Note: Make sure the data cable is not pinched when installing the right pedestal (A3).

(b) Remove screws (42)(44) from left and right pedestals (A3)(A4).

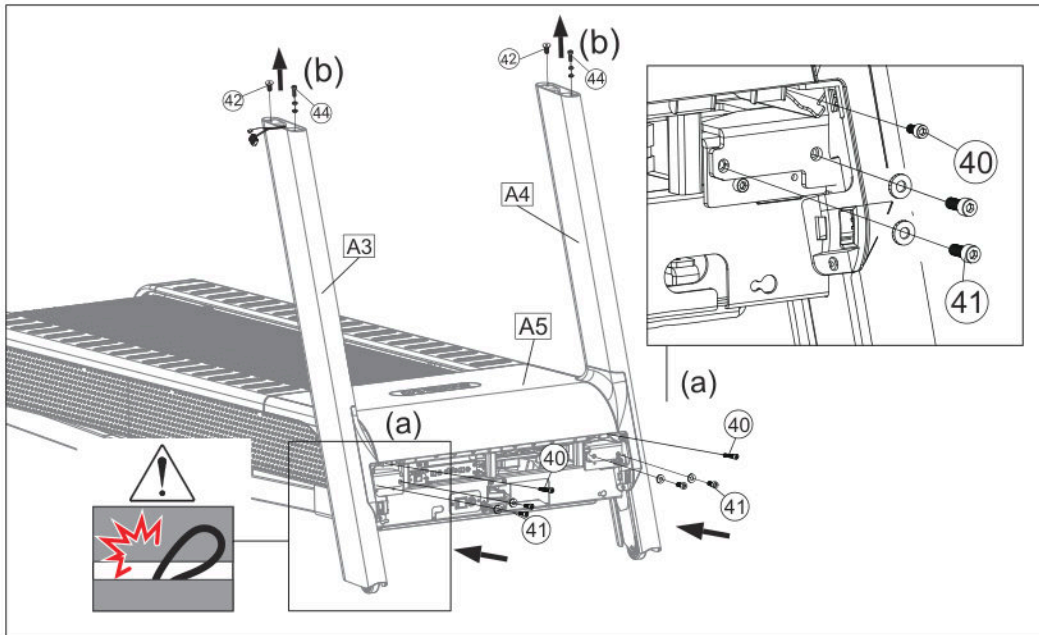


STEP 3 Display Panel Installation

- (a) Remove the left and right covers from the handlebar assembly (A2).
- (b) Attach the handlebar assembly (A2) to the left and right pedestals (A3) (A4), then mount screws (42) (44) in position. After all screws on the left and right pedestals (A3)(A4) were mounted in position, fully tighten all mounting screws to secure the assembly. (Note: Make sure the data cable is not pinched.)
- (c) Install the connector in the handlebar assembly (A2) on the data cable in the right pedestal (A3) as shown.

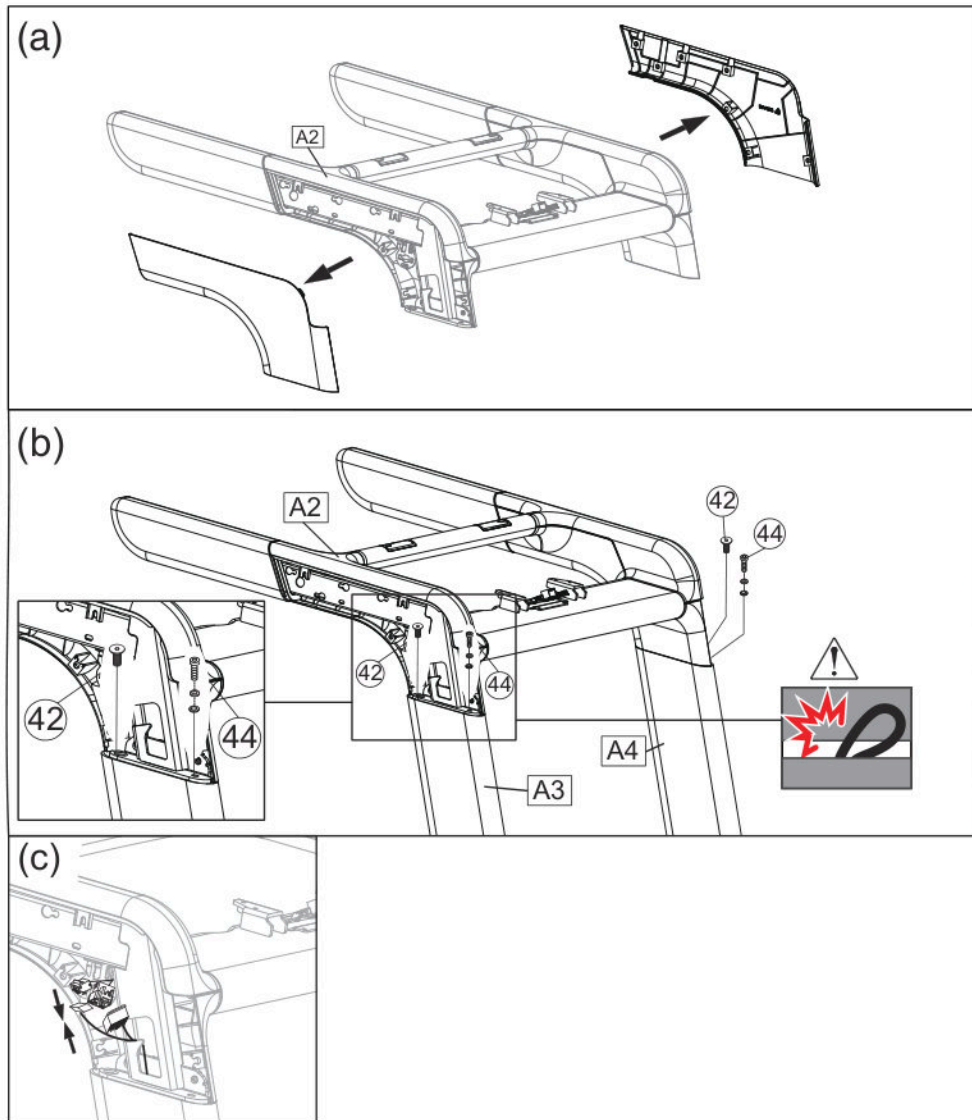


STEP 3 Display Panel Installation (Cont.)

- (d) Remove screws (43) from the handlebar assembly (A2).
- (e) Remove the rear cover of the display panel (A1), and anti-slip pad (46), then loosen the screw (47). Unplug the data cable as shown in the figure, and then remove the bottle holder (49).
- (f) Insert the display panel into the 2 mounting brackets on the handlebar assembly (A2), and secure the display panel (A1) with screw (43). Plug the data cable back in and secure the bottle holder (49) with screw, then install the screw cap (48) and anti-slip pad (46) in sequence.
- (Note: Make sure the data cable is not pinched)

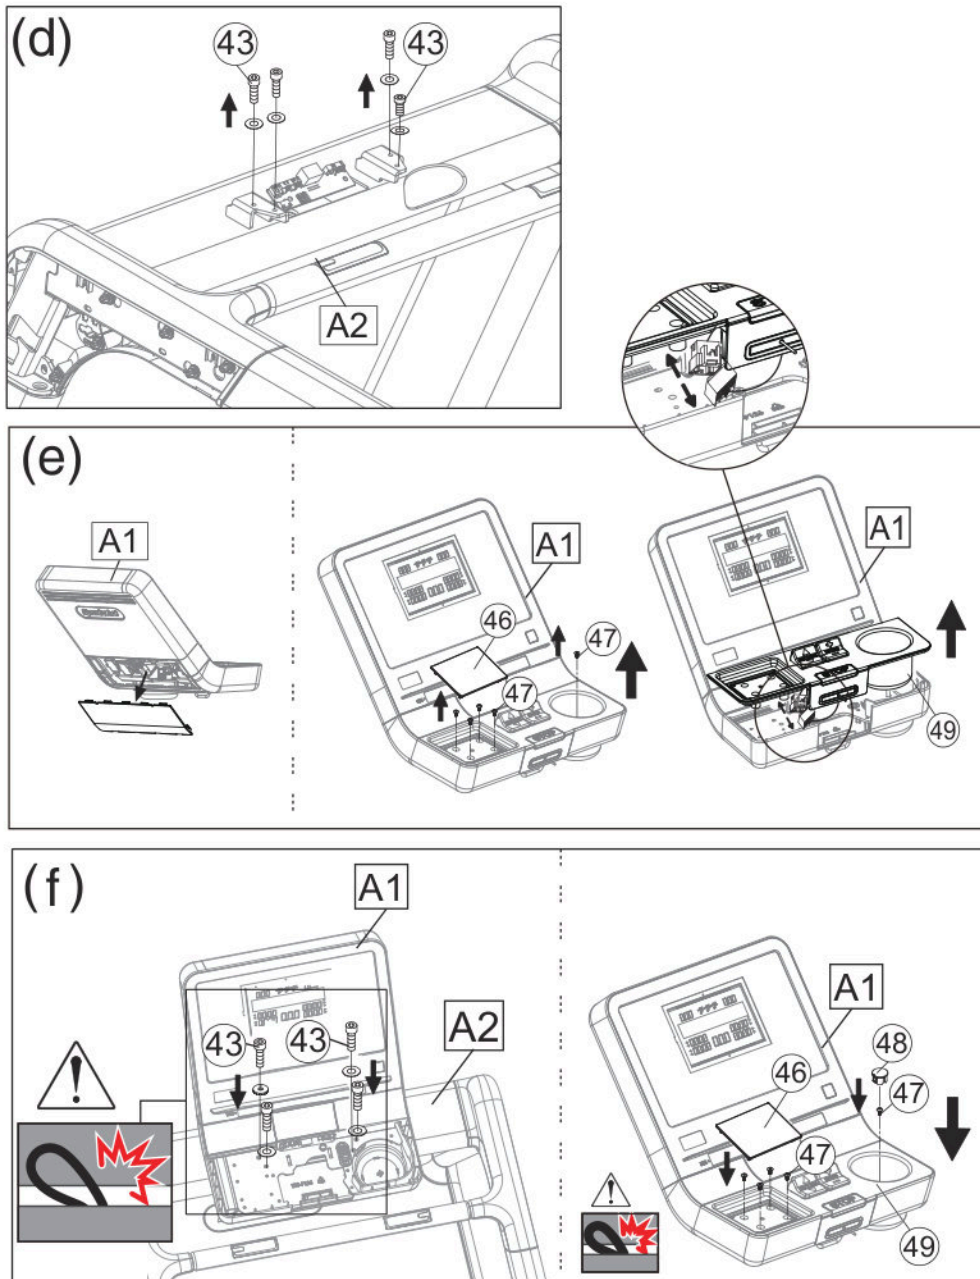

STEP 3 Display Panel Installation (Cont.)


- (g) Pull out the data cable from the handlebar assembly (A2), and connect it with the cable coming from the display panel (A1).
- (h) Connect the cable connectors on the display panel (A1) to the cable connectors coming from the circuit board and handlebar assembly (A2).
- (i) Attach the rear cover to the display panel (A1) then put left and right cover back. Tighten the mounted screws then put back the charging port cover (25). (Be careful not to pinch the cables when assembling left and right covers.)

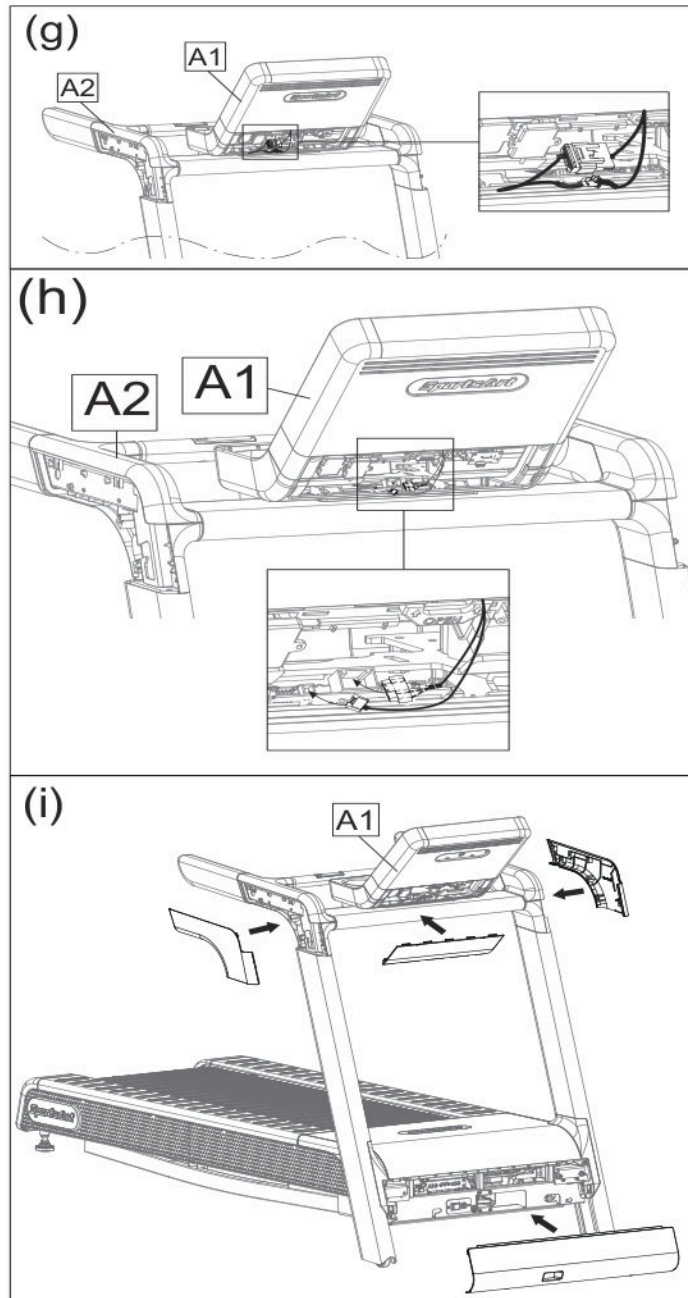

STEP 4 Move the Treadmill into Place for Use

Hold the rear of the walking deck in area A, and then lift the treadmill to roll it into desired position.


Warning: Do not place the treadmill on a thick carpet or rug as it may interfere with the walking belt. Place a wooden board on the carpet to keep carpet fibers out of the treadmill if unavoidable.

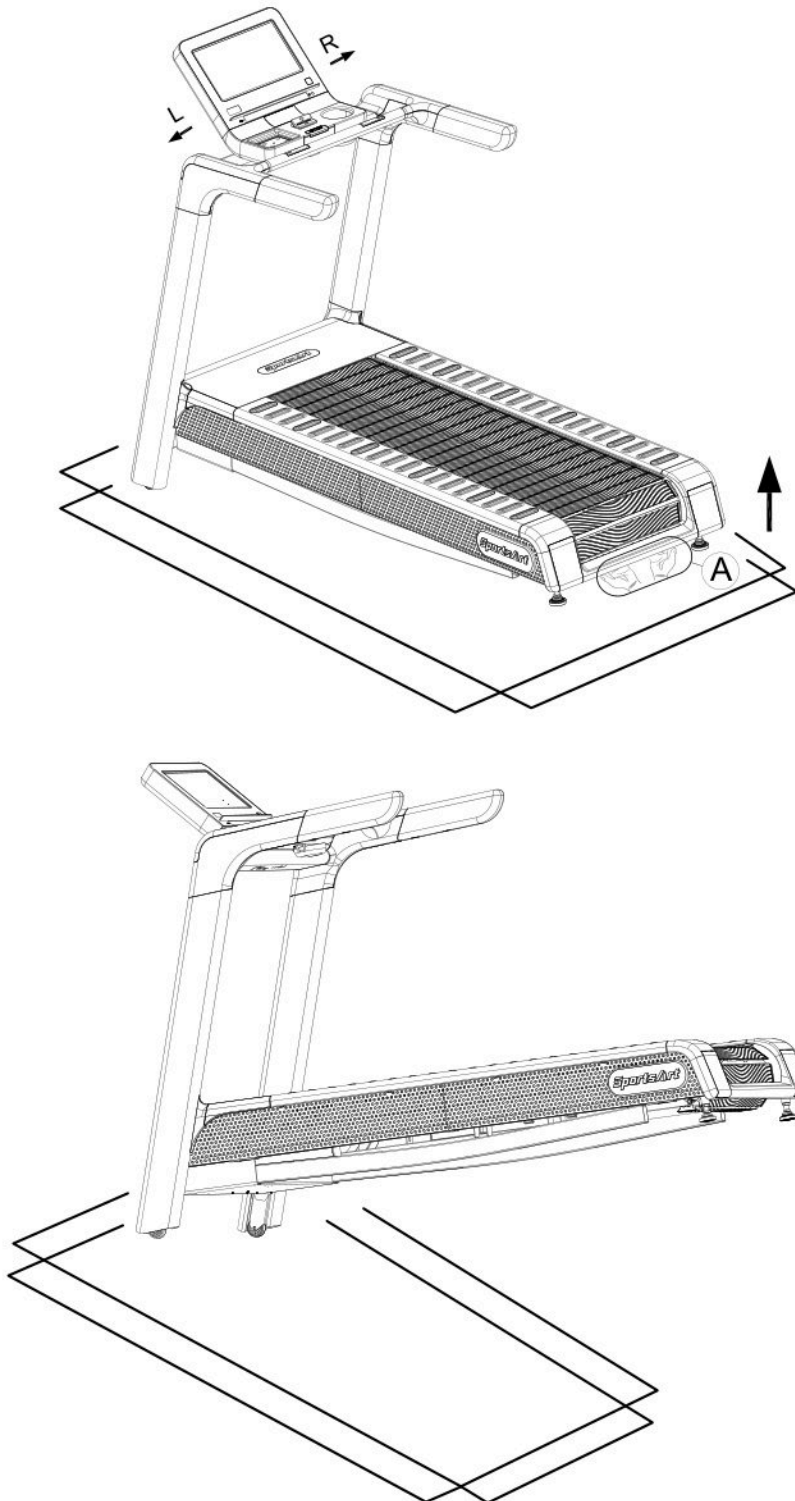

STEP 5 Level the Treadmill


Press downward on the rear part of the treadmill as shown. Inspect whether the treadmill rests flat on the floor. If the treadmill wobbles, adjust treadmill levelers as follows:

- (a) Loosen the lever nut.
- (b) Rotate the leveler foot downward until touching the floor.
- (c) Rotate the leveler nut upward against the frame of the product to secure this position.

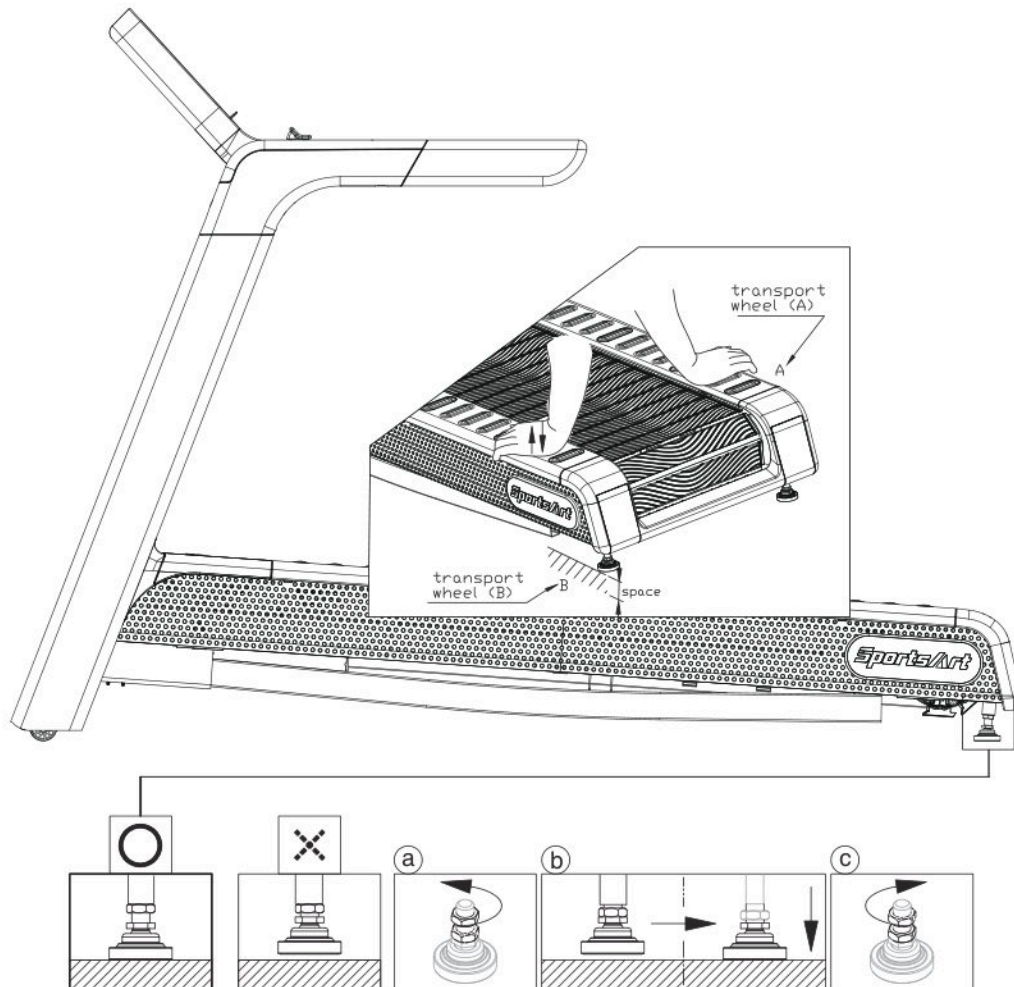

STEP 6 Center the Walk Strips

- (a) First, make sure the treadmill is on a level surface and the incline is at 7%.
- (b) Have somebody walk on the treadmill without holding onto the handrails. Start the speed at a lower rate of 3kph/2.5mph to check if the walk strips are aligned and if there is an equal amount of space between walk strips and side-rails on both sides. Remove the rear cover and turn the rear roller adjustment screw to adjust the walk strips if there is misalignment.
- (c) Check if the walk strips are aligned to the edge of the cover. Just slightly off center is acceptable.
- (d) Have someone running on the treadmill for 2 min., and check if the walk strips are shifted off-center, if so, go back to step (b) for readjustments.
- (e) Ensure that the walk strips are correctly centered, and proceed to STEP 9.
- *Make adjustments as needed, but avoid turning rear roller screws more than one quarter rotation at a time.

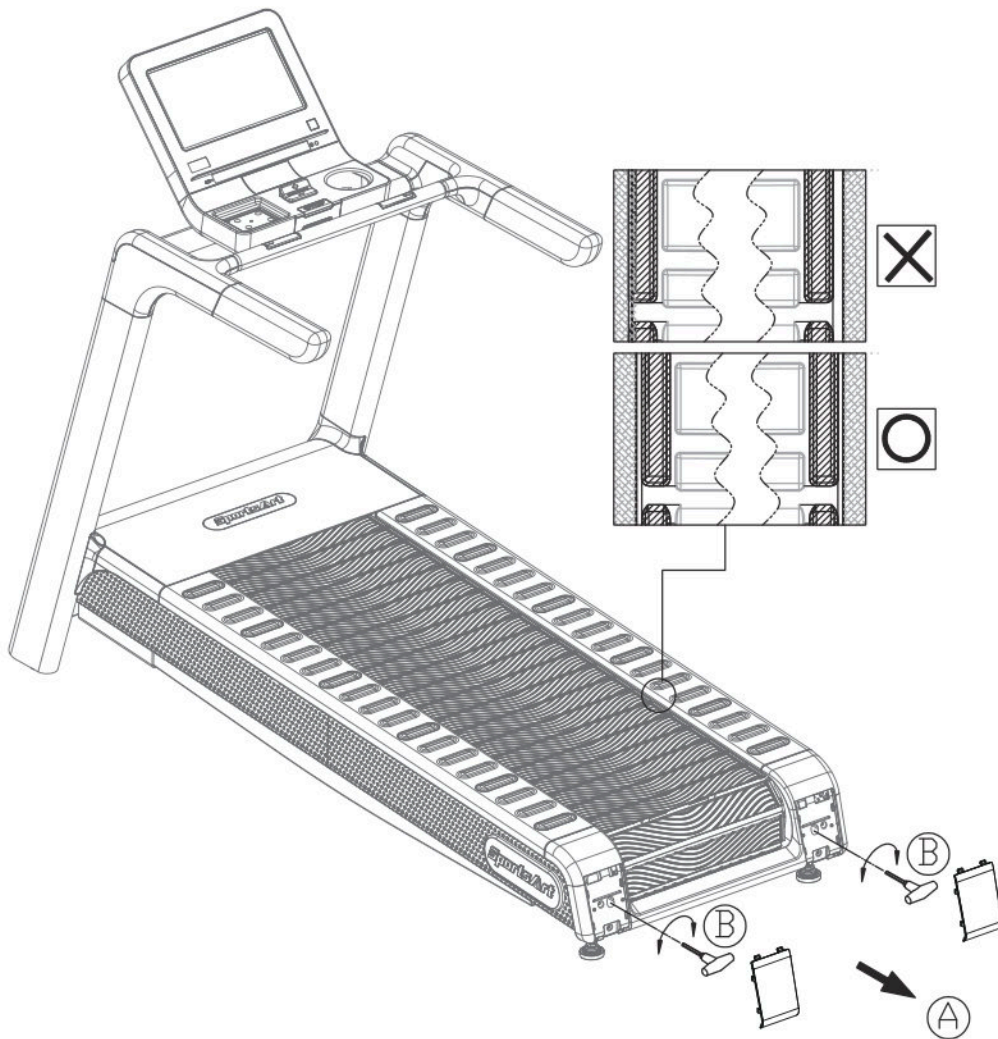


STEP 7 Check and tension the Walk Strips

Use the probe under left foot rail (as shown below) to inspect if the walk strips are correctly positioned.

(a) First remove the non-slip shim on left foot rail, then insert the probe to inspect whether the red mark on the probe is flush with the surface (as shown in the boxes, circle and crosses indicate right and wrong positions of the probe).


(b) If not, open the left rear cover of the treadmill and find the T-shaped wrench to adjust the walk strip tension.

NOTE: The walk strip should be replaced if it is worn out and aluminum alloy interior exposed.

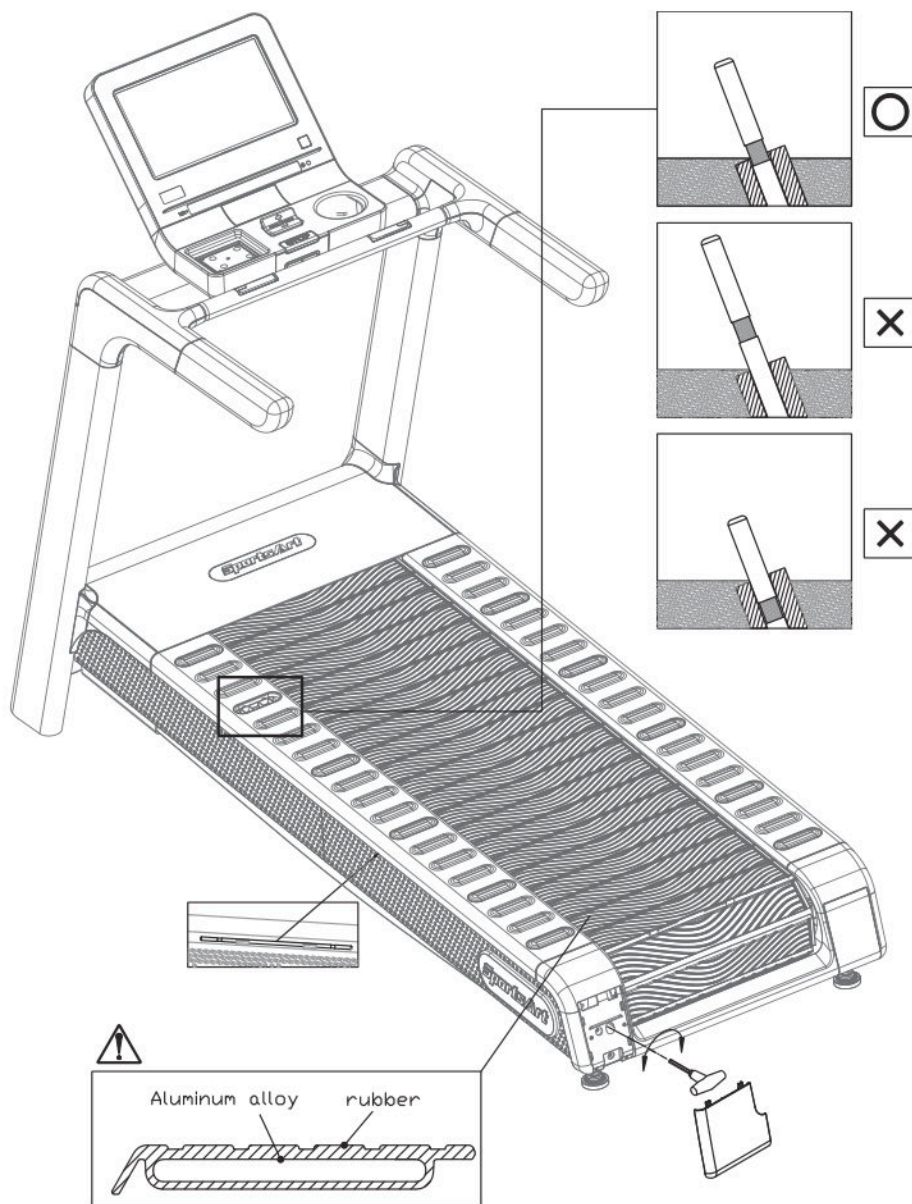

STEP 8 Power Cord Installation

- (a) Please open the charging port cover.
 - (b) Remove screws (50) from the power connector on the product.
 - (c) Insert the power cord plug into the connector on the product.
 - (d) Use screws (45) to secure the power cord plug (A8) into place.
 - (e) Insert the other end of the power cord (A8) into a proper power socket and thread the power cord out from the bottom as shown.
- Note: the figure below is for reference purposes only.

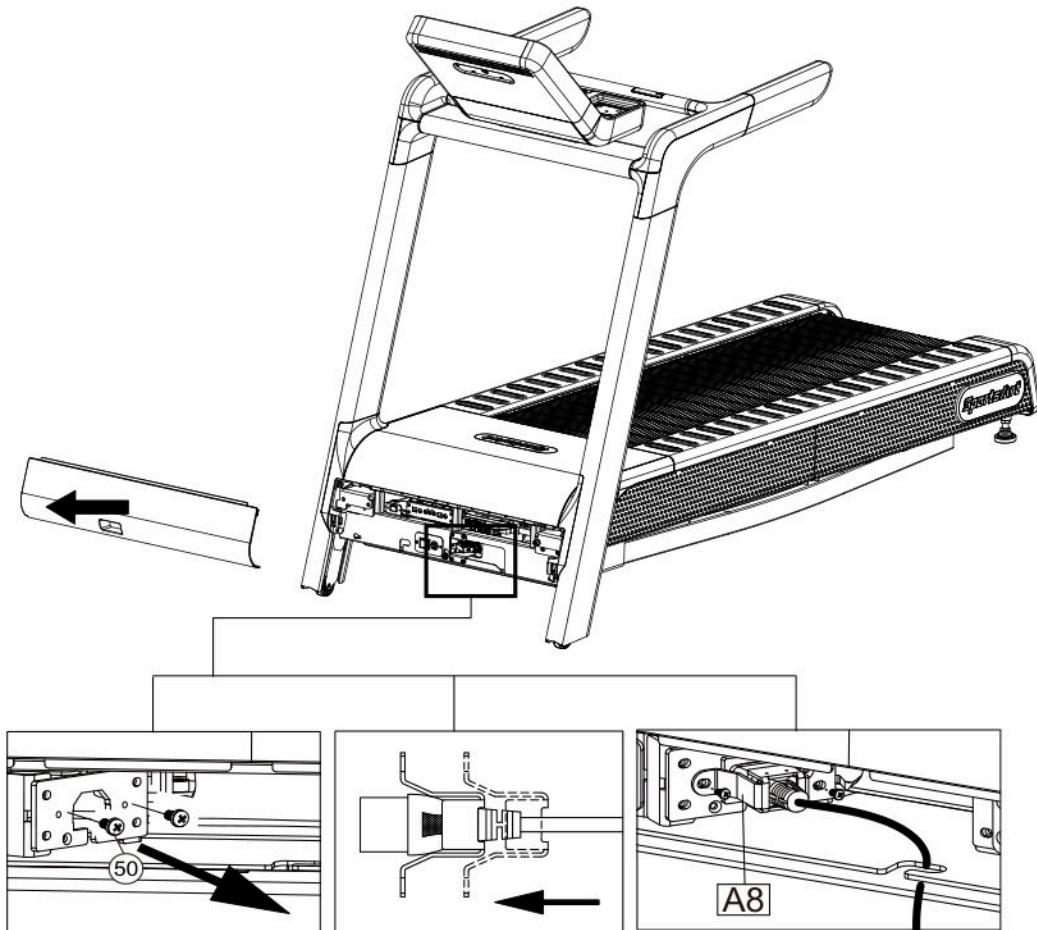

6. UNDERSTAND G660 LCD DISPLAY


DISPLAY Overview

Before using the product, please familiarize yourself with the features on the display so you can fully utilize the product and all it has to offer.



| No. | Description | No. | Description |
|-----|---------------------------------------|-----|-----------------------------|
| 1 | LCD window | 10 | GOAL |
| 2 | MODE | 11 | RUN/PUSH + - adjustment key |
| 3 | CHANGE DISPLAY | 12 | PAUSE/RESUME |
| 4 | GO/ENTER | 13 | Wake-up key |
| 5 | QR Code \ NFC tag | 14 | Safety key |
| 6 | USB port | | |
| 7 | SA WELL+ | | |
| 8 | RUN/PUSH + - adjustment Toggle Switch | | |
| 9 | STOP key | | |

DISPLAY Parameter Window

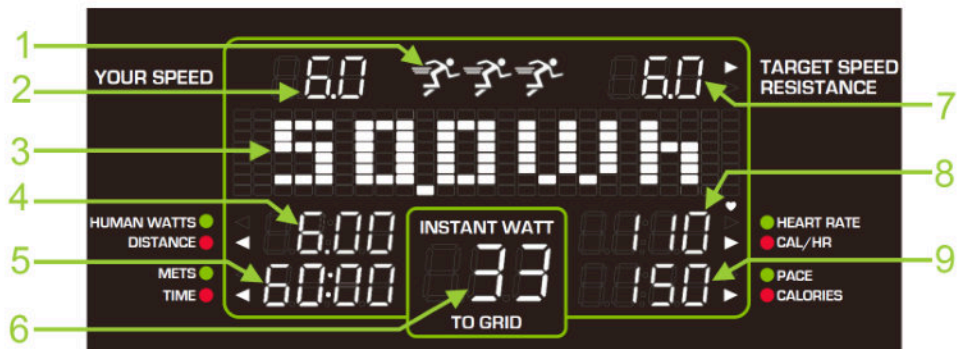




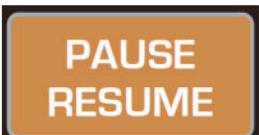


| No. | Description |
|-----|--|
| 1 | The light man signal: a. In RUN mode: When actual speed is < target speed, the figure will keep moving. When actual speed is >= target speed, the figure will stay lit in the middle. b. In PUSH mode: The figure will keep moving. |
| 2 | Displays the actual speed. |
| 3 | Displays text and graphics. |
| 4 | HUMAN WATTS: Your current HUMAN WATT amount. DISTANCE: The distance you've covered or the distance still remaining in your current program. |
| 5 | METS: Your current MET. TIME: Your time covered or remaining in your workout. |
| 6 | Real-time watts being put back into the grid. |
| 7 | Your TARGET SPEED or RESISTANCE. |
| 8 | HEART RATE: Real-time heart rate monitoring (via HTR contact plates). CAL/HR: Calories burned per hour |
| 9 | PACE: Your current one mile pace. CALORIES: Total calories burned during current workout. |






DISPLAY Specifications

| Parameter | Spec. |
|----------------------|--|
| HUMAN WATTS | 0 - 9999 |
| DISTANCE | 0.00 - 9999 Mile/Km (display maximum of 2 decimal places) |
| METS | 0.0 - 99.9 |
| TIME | 0:00 - 99:59 ; 100 - 9999 minute |
| Instant Watt To GRID | 0 - 200 Watts |
| TARGET SPEED (RNU) | 2.0 - 12.0 MPH or 3.0 - 20.0 KPH (Weight: 45KG / 100LB and above) |
| RESISTANCE (PUSH) | 1 - 6 |
| HEART RATE | 35 - 220 bpm |
| CAL/HR | 0 - 9999 K-CAL |
| PACE | Min : Sec (Time spent per mile (km)) |
| CALORIES | 0 - 9999 K-CAL |
| MODE | RUN , PUSH |

DISPLAY Button Function

| Element | Description |
|---|---|
|  | <p>Wake up the display from sleep mode.</p> |
|  | <p>Press this button to go to RUN mode, and the LED light on the top will stay lit.</p> |
|  | <p>Press this button to go to PUSH mode, and the LED light on the top will stay lit.</p> |
|  | <p>Press this button to change display messages, and the LED light on the left will stay lit. Green light shows the messages marked as green dots. Red light shows the messages marked as red dots.</p> |
|  | <p>Press this button to quick start (GO) or to confirm (ENTER).</p> <p>(1) When in start screen, press <GO/ENTER>key to directly start your workout by skipping setting of user's age, weight, and workout program.</p> <p>(2) When entering or setting parameter, press this button to confirm your setting progress.</p> |
|  | <p>Press this button to pause or to resume workout.</p> <p>In RUN mode:</p> <p>(1) To pause workout, press <PAUSE/RESUME> key and the running belt will slow down and stop the workout.</p> <p>(2) To restart workout, press <PAUSE/RESUME>key and the running belt will start moving from 2.0MPH(3.0KPH).</p> <p>In PUSH mode:</p> <p>(1) To pause workout, press <PAUSE/RESUME> key and the running belt will slow down and stop the workout.</p> <p>(2) To restart workout, press <PAUSE/RESUME>key and the running belt will start from 2.0MPH(3.0KPH) and the resistance will start from the previous level before paused.</p> |

DISPLAY Button Function (Cont.)
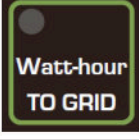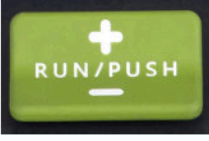
| Element | Description |
|---|---|
|  | <p>(1) In RUN mode, this button is used to adjust speed. Press +/- on the <RUN/PUSH> key to increase/decrease 0.1MPH (KPH) each time, long press for faster increase/decrease by 0.1MPH (KPH).</p> <p>(2) In PUSH mode, this button is used to adjust resistance. Press +/- on the <RUN/PUSH> key to increase/decrease 1 level of resistance each time, long press for faster increase/decrease by 1 level of resistance.</p> |
|  | <p>Press this button to choose <TIME> as your goal, and the LED light on the top will stay lit.</p> |
|  | <p>Press this button to choose <DISTANCE> as your goal, and the LED light on the top will stay lit.</p> |
|  | <p>Press this button to choose <CALORIES> as your goal, and the LED light on the top will stay lit.</p> |
|  | <p>Press this button to choose <Watt-hour TO GRID> as your goal, and the LED light on the top will stay lit.</p> |
|  | <p>The adjustment toggle switch has the same function as <RUN/PUSH + - > key on the console.</p> |
|  | <p>Press this key to stop the exercise, hold down to go back to start screen.</p> |


7. SAFETY TIPS FOR USING G660 TREADMILL

SAFETY TIPS Guidelines on Safety Mechanism

The unit is equipped with a safety key so that one can immediately stop the belt and shut off the unit to prevent accidents from happening.


The flashing key sign shown on the display indicates that the safety key has been removed and the unit will not start again until it has been reinserted.

- (a) **Stop button:** Press the stop button shown in figure (a) to stop the device. To restart the device, please follow the standard operating procedure.
- (b) **Safety key:** Simply pull the safety key as shown in figure (b) and the treadmill will come to a halt. To start it up again, just attach the key and you are back up and running again.
- (c) **Emergency dismount:** Hold on to railing and stand astride the treadmill belt as shown in figure (c). Step off the treadmill when it stops running.
- (d) Noise emission under load is higher than without load.
- (e) In the 40 dBA ambient noise environment with the treadmill going without load, the noise level will reach 75dBA at 1m/1.3m height above the device. (The noise level depends on the treadmill speed)
- (f) Poor position during workout or over-exercising can lead to injuries. Please read the basic precautions before using the unit.

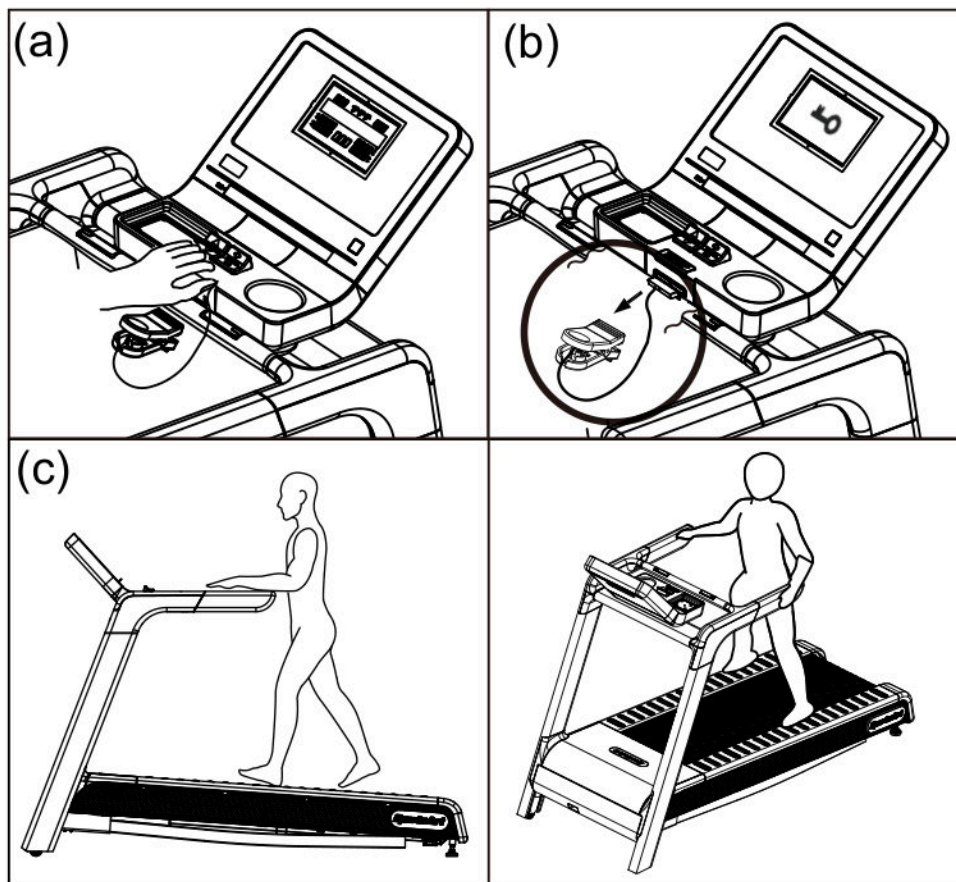

SAFETY TIPS Safety Operating Area


- (a) Safety clearance required as shown below. Do not allow people to be near this area when operating.
- (b) The stationary handlebar (highlight by mark D) is for heart rate measurement. Do not hold it as support while exercising.
- (c) Make sure to stand on the center of the running belt where are marked with green round labels at area (E) while exercising.
- (d) The area of the running surface is marked with the slash pattern as shown below.

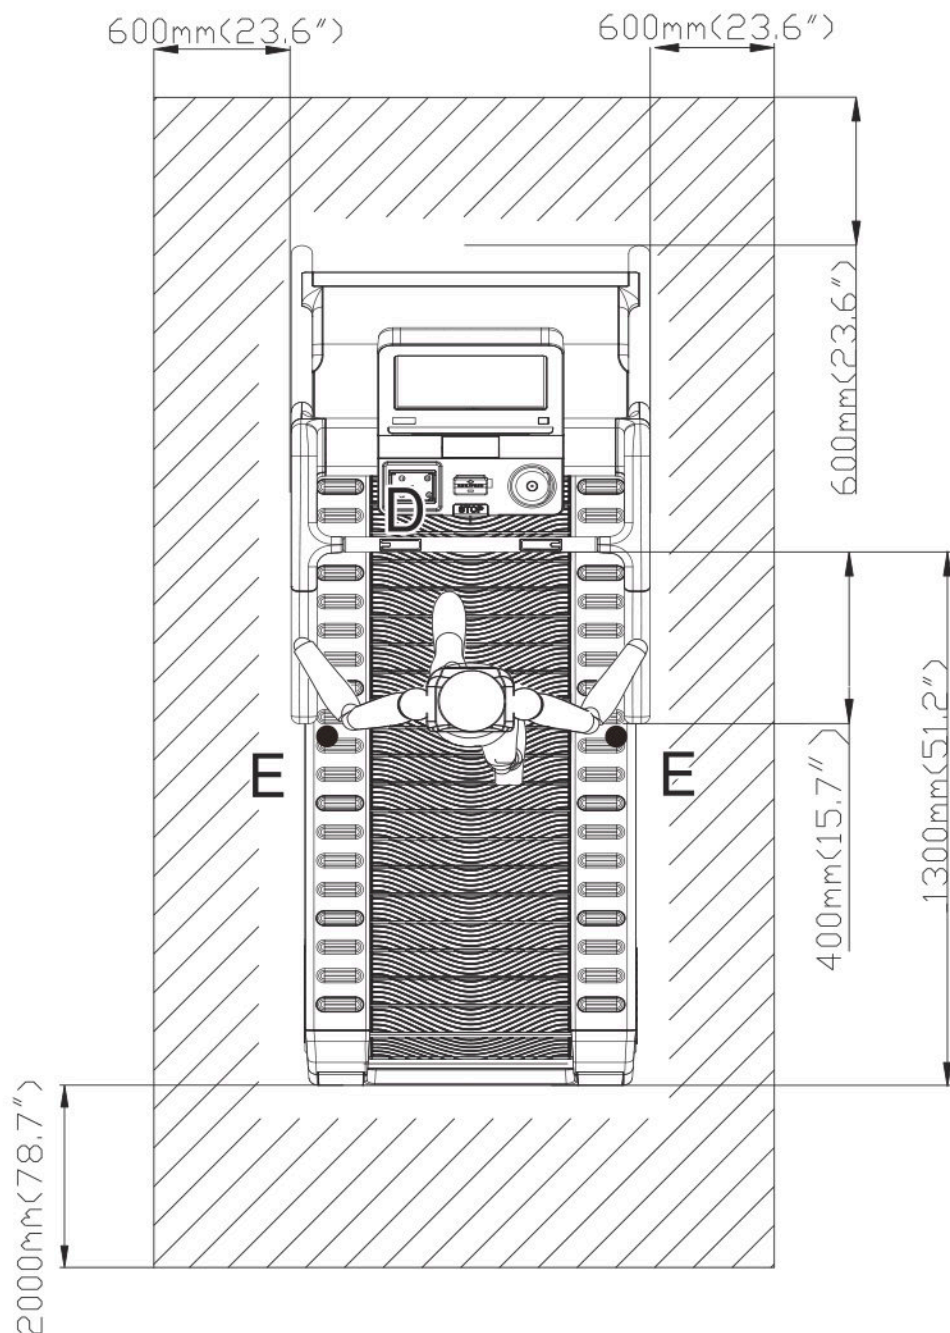

SAFETY TIPS Mounting and Dismounting Instructions

Get on the treadmill: To mount a treadmill properly, use the handrails to balance while you step onto the sides, straddling the belt. Step onto the belt before start exercising.

Get off the treadmill: Always wait for the belt to come to a complete stop before dismounting the treadmill.

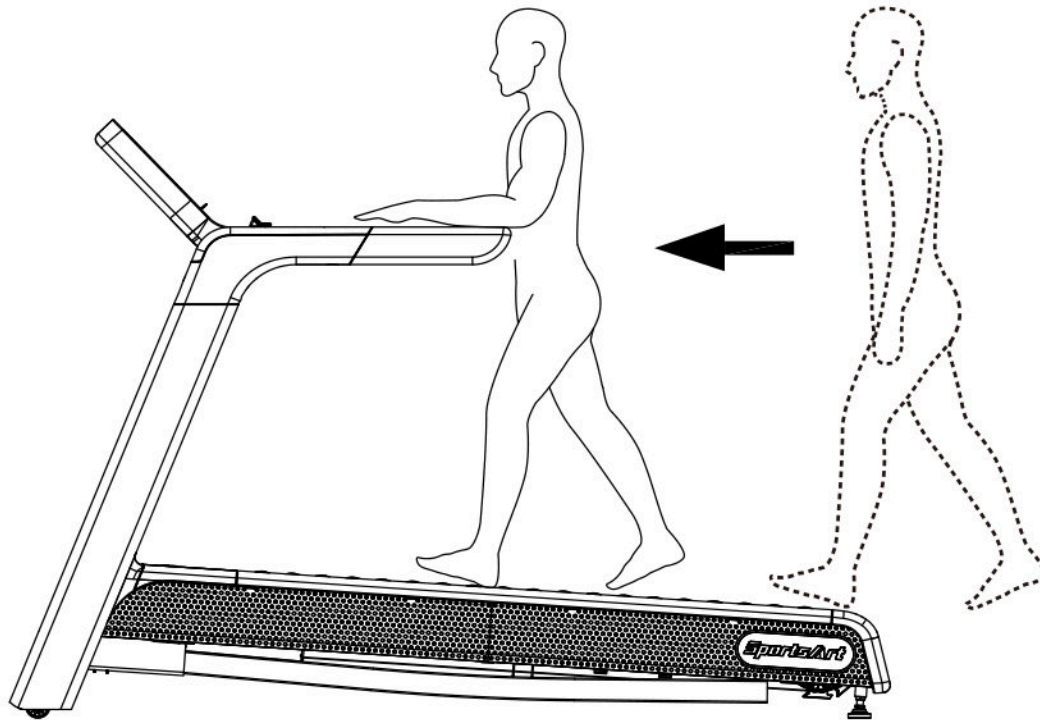

8. OPERATE THE PRODUCT

OPERATION | Start Screen

1. For safety reasons, make sure the safety key is properly clipped onto your clothes before operating this product.



2. Turn on the power of the treadmill or press the wake-up key located on the bottom right corner of the display, and the display will show the start screen after hearing a “beep” sound.




OPERATION GO mode


Press <GO/ENTER>key or "+" on the <RUN/PUSH> key, then the screen will start counting down by showing 3,2,1,0,GO on the display. Start your workout when the running belt starts to move.

The treadmill will start in RUN mode, begins with speed 2.0 MPH (3.0 KPH) and will use the default values (35y/o, 75kg/165lb) at the beginning of the workout.

You can also switch to PUSH mode, and the resistance will start the training with default level 1.

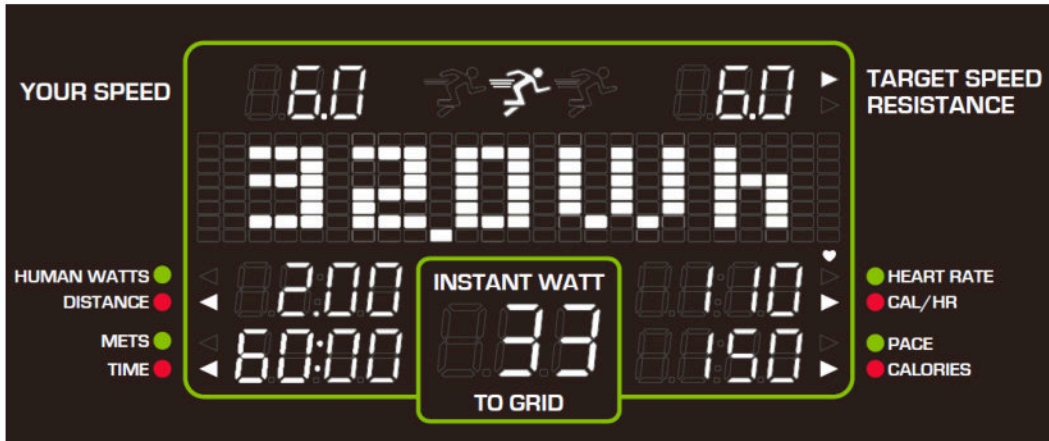

RUN mode

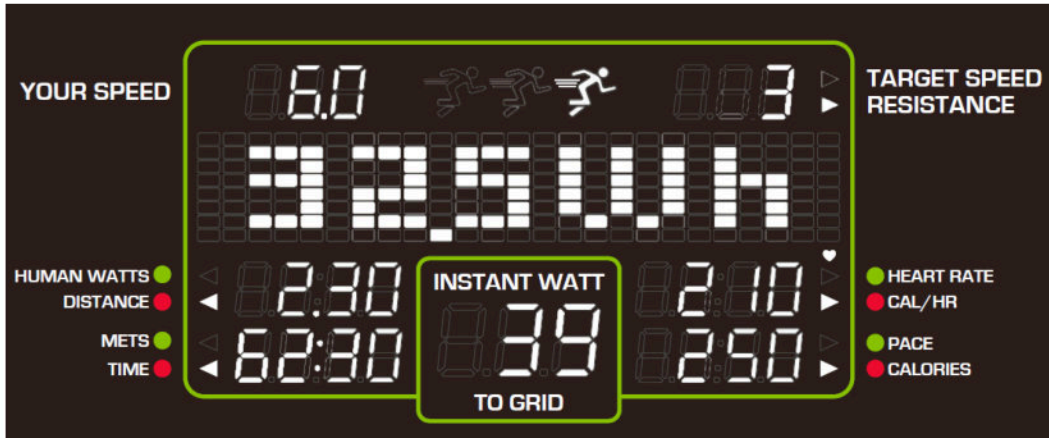

PUSH mode

OPERATION User Information Settings

For accurate data on burned calories, input actual weight information.



For heart rate suggestions, actual age is required. For total time, distance, calories, and watt-hour to grid, follow the setting steps shown below.

1. MODE / GOAL Selection



- (1) If you first press any of the MODE buttons, you can choose any workout goal directly. Refer to “WORKOUT GOAL setting” for more details and direction.
- (2) If you first press any of the workout goal buttons, you will go directly to the setting screen of you selected goal and the MODE will be chosen as RUN mode automatically. Refer to “WORKOUT GOAL setting” for more details and direction.

2. WORKOUT GOAL Setting


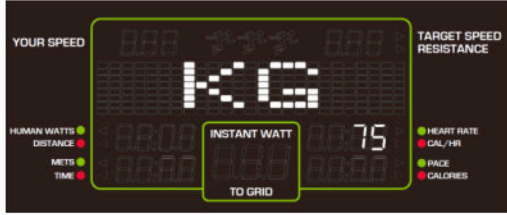
When entering WORKOUT GOAL setting, you can directly set up your target goal, following are 4 kinds of target setting and introduction.
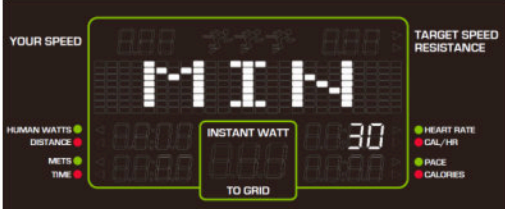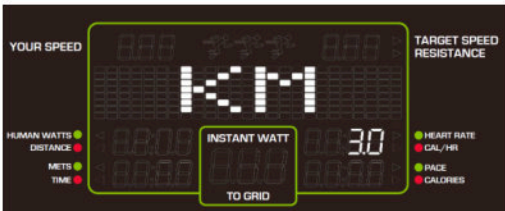
| Parameter Window | Description |
|---|---|
|  | <p>Setting <TIME> as goal: If you select <TIME>, you have chosen TIME as your goal and the LED light of TIME will be lit, which means you are ready to start the setting progress. The time duration ranges from 5-300min. The default duration is 30min. (If workout time limitation function has limit time under 30mins, then the limitation time will be consider as default duration.)</p> <ol style="list-style-type: none"> a. Press +/- on <RUN/PUSH>key to set a TIME goal. b. Press <GO/ENTER>key to confirm your selection. |
|  | <p>Setting <DISTANCE> as goal: If you select <DISTANCE>, you have chosen DISTANCE as your goal and the LED light of DISTANCE will be lit, which means you are ready to start the setting progress. The distance ranges from 0.1-99.9 miles/kilometers. The default distance is 2 miles/ 3 kilometers. (If there is workout time limitation function, then you cannot choose DISTANCE as your workout goal.)</p> <ol style="list-style-type: none"> a. Press +/- on <RUN/PUSH>key to set a DISTANCE goal. b. Press <GO/ENTER> key to confirm your selection |

OPERATION User Information Settings (Cont.)
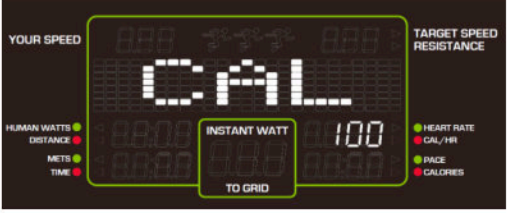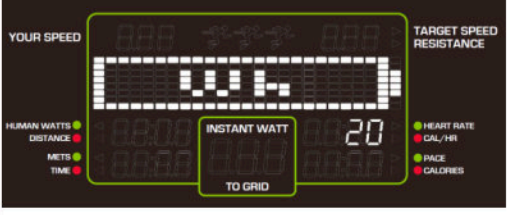
| Parameter Window | Description |
|--|---|
|  | <p>Setting <CALORIES> as goal: If you select <CALORIES>, you have chosen CALORIES as your goal and the LED light of CALORIES will be lit, which means you are ready to start the setting progress. The calories range from 100-9999 Kcal. The default value is 100Kcal. (If there is workout time limitation function, then you cannot choose CALORIES as your workout goal.)</p> <ol style="list-style-type: none"> Press +/- on <RUN/PUSH> key to set a CALORIES goal. Press <GO/ENTER> key to confirm your selection |
|  | <p>Setting <Watt-hour To GRID> as goal: If you select <Watt-hour To GRID>, you have chosen Watt-hour To GRID as your goal and the LED light of Watt-hour To GRID will be lit, which means you are ready to start the setting progress. The Watt-hour To GRID ranges from 5-100 Wh. The default value is 20 Wh. (If there is workout time limitation function, then you cannot choose Watt-hour To GRID as your workout goal.)</p> <ol style="list-style-type: none"> Press +/- on <RUN/PUSH> key to set a Watt-hour To GRID goal. Press <GO/ENTER> key to confirm your selection |

3. AGE and WEIGHT

| Parameter Window | Description |
|---|--|
|  | <p><AGE> setting: Age ranges from 10-90y/o. The default age is 35y/o.</p> <ol style="list-style-type: none"> Press +/- on the <RUN/PUSH> key to set your age. Press <GO/ENTER> key to confirm setting, then go to WEIGHT setting. |
|  | <p><WEIGHT> setting: Weight ranges from 100-330LB / 45-150KG. The default weight is 165LB / 75KG.</p> <ol style="list-style-type: none"> Press +/- on the <RUN/PUSH> key to set your weight. Press <GO/ENTER> key to confirm setting, then go to WORKOUT MODE setting. |

OPERATION Workout Mode Instruction

Select your workout mode preference from the MODE menu.

RUN :


In RUN mode, the treadmill will automatically adjust the belt speed based on set target speed in order to remain same speed between user's running speed and set target speed.

PUSH :

In PUSH mode, the treadmill will create resistance for a more intensive workout and let users burn more calories.

OPERATION During Workout Instruction

1. Users can choose their own workout program preference by selecting related MODE button, and accumulate their workout data by using the same WORKOUT GOAL (TIME/DISTANCE/CALORIES/Watt-hour TO GRID).
2. If you select <TIME> or <DISTANCE> or <CALORIES> as your workout goals, the screen will be displayed as follow: (The display will show the Watt-hour you've covered)

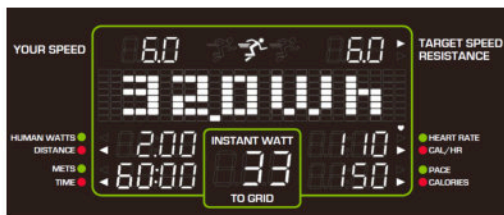


RUN mode




PUSH mode

3. If you select <Watt-hour To GRID> as your workout goals, the screen will be displayed as follow.
(The battery symbol represents your workout progress)

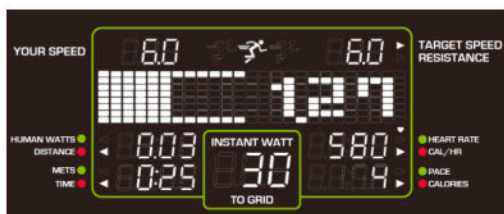

RUN mode

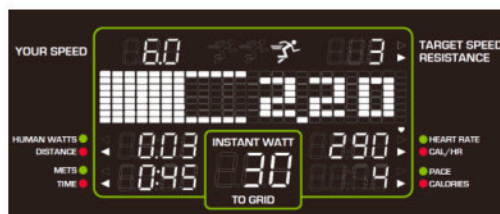


PUSH mode

OPERATION Pause or Stop Workout

- (1) When in workout mode, press <PAUSE/RESUME> key to pause your workout, your workout data will also stop accumulating and the word “PAUSED” will pop up on the display.
- (2) When in paused status, if there aren’t any operation movements in a limited time, the display will go back to start screen. If you want to resume your workout, press<PAUSE/RESUME>, then your workout data will keep on accumulating. Refer to “User Preference and Component Versions” for detail information of PAUSE time limitation.
- (3) When in paused status, press <STOP> to stop workout , then enter workout summary screen.

OPERATION Workout Summary

If you want to exit training program, press <STOP> or achieve your goal to end your workout. Then the floating message “REVIEW SUMMARY” will pop up on the display and your workout summary will be shown for 15 sec. Press <STOP> again to return to start screen.

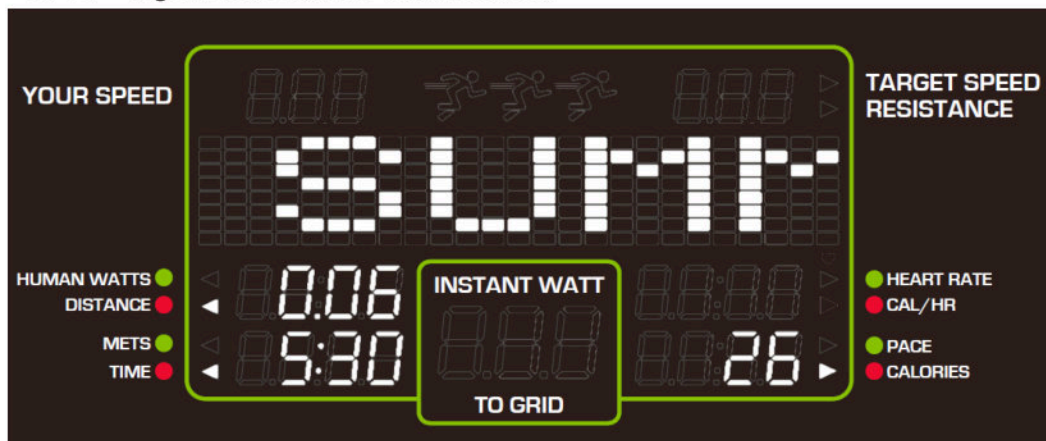

OPERATION EUP Function

When the treadmill is in standby, the driver and display panel require no power supply and the electricity is cut off to save energy. The EUP timer is adjustable. Refer to “User Preference and Component Versions” for details.

OPERATION Adjust the Incline on the Treadmill

1. When at start screen, hold the <CHANGE DISPLAY> key for three seconds, then access to User Preference and Component Versions Settings. Next, press <GO/ENTER> key to access to “DETECTION OF SLOPE”, then hold <CHANGE DISPLAY> key for three seconds in order to see the incline adjustment screen, shown as following picture:



2. The treadmill will initiate at the default incline of 7% every time you restart or wake the treadmill from standby. (The default incline of 7% is set according to 45kg user)
3. If the default incline is not set to 7 % (marked in red frame), refer to “Level the Treadmill” instruction to set the incline between 6.8% - 7.2%, or disable automatic detection of incline so that the treadmill starts normally.
4. For lighter users, adjust the incline foot to its lowest adjustment (7.7%) or slip some type of shim under front incline foot, then the adjusted value will appear on the display. Remember to disable automatic detection of incline so that the treadmill starts normally.

OPERATION User Preference and Component Versions

When at start screen, hold the <CHANGE DISPLAY> key for three seconds, then access to User Preference and Component Versions Settings. At any point in this menu you can press the <STOP> button and return to start screen.

Please refer to the following setting procedures:

(1) UNITS

“MPH” or “KPH” will scroll across the window, press +/- on the <RUN/PUSH> key to toggle between the two settings. When your preference appears, press the <GO/ENTER> key to confirm and proceed to the next setting.

(2) PROGRAM VERSION

The following program version will scroll across the window, press +/- on the <RUN/PUSH> key to view each program version. Press the <GO/ENTER> key to proceed to the next setting.

- (a) CTL xxxx : Display program version
- (b) DRV xx-xxxx : Drive board version
- (c) MI xx-xxxx : Micro Inverter drive board version
- (d) SA WELL+ x.x.x : SA WELL+ board version
(Available with optional SA WELL+)

(3) TOTAL DISTANCE

“TOTAL DISTANCE xxxxxx KM” or “TOTAL DISTANCE xxxxxx MILE” will scroll across the window, press the <GO/ENTER> key to proceed to the next setting.

(4) TOTAL TIME

“TOTAL TIME xxxxxx HOURS” will scroll across the window, press the <GO/ENTER> key to proceed to the next setting.

(5) TOTAL ENERGY

“TOTAL ENERGY xxxxxx KWH” will scroll across the window, press the <GO/ENTER> key to proceed to the next setting.

(6) PRODUCT SERIAL NUMBER

“S/N xxxxxxxx” will scroll across the window (as shown in the following figure, the number 1234567), press the <GO/ENTER> key to proceed to the next setting.



OPERATION User Preference and Component Versions (Cont.)

(7) LANGUAGE

The current country selected will scroll across the screen, press +/- on the < RUN/PUSH > key to toggle between languages. Press the <GO/ENTER> key to confirm and proceed to the next setting.

(8) EUP TIME

The window will show "EUP", press +/- on the < RUN/PUSH > key to change the sleep timer. Press the <GO/ENTER> key to confirm and proceed to the next setting.

Note: If the timer is set less than 5 minutes, EUP mode will be deactivated.
The setting range is 5-600 minutes or OFF.

(9) TIME LIMIT

The window will show "LIMIT", press +/- on the < RUN/PUSH > key to make your selection. Press the <GO/ENTER> key to confirm and proceed to the next setting.

Note: If the timer is set less than 5 minutes, program time limit mode will be deactivated. The time limit ranges from 5-60min or OFF.

(10) PAUSE TIME

The window will show the message of "PAUSE TIME", press +/- on the < RUN/PUSH > key to set the pause duration, then press <GO/ENTER> to confirm and proceed to the next setting.

Note: Setting pause duration range: 2-60 min. It is set to 2 min by default.

(11) BEEP SOUND

The screen will show "BZ", press +/- on the < RUN/PUSH > key to toggle between ON or OFF. Press the <GO/ENTER> key to confirm and proceed to the next setting.

(12) Enable/ Disable automatic detection of incline settings

When the floating message " DETECTION OF SLOPE" appears on the display, press +/- on the <RUN/PUSH> key to choose YES or NO for automatic detection of incline, then press <GO/ENTER> key to finish setting and return to start screen.

Note:

1. YES: Enable automatic detection of incline (with default value)
NO: Disable automatic detection of incline. (the incline value will not show on the display)
2. Refer to "Adjust the Incline on the Treadmill" for more details.

9. ABOUT HEART RATE DETECTION

Heart rate detection functions are selected at the time of purchase. Not every product has every type of heart rate detection. The following explains factors that influence the performance of two of the most common types of heart rate detection devices.

HEART RATE Telemetry

The words “telemetry heart rate” refer to the detection of heart rate via a device worn on the exerciser and transmitted over the air to a circuit board built into the product. Telemetry heart rate devices are commonly worn on the exerciser’s chest, where the pulse is strongest and relatively easy to detect.

The following explains conditions that affect the performance of the telemetry heart rate function in all products.

- The telemetry heart rate transmitter emits a wireless 5 kHz signal that is harmless to the human body. Keep a distance within 60cm between the heart rate receptor and the transmitter to achieve stable connection.
- If the battery is too low, the receiving distance may be shortened or there will be no reception.
- Secure the telemetry heart rate transmitter on your chest so that it stays in place without making you feel uncomfortable. Moisten the skin for better contact.
- Because the telemetry heart rate signal varies in strength from 20 Hz to 20 KHz, environmental interference can block signal reception. Physical vibration and electronic devices, including stereos, TVs, and even fluorescent lights, can interfere with signal reception. For best results, install the product in an area free from such interference.
- Space the product apart by at least 39 inches (100 cm) to avoid having the heart rate value from one exerciser appear on a neighboring product.

HEART RATE Contact

The words “contact heart rate” refer to the detection of the heart rate via sensors on the product. By holding the sensors, the exerciser can view his or her heart rate on the product display. Like telemetry heart rate, contact heart rate can be influenced by several factors. The following list includes some of these factors.

- A weak pulse makes it difficult to detect heart rate.
- Low systolic blood pressure makes it difficult to detect heart rate.
- Dry, course palms impede heart rate detection. For best results, moisten your palms. But do not apply hand lotion immediately prior to your workout, because hand lotion can gum up the contact pads.

Heart rate devices built into this product are not medical devices. Heart rate values are for reference only. Do not use them for medical diagnostic or treatment work.

CAUTION: Heart rate detection and transmission devices have been known to interfere with the operation of pacemakers, possibly endangering human life. If you have a pacemaker, exercise under your doctor’s supervision; take a test to ensure your safety during the simultaneous use of the pacemaker and heart rate detection devices. The use of such devices must be undertaken at your own risk.

Note that in dry areas in particular, static electricity can interfere with unit operation and shock people. To discharge static electricity from your body, touch something else before touching metal on the product.

10. GUIDELINES FOR EXERCISE

HOW HARD SHOULD I EXERCISE?


Studies show that to benefit from aerobic exercise, people need to maintain a certain heart rate during their workouts. Your heart rate training zone depends on your age and fitness level.

The darkened area in the chart to the right represents the recommended heart rate training zone for people of various ages. It was calculated by taking 220 minus age in years, multiplied by 65% and 80%. The area between those values is the heart rate training zone.

CAUTION: Heart rate training zones are generalizations and may not suit every person. Always check with your physician to understand what heart rate goal would be appropriate for you.

HOW LONG SHOULD I EXERCISE?

The duration of your workout must depend on your fitness level. In general, it is recommended that you maintain a heart rate within your training zone for at least 15 to 20 minutes to experience the benefits of aerobic exercise. Beginners should always start out slowly and gradually increase the duration and intensity of their workouts. As your fitness level improves, you will be able to maintain a heart rate within the training zone for longer periods of time.

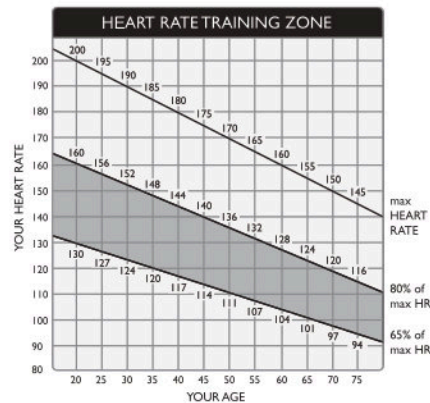

When you begin your workout, use the first several minutes to warm up. Then slowly increase the intensity of your workout to bring your heart rate into your training zone. At the end of your workout, gradually decrease your workload. Then exercise lightly to cool down.

HOW OFTEN SHOULD I EXERCISE?

Research indicates that to achieve the greatest benefit, people should exercise three to five times per week. It is important to allow sufficient time, at least 24 hours, for your body to recover after exercise.

11. MICRO INVERTER

MICRO INVERTER | Important Safety Instructions



CAUTION

These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that specified in the operating instructions unless you are qualified to do so.

PRUDENCE!

Ces instructions d'entretien sont uniquement destinées à un personnel qualifié. Pour réduire le risque de choc électrique, ne pas effectuer un autre service que celui spécifié dans les instructions de fonctionnement, à moins que vous soyez qualifié pour le faire.

To lower the risks involved in the assembly and operation of this inverter, please carefully note the meaning of the following warning symbols, abide by their messages, and thoroughly read these instructions.



This WARNING symbol indicates a risk of electric shock. Please use extreme caution when processing the procedure.



This CAUTION symbol identifies an improper operation that could result in critical safety issue or damage to the user or devices.

MICRO INVERTER | Cautionary Messages

To lower the risks involved in the assembly and operation of this inverter, please follow the intent of these messages.



CAUTION

Plates are live. Disconnect unit before servicing. No user serviceable parts inside. Refer servicing to qualified service personnel.

ATTENTION!

Les plaques sont à nu. Débrancher l'appareil avant son entretien. Aucune pièce n'est réparable par l'utilisateur. Faire appel à un réparateur qualifié pour toute intervention de dépannage.

MICRO INVERTER Cautionary Messages (Continued)



WARNING

Power fed from more than one source. Each circuit must be individually disconnected before servicing. Do not remove cover until 5 minute after disconnecting all sources of supply.

AVERTISSEMENT!

L'alimentation provient de plus d'une source. Chaque circuit doit être coupé avant toute intervention de dépannage. Attendre 5 minutes avant de retirer le couvercle une fois toutes les sources d'alimentation coupées.



CAUTION

Perform all electrical installations in accordance with all applicable local electrical codes and the National Electrical Code (NEC), ANSI/NFPA 70.

PRUDENCE!

Effectuer toutes les installations électriques en conformité avec les règlements locaux en vigueur et du Code National de l'Electricité (NEC), ANSI/NFPA 70.

MICRO INVERTER Electronic Specifications

| Input Data(3 Phase AC) | |
|--|---|
| Input power source | 3 Phase permanent-magnet generator |
| Maximum input voltage | 140V(line-to-line voltage) |
| Nominal operating voltage range | 55-125V(line-to-line voltage) |
| Maximum input current | 7A(line current) |
| Output Data(single phase AC) | |
| Maximum continuous output power | 200W |
| Output power factor rating | >0.9 |
| Nominal voltage(Operating range) | 120VAC(105.6-132.0V) (for USA) 230VAC(184.1-240.0V) (for EU) |
| Maximum continuous output current | 2.0A(for 120V) (for USA) 1.2A(for 230V) (for EU) |
| Normal output frequency(Operating frequency range) | 60Hz(59.3~60.5Hz) (for USA) 50Hz(47.4~50.1Hz) (for EU) |
| Utility interconnection voltage and Frequency trip limits and trip times | 0.16s (for USA) 0.2s(for EU) |
| Maximum units per branch | 7 (for USA, 15A branch system) 9 (for EU, 10A branch system) |
| Output controlling method | The LEVEL command of panel controller |
| Others | |
| Normal operation temperature range | +5°C~+35°C |
| Storage temperature range | +5°C~+40°C |
| Enclosure Rating | Type 1:"indoor use only" |
| Application | For SportsArt device only |


MICRO INVERTER Circuit Board & Product Settings

Frequency setting:

Micro Inverter can detect the frequency automatically without setting.

Connecting to grid power:

After Micro Inverter is installed into Eco-Powr products, the power can be linked to grid power through the product power cord, as shown in the following figure. Attention: it is necessary to cover the power cord and product connecting area with a metal cover. Unplug the power cord from the wall outlet before pulling the plug from the product. If the plug is pulled while it is connected to the power grid, it might cause the electric arc and damage the plug.

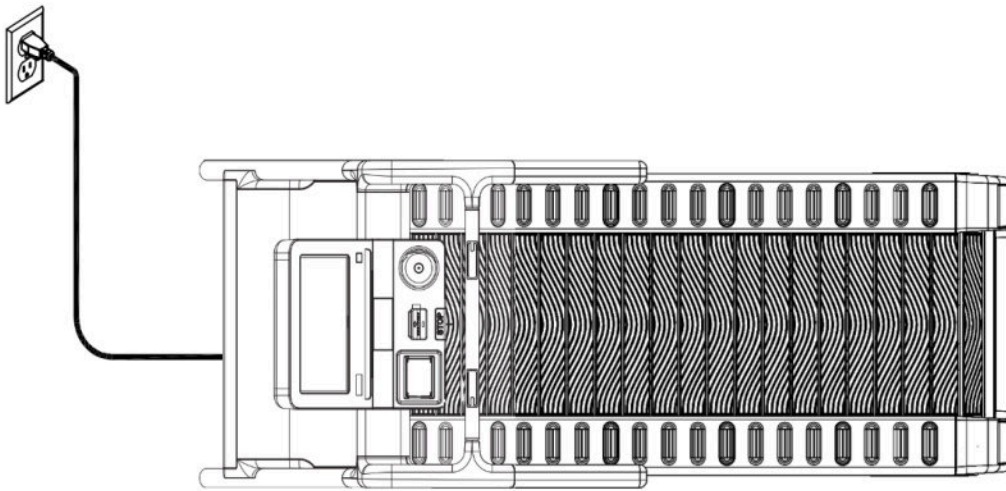


The number of products can be linked to a power circuit line:

The max wattage output of Micro Inverter is 200W. Pay attention to the electricity capacity limit (the rating of over-current protective device) to avoid overload. Different area voltage limits are shown as the following table.

| Local Grid voltage | The rating of the circuit | Number of products |
|--------------------|---------------------------|--------------------|
| 230V | 10A | 9 |
| 220V | 10A | 8 |
| 120V | 15A | 7 |
| 110V | 15A | 6 |

MICRO INVERTER Circuit Board & Product Settings (Cont.)

This optional accessory, the SportsArt ECO-POWR Daisy Chain unit connection cord, allows multiple ECO-POWR products to be powered from a single electrical socket.

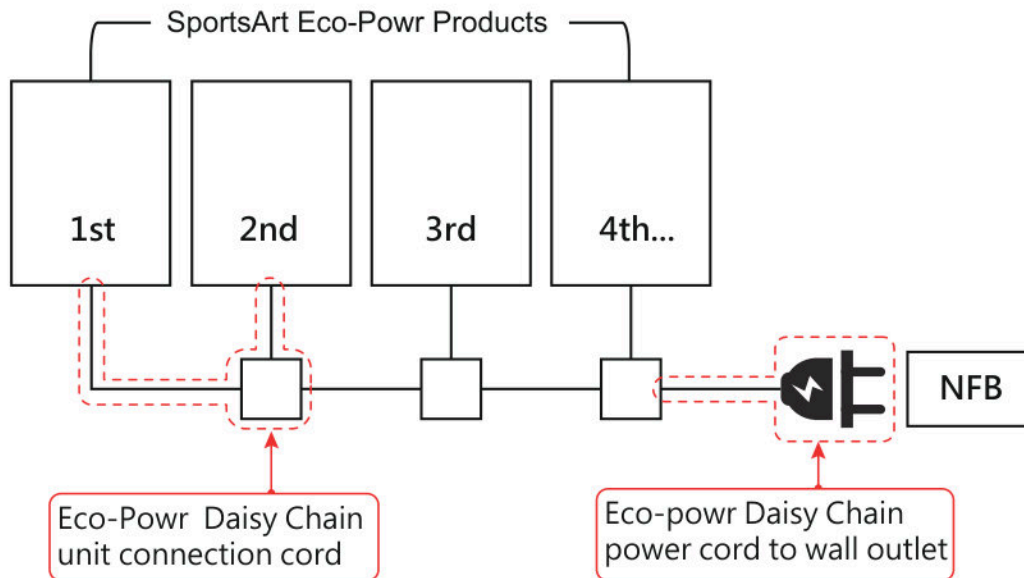

12. MAINTENANCE

This section covers maintenance topics, including instructions on replacing a fuse and lubricating the walk belt, along with the presentation of a maintenance schedule, maintenance task list, one-year maintenance log, and electronics block diagram.


MAINTENANCE Safety Precautions

- Please follow standard safety precautions when servicing on this product.
- Electronic components can carry an electrical charge even after the product has been turned off. For safety, turn off unit power. Wait five minutes to allow capacitors to discharge. Then disconnect the power cord from the wall socket (if applicable.) Only after such steps have been completed should covers be removed and electronic components accessed.
- Unplug the product and wait ten minutes before performing maintenance.
- Do NOT use a damp towel to clean the product and do perform the following maintenances.
- Do NOT use cleaners with alcohol, ammonia, or other damaging chemicals. The use of such chemicals can damage the product and void the warranty. Never spray or pour any liquid directly onto the product. Doing so can damage electronic components and void the warranty.
- Use a clean, lint-free towel, dampened with a mixture of Simple Green® all-purpose cleaner, to thoroughly clean the handlebar and the console.
- This product has moving parts that can be hazardous. Exercise caution when maintaining, operating, or moving this product.
- Do not use accessories or parts that are not specifically recommended by the manufacturer (SportsArt) . Such parts might cause injuries or cause the unit to fail and void the warranty. We will not be responsible for any safety issue that arises due to the misuse of accessories or parts. At the same time, we will terminate the warranty terms of this equipment.
- The product shall be disconnected from its power source during service and when replacing parts.
- Maintenance and repair must be performed by trained service personnel only. Improper maintenance would not only damage the machine, but also may present a danger to the exerciser.
- Keep this product out of use until maintenance is completed.
- If you need to remove the cover for repair or maintenance, be sure to contact the service station or dealer to deal with, do not operate on their own.

MAINTENANCE Error Messages

Error messages can appear on the screen as a troubleshooting aid. Error messages appear in the following format: "ERROR_X_Y".

X represents the category of the error. Y represents the specific issue.

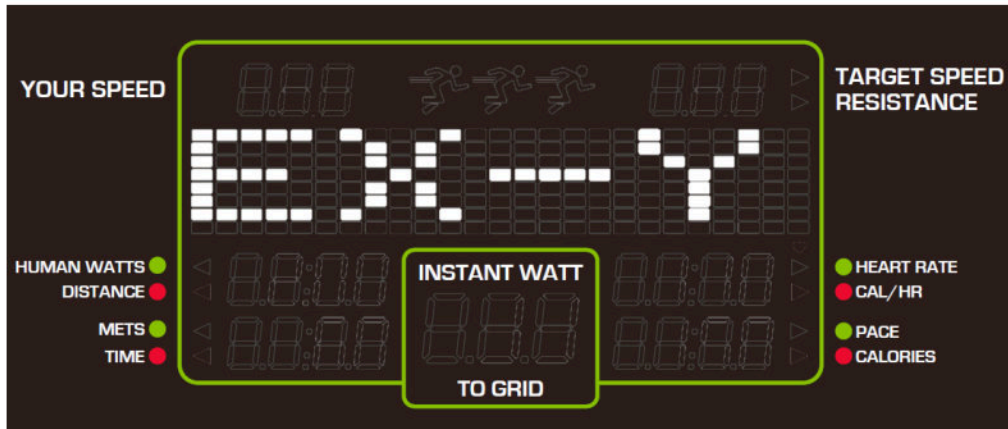

Error code explanations:

| Error code X | Error code Y | Explanation | Remarks |
|--------------|--------------|---|--|
| 1 | 1 | Boot self-test error. (Zero voltage level anomaly for AC voltage) | Micro Inverter drive board abnormality |
| 1 | 2 | Boot self-test error. (Zero current level abnormality of AC current) | Micro Inverter drive board abnormality |
| 1 | 8 | Display and Optic Sensor speeds do not match. | |
| 2 | 3 | Flywheel electromagnet is too hot. | |
| 2 | 4 | Generator is too hot. | |
| 3 | 1 | AC power loss (The island effect). | Micro Inverter drive board abnormality |
| 3 | 2 | AC power supply voltage out of operating range | Micro Inverter drive board abnormality |
| 3 | 3 | AC power frequency out of operating range | Micro Inverter drive board abnormality |
| 4 | 3 | DC BUS voltage is too high. (440V - 450V) | Micro Inverter drive board abnormality |
| 4 | 4 | DC BUS voltage is too high. (Greater than 450V) | Micro Inverter drive board abnormality |
| 4 | 5 | Booster (Step-up circuit) output voltage too high. | |

MAINTENANCE Error Messages (Cont.)

| Error code X | Error code Y | Explanation | Remarks |
|--------------|--------------|--|--|
| 4 | 6 | Booster (Step-up circuit) output over current. | |
| 4 | 7 | Buck (Step-down circuit) malfunction | |
| 6 | 1 | Generator over current. | Micro Inverter drive board abnormality |
| 6 | 2 | Generator over voltage. | Micro Inverter drive board abnormality |
| 7 | 5 | wear and tear on brake pads | |
| 7 | 6 | wear and tear on brake pads | |
| 7 | 7 | Brake board communication is abnormal | |
| 8 | 1 | When power is on, communication is abnormal. | |
| 8 | 2 | When power is on, communication is normal, however an abnormality occurs during operation. | |
| 8 | 5 | Micro Inverter drive board communication abnormality (Startup communication abnormality.) | |
| 8 | 6 | Micro Inverter drive board communication abnormality (Communication interrupted.) | |

MAINTENANCE Strings Messages**OVER SPEED**


When the speed of the treadmill exceeds 20KPH, this strings message will pop up on the display.

If the speed exceeds 21KPH and has last for 3 seconds, the machine will stop the workout.

MAINTENANCE Circuit Breaker

When there is an overload circuit, the round button will trip to disconnect the supply automatically, shown as point D in figure below. Wait 5-10 minutes before pressing the button. If an abnormality is still present, turn off the power supply and make an inspection by maintenance personnel, and then follow the boot procedure to resume normal operation.

The picture below is for reference only.

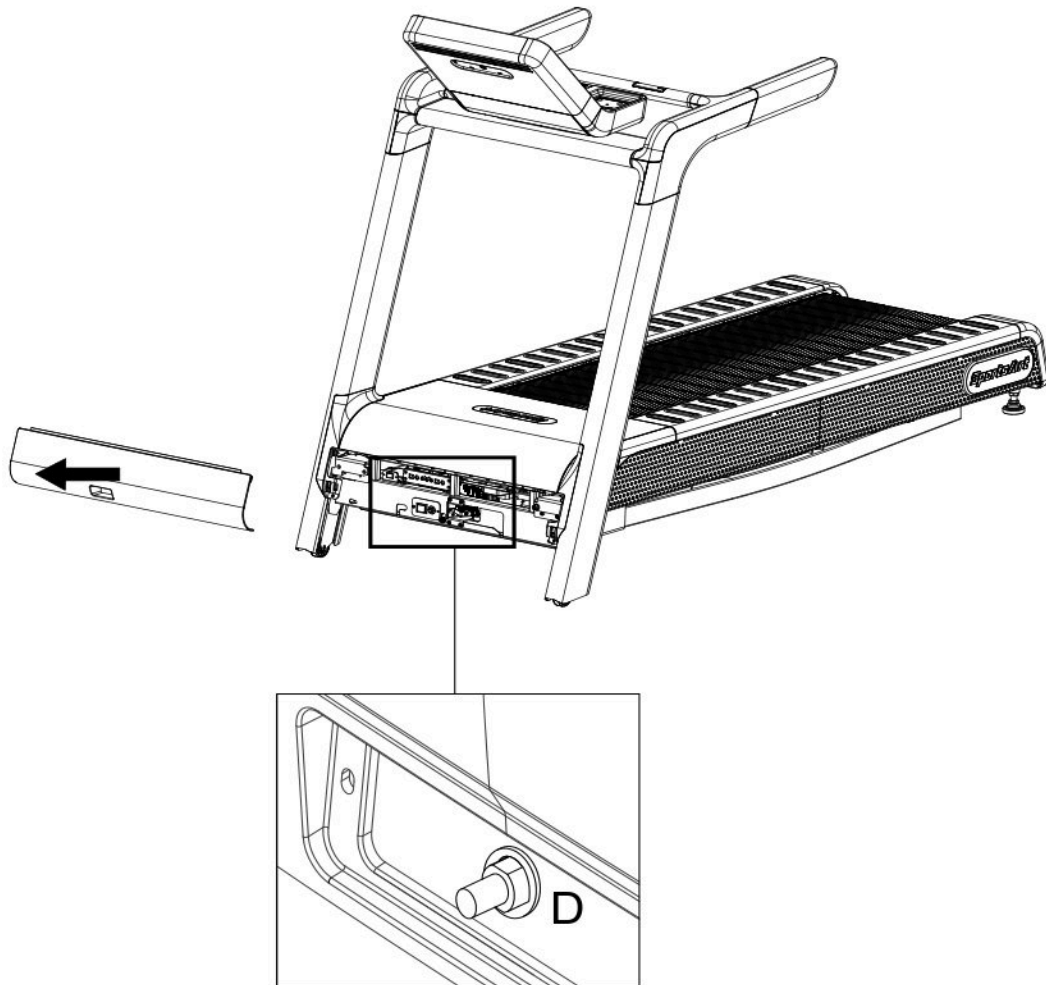


MAINTENANCE Schedule

| | Area | Day | Week | Month | Quarter | Year | Notes |
|----|----------------|-----|------|-------|---------|------|---|
| 1 | Exterior | ● | | | | | Clean |
| 2 | Screws | ● | | | | | Inspect and secure loose parts |
| 3 | Treadmill test | ● | | | | | Ensure the treadmill operates properly |
| 4 | Belt guides | | | | ● | | Inspect for normal rotation |
| 5 | Front roller | | | | ● | | Inspect for normal rotation |
| 6 | Rear roller | | | | ● | | Inspect for normal rotation |
| 7 | Interior | | | | ● | | Remove dust and debris |
| 8 | Drive belt | | | | | ● | Replace once every 3 years |
| 9 | Brake pad | | | ● | | | Replace once touches screws |
| 10 | Walk belt | | ● | | | | Inspect alignment (centering) and look for wear |



MAINTENANCE Note

The pattern depth less than 0.3 mm for walk strips is prone to slip and fall accidents occurring. It is necessary to replace new walk strips in time to ensure the safety during exercising.

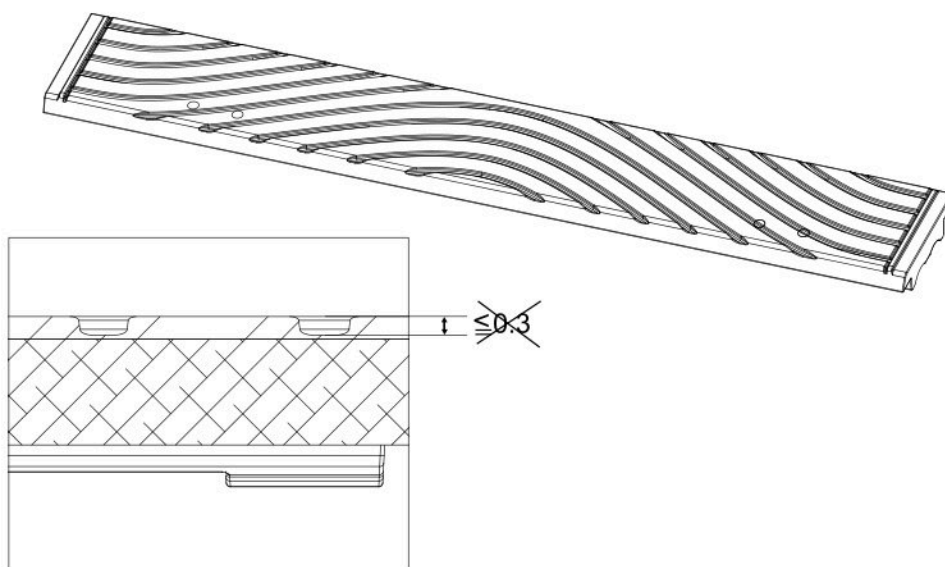

MAINTENANCE Task List

Like cars, fitness products require maintenance. Regular maintenance extends product life, and failure to maintain products can void the manufacturer's warranty. Copy the maintenance log sheet, and record maintenance work for each fitness product.

Daily tasks

1. Use a clean, lint-free towel to thoroughly clean the product exterior.
2. Inspect all screws. Secure if necessary.

Weekly tasks

Run a treadmill test weekly to make sure it is operating properly.

Monthly tasks

Inspect brake pad monthly, replace once touches screws.

Quarterly

1. Inspect the belt guides for normal rotation.
2. Inspect the front roller for normal rotation.
3. Inspect the rear roller for normal rotation.
4. Remove dust and debris from the product interior.

Yearly

Replace the drive belt once every three years.

Caution

- Please follow standard safety precautions when servicing this product.
- Do NOT use cleaners with alcohol, ammonia, or other damaging chemicals. The use of such chemicals can damage the product and void the warranty. Never spray or pour any liquid directly onto the product. Doing so can damage components and void the warranty.

MAINTENANCE Maintenance Log

Facility: _____ Supervisor: _____

Product model number: _____ Serial number: _____

Start date: _____ End date: _____

| Daily Tasks | Week 1-7 | | | | | | | Week 8-14 | | | | | | | Week 15-21 | | | | | | | Week 22-28 | | | | | | | | | |
|-------------|----------|--|--|--|--|--|--|-----------|--|--|--|--|--|--|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|--|--|--|
| Completed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Daily Tasks | Week 29-35 | | | | | | | Week 36-42 | | | | | | | Week 43-49 | | | | | | | Week 50-52 | | | | | | | | | |
|-------------|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|--|--|--|
| Completed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Weekly Tasks | Week 1-7 | | | | | | | Week 8-14 | | | | | | | Week 15-21 | | | | | | | Week 22-28 | | | | | | | | | |
|--------------|----------|--|--|--|--|--|--|-----------|--|--|--|--|--|--|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|--|--|--|
| Completed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Weekly Tasks | Week 29-35 | | | | | | | Week 36-42 | | | | | | | Week 43-49 | | | | | | | Week 50-52 | | | | | | | | | |
|--------------|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|------------|--|--|--|--|--|--|--|--|--|
| Completed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Monthly Tasks | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|---------------|---|---|---|---|---|---|---|---|---|----|----|----|
| Completed | | | | | | | | | | | | |

| Quarterly Tasks | Quarter 1 | Quarter 2 | Quarter 3 | Quarter 4 |
|-----------------|-----------|-----------|-----------|-----------|
| Completed | | | | |

| Yearly Tasks | Year 1 |
|--------------|--------|
| Completed | |

Notes: _____

13. ACCESSORIES

ACCESSORIES Standard

USB PORT

- a. Provides up to 5V, 1A of power for charging
- b. Let you update all required software drivers for the product.

CSAFE PORT

Compatible with CSAFE (Communications Specification for Fitness Equipment) Protocol.

QR code and NFC tag

- a. Without SA WELL+ : Scanning the QR code and tapping the NFC tag will only display the SPORTSART website.
- b. With SA WELL+ : Using our SA WELL+ app, you can scan the QR code or tap the NFC tag on the console to connect with the product.

ACCESSORIES Option

SA WELL+ Member System


1. This is designed specially by SportsArt to assist the users in managing their workout history. Connect your smartphone to the device, using Bluetooth or WIFI, to use the SA WELL+ App. The App is available for download in the App Store and Google Play.
2. Use USB Flash Drive for identification.
3. Help give users more control over their personal data and workout history. Visit www.gosportsart.com for more information about this feature.



| No. | Name | Function |
|-----|-----------------------|---|
| a | USB port | This port is used for optional data transferring. |
| b | Bluetooth/WIFI button | When a smart phone is connected wirelessly to the product, press this button to disconnect. Scan the QR code or tap the NFC tag on the console to connect to the equipment again. |

ACCESSORIES Option (Cont.)

Option : (2) TV rack

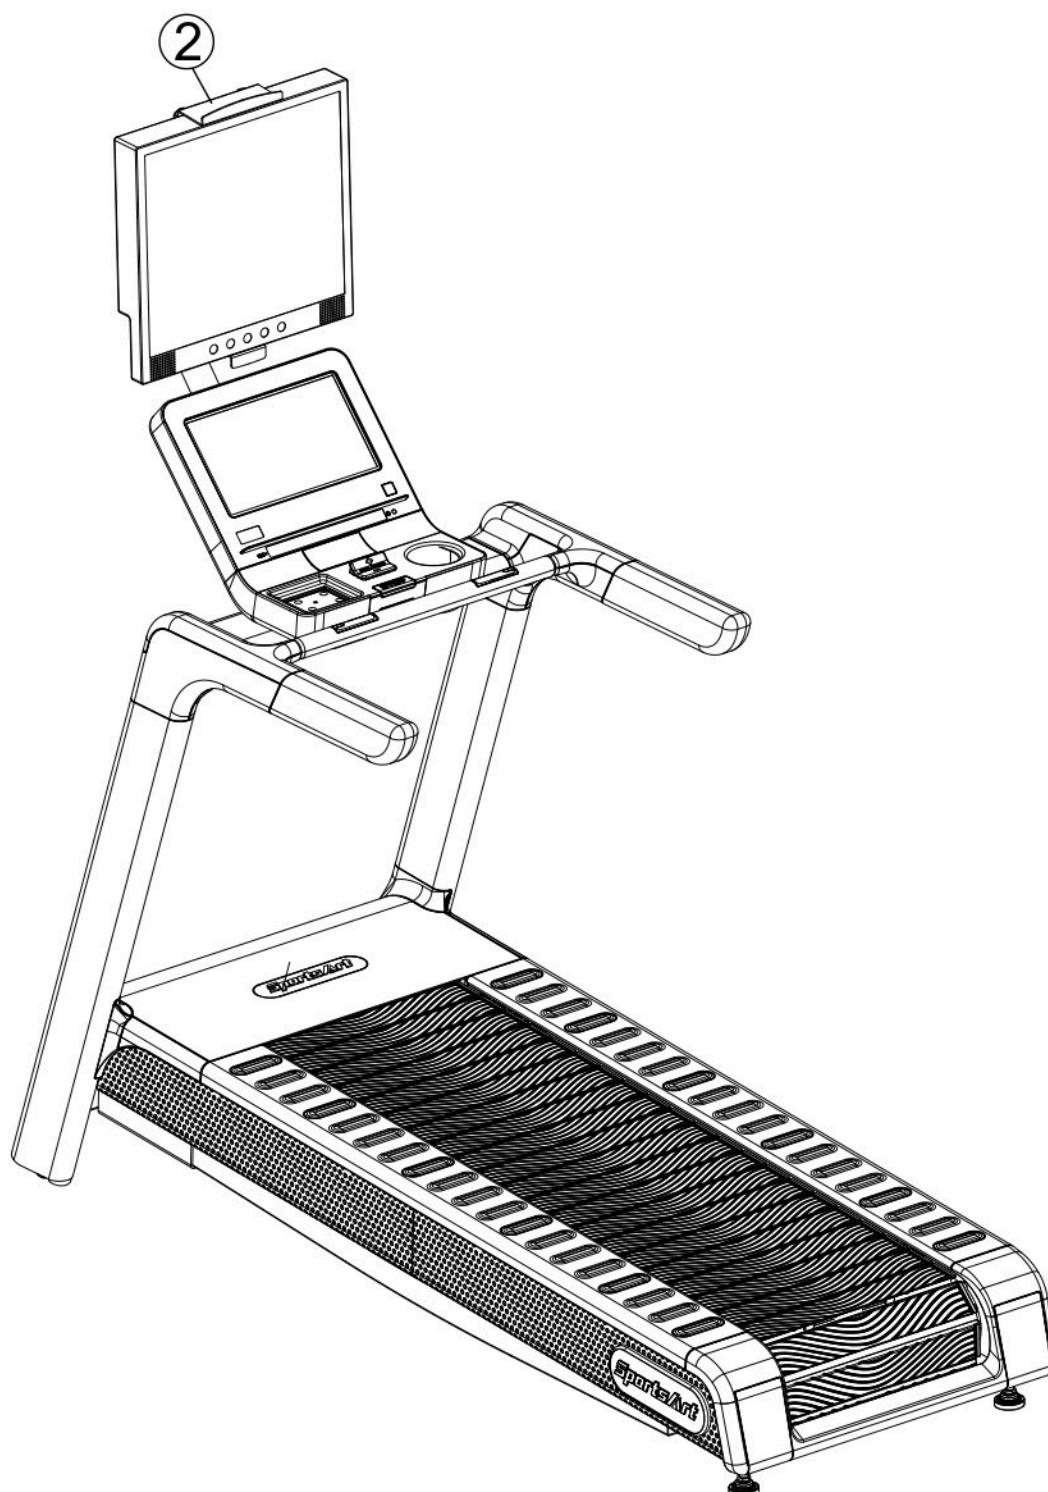


14. APPENDIXES

APPENDIXES Technical Specifications

| | |
|------------------------|--|
| Model | G660 |
| Dimensions | L : 2157 mm (84.9") W : 841 mm (33.1") H : 1572 mm (69.0") |
| Overall Weight | 214 kg (472 lbs) |
| Maximum User Weight | 45 - 150 kg (100 - 330 lbs) |
| Speed Range | 2.0 - 12.0 MPH or 3.0 - 20.0 KPH (Weight: 45KG / 100LB and above) |
| Resistance | 1 - 6 |
| Incline Range | Fixed 7% |
| Power Requirement | 100 - 120 V , 60Hz , 2.2A (USA) 200 - 240 V , 50Hz , 1.1A (EUROPE) |
| Circuit Breaker | 125/250Vac , 3A |
| Battery Specifications | Storage battery, 12V, 4Ah |

APPENDIXES Wiring Diagram

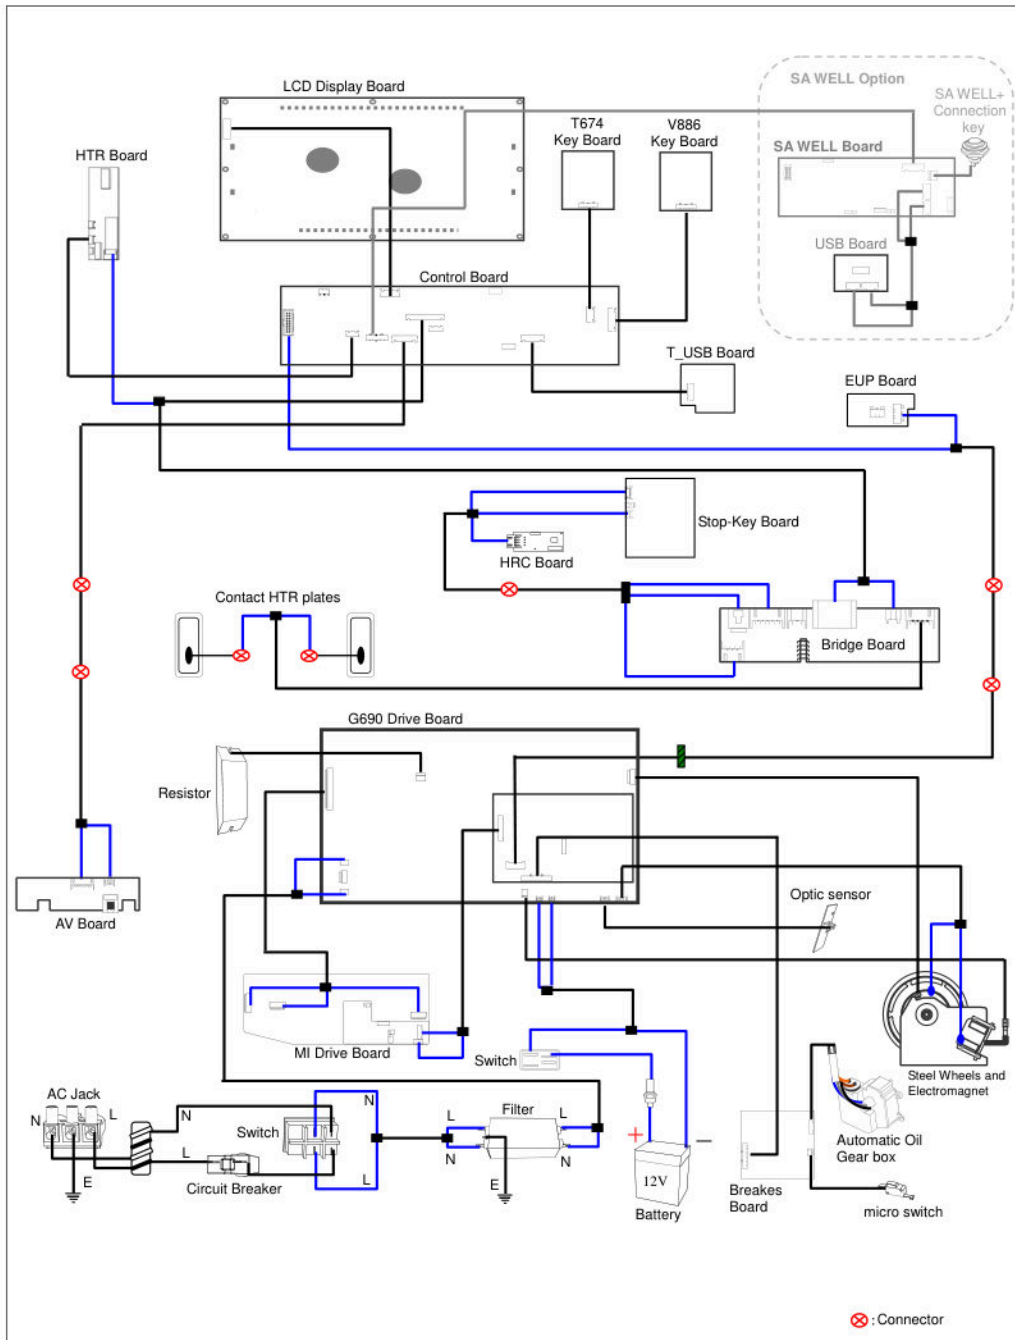

APPENDIXES Exploded Diagram

Note: We reserve the right to revise the following diagrams at any time without notice to notify any person of such revisions. Please visit our official website www.gosportsart.com for the latest version.

Your Authorized Distributor